



ΟΔΗΓΙΕΣ ΣΥΝΑΡΜΟΛΟΓΗΣΗΣ
ASSEMBLY INSTRUCTIONS

MED
LIGHT

www.mediterraneanlights.com

ROME

PP						
L1	○	○	○	○	○	○L1
		A		A		
L2	○		○		○	○L2
L3	○		○		○	○L3
L4	○		○		○	○L4
L5	○		○		○	○L5

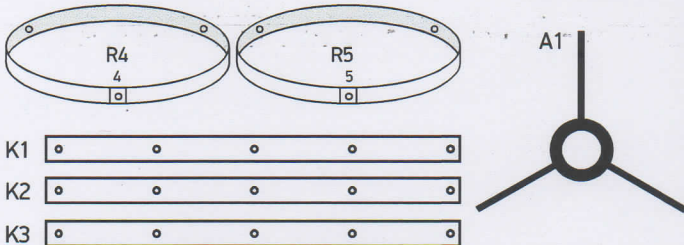

GR Βάψτε την μεταλλική βίδα στις θέσεις L1(από μέσα προς τα έξω) και στην στεφάνη R1(τρύπα 1). Βάψτε τις άλλες βίδες(όχι στις θέσεις A)

Γυρίστε το φωτιστικό ανάποδα, και τοποθετήστε την στεφάνη R2 (τρύπα 2) στην θέση L2 με τον ίδιο τρόπο. Ακολουθήστε την ίδια διαδικασία για τις υπόλοιπες στεφάνες.

Ξεκινώντας από την θέση L1 βάλτε μεταλλικό σωληνάκι, εφαρμόστε το K1 και βιδώστε με μεταλλική μπίλια. Βιδώστε το K1 με τον ίδιο τρόπο διαδοχικά και στην 2η 3η 4η 5η τρύπα του PP.

Εφαρμόστε την ίδια διαδικασία και για τα K2-K3.

Τοποθετήστε το A1 στις τρύπες A.

EN Put the metal screw in positions L1 (from inside out) and the round R1 (hole 1). Put the other screws (not in the A holes)

Turn the lamp upside down, and place the round R2 (hole 2) to the position L2 in the same way. Follow the same procedure for the other rounds.

Starting from the position L1 put a metal tube, apply the K1 and fasten with a metal ball. Screw K1 in the same way and sequentially in 2nd 3rd 4th 5th hole of the PP.

Apply the same procedure for the K2-K3.

Place A1 in the holes A.

