

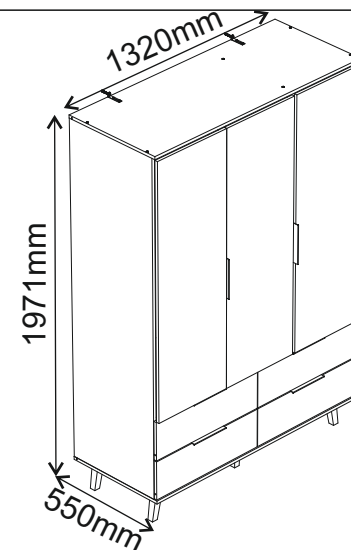
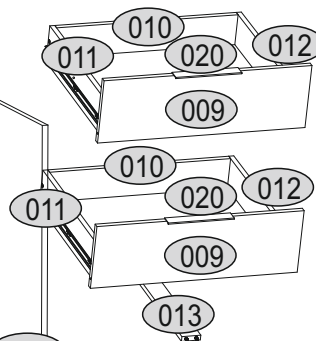
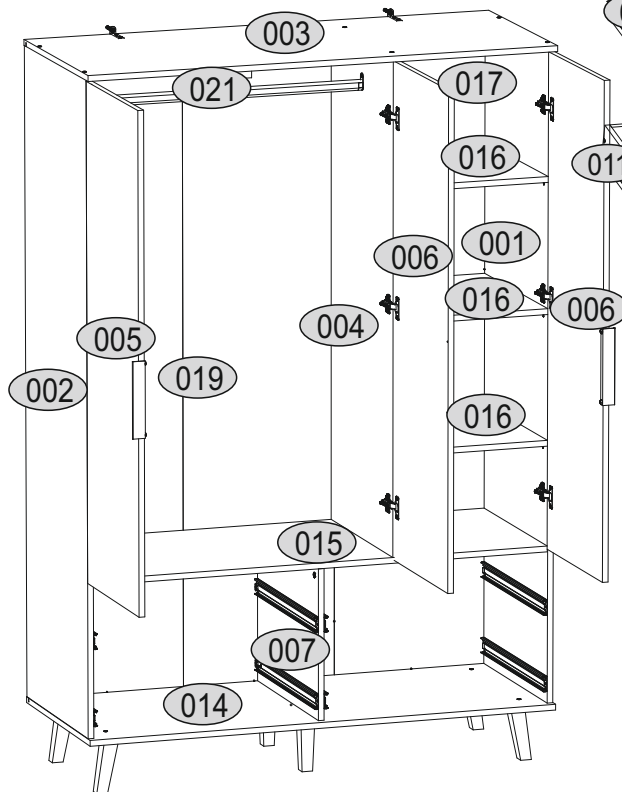
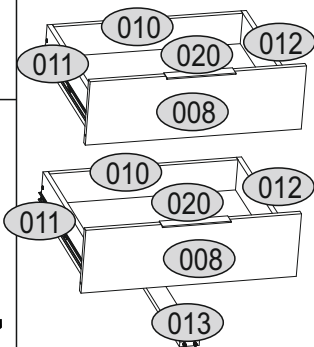



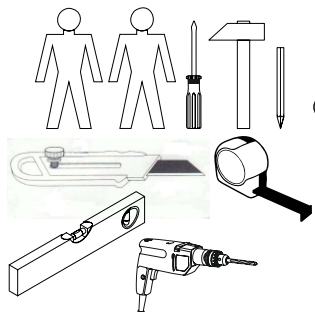


Installation manual

WARDROBE 3D4S

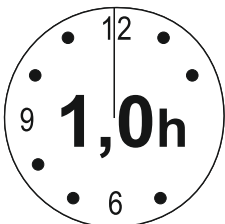


Code	Dimensions				Package
001	1789	530	16	1	4/4
002	1789	530	16	1	4/4
003	1320	550	16	1	2/4
004	1356	507	16	1	1/2
005	1361	435	16	1	3/4
006	1361	435	16	2	3/4
007	417	507	16	1	1/2
008	656	206	16	2	2/4
009	656	206	16	2	2/4
010	578	120	16	4	1/2
011	500	120	16	4	2/4
012	500	120	16	4	2/4
013	484	60	16	4	1/2
014	1320	550	16	1	2/4
015	1286	507	16	1	3/4
016	424	506	16	3	1/2
017	1807	441	3	1	4/4
018	1807	432	3	1	4/4
019	1807	432	3	1	4/4
020	502	596	3	4	1/2
021	841			1	2/4
accessories				2	1/4 2/4

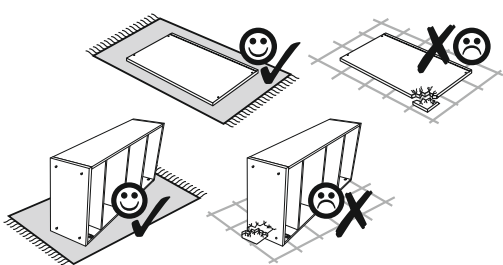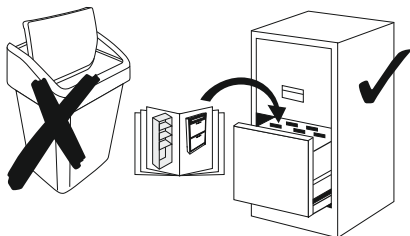


Accessories:


<p>x9 a144</p> 	<p>x9 b119</p> 	<p>x6 c43</p> 	<p>x12 d18</p> 
<p>x28 e1</p> <p>Ø7x50mm</p> 	<p>x28 s1</p> 	<p>x72 f1</p> <p>Ø8x30mm</p> 	<p>x2 f3</p> 
<p>x10 l2</p> 	<p>x4 lb-500</p> 	<p>x2 n14</p> 	<p>x1 n25</p> 
<p>x3 n260.01</p> 	<p>x2 n301</p> 	<p>x2 p17</p> 	<p>x87 p25</p> 
<p>x14 p38</p> 	<p>x14 r1</p> 	<p>x14 r16</p> 	<p>x14 s2</p> 
<p>x1 z1</p> 	<p>x4 k88</p> 	<p>x2 k87</p> 	



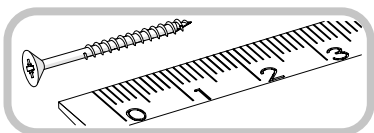


1

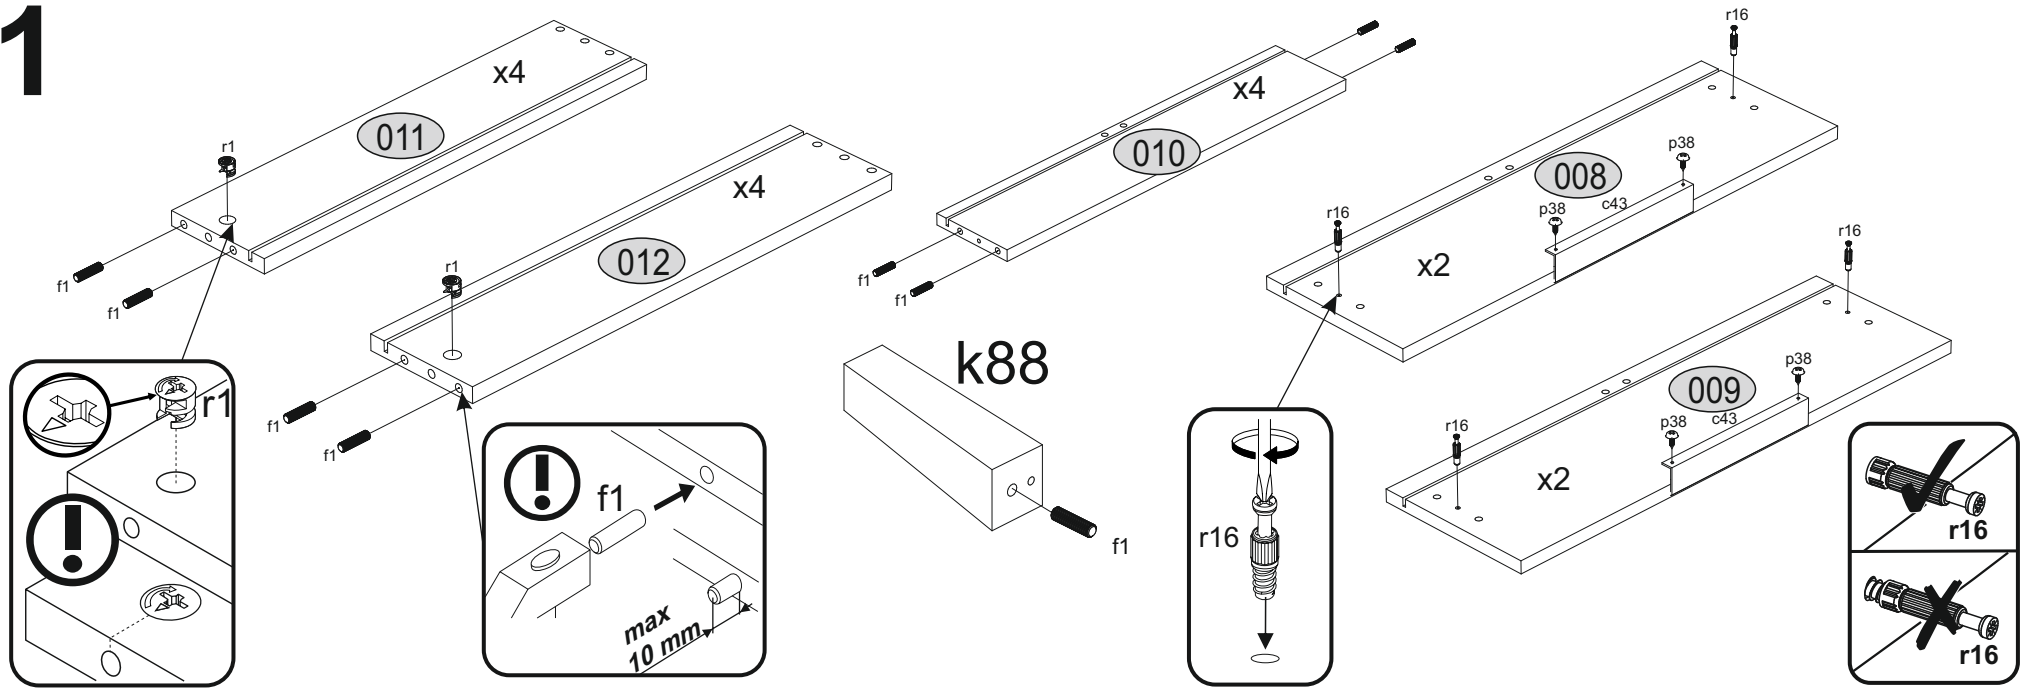


2

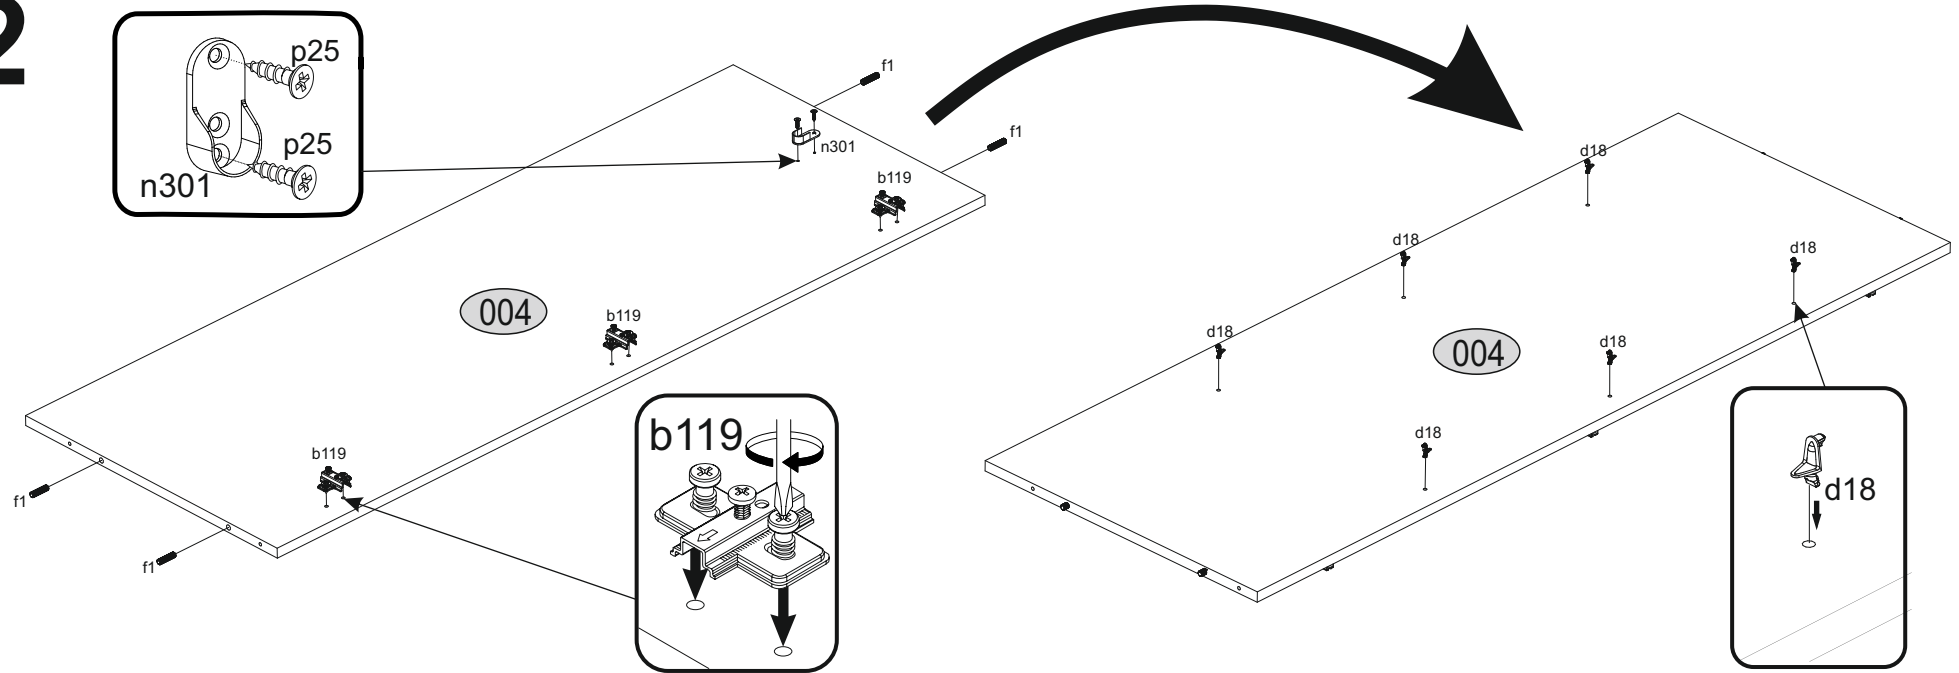


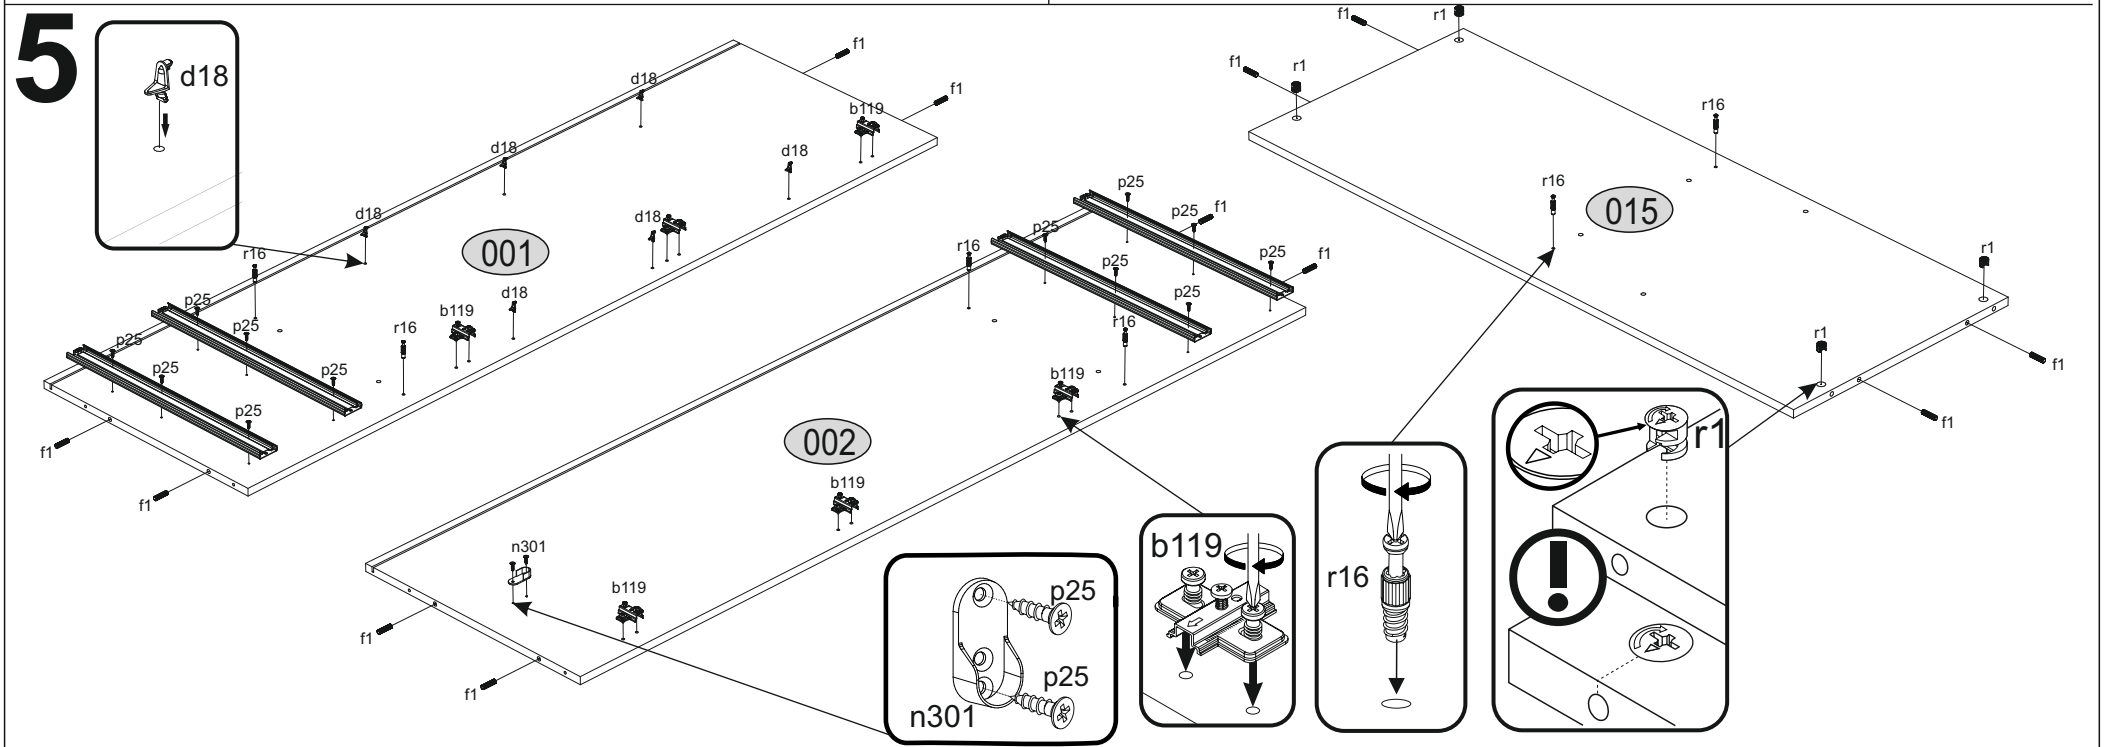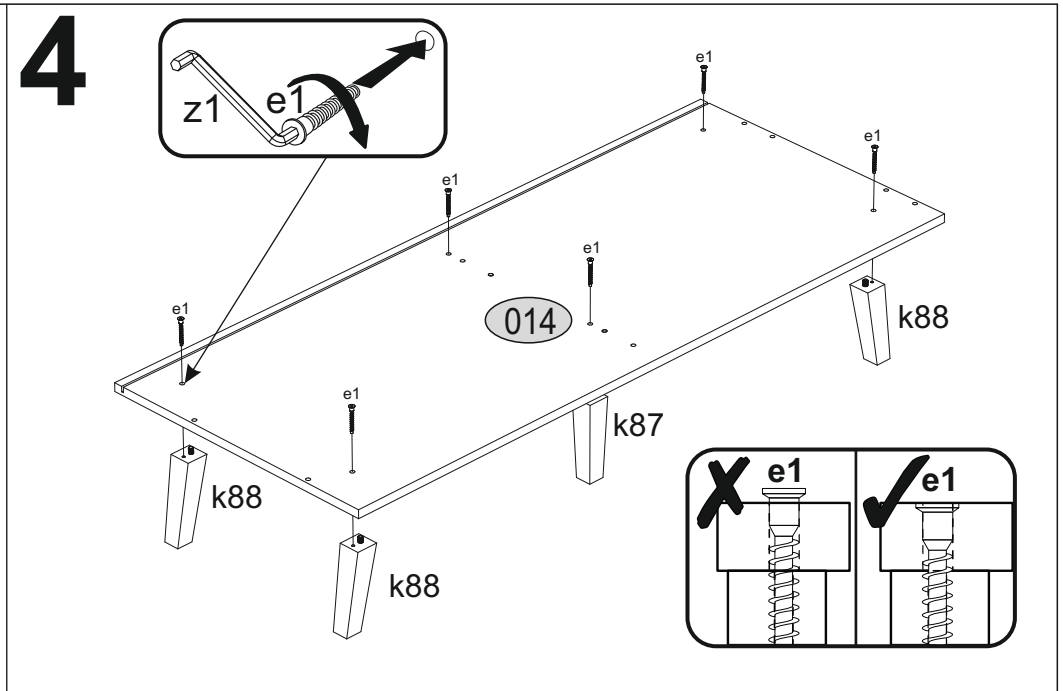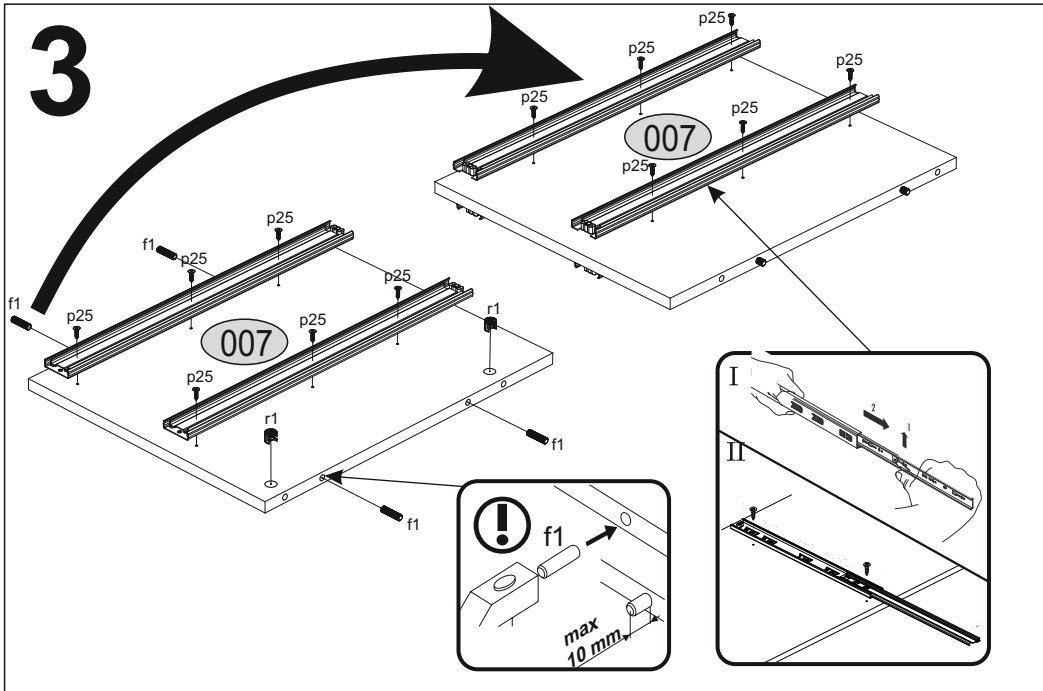


6

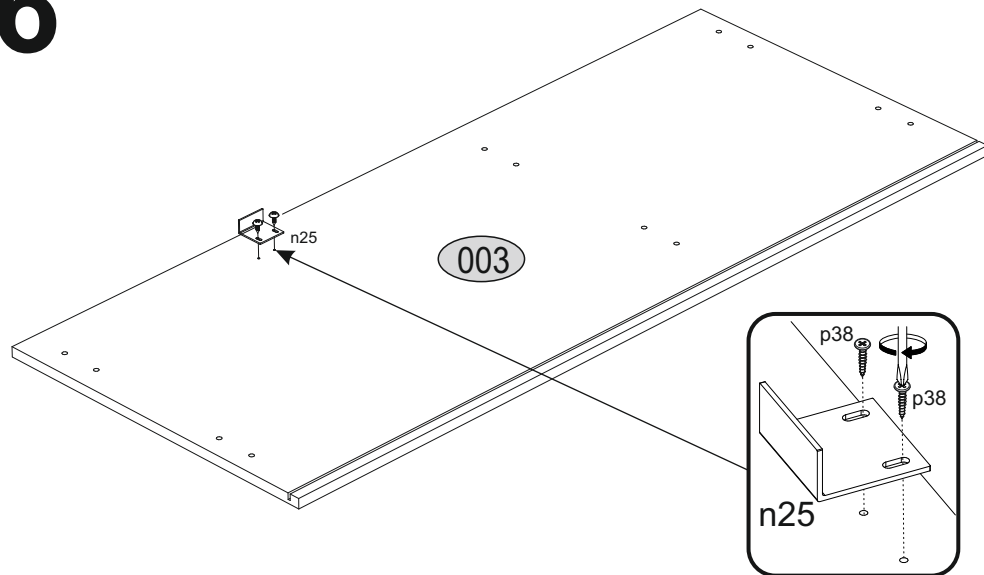


7

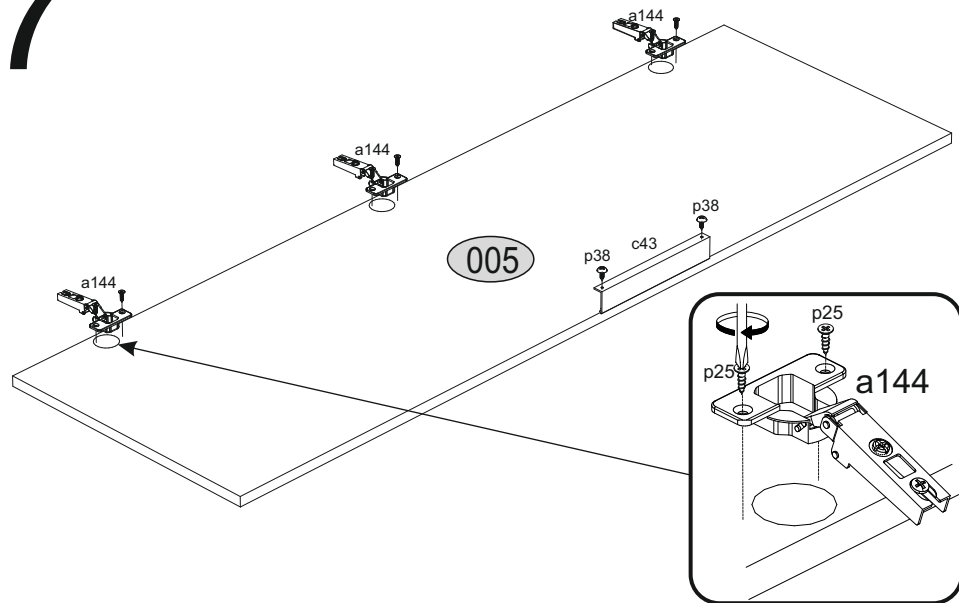


8

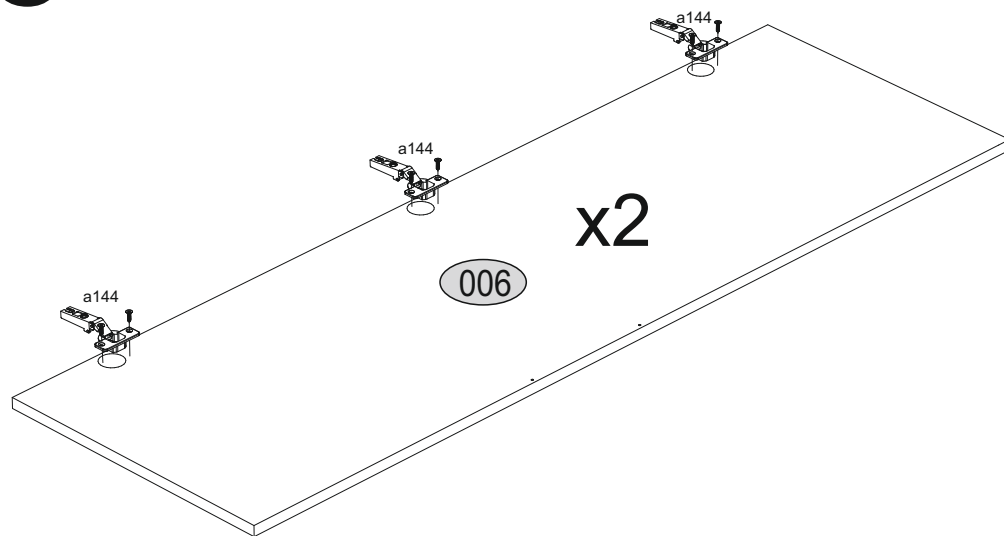


9

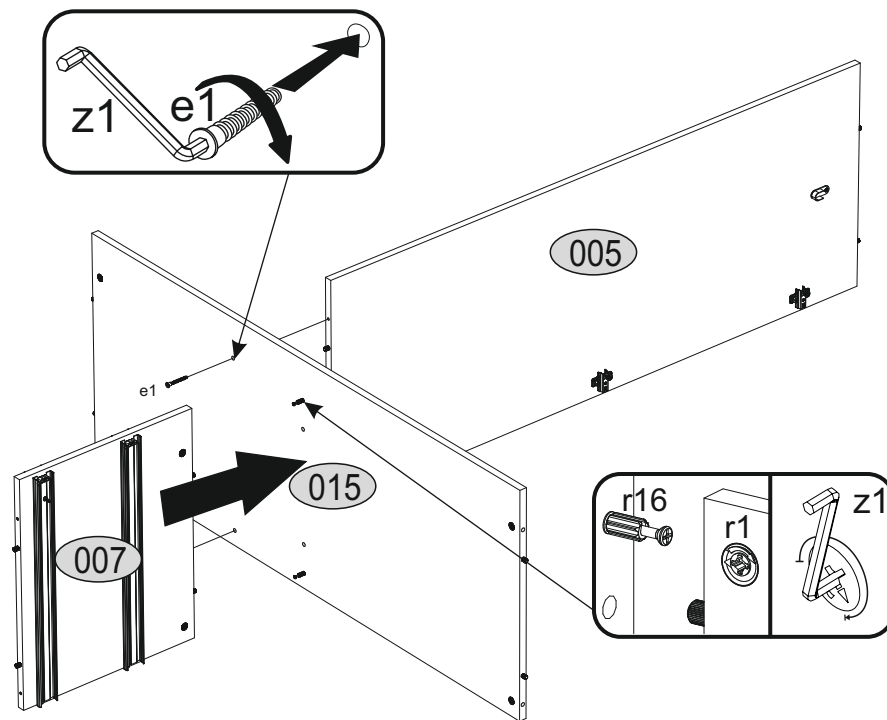


10

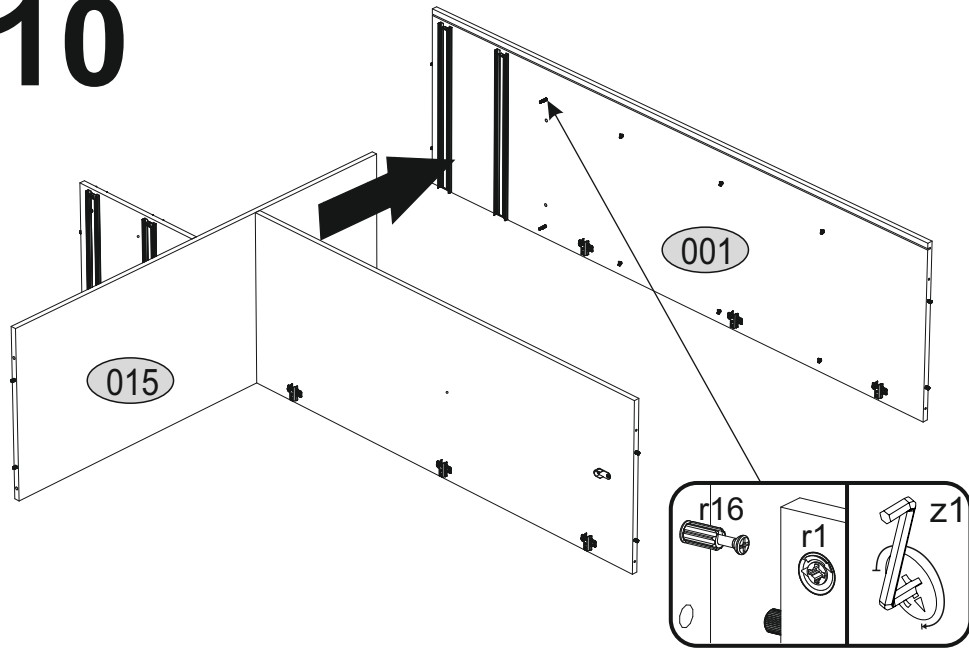


11

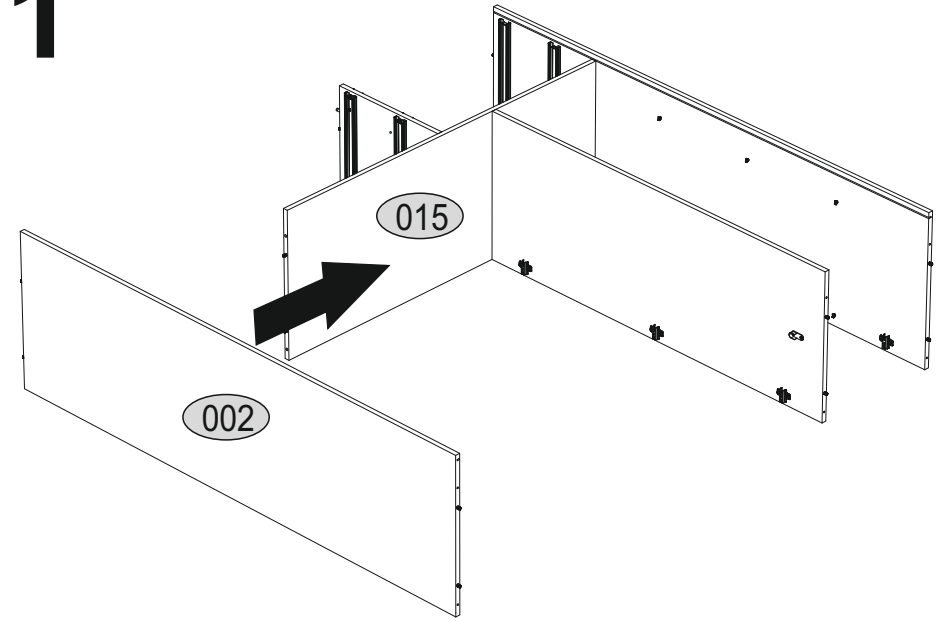


12

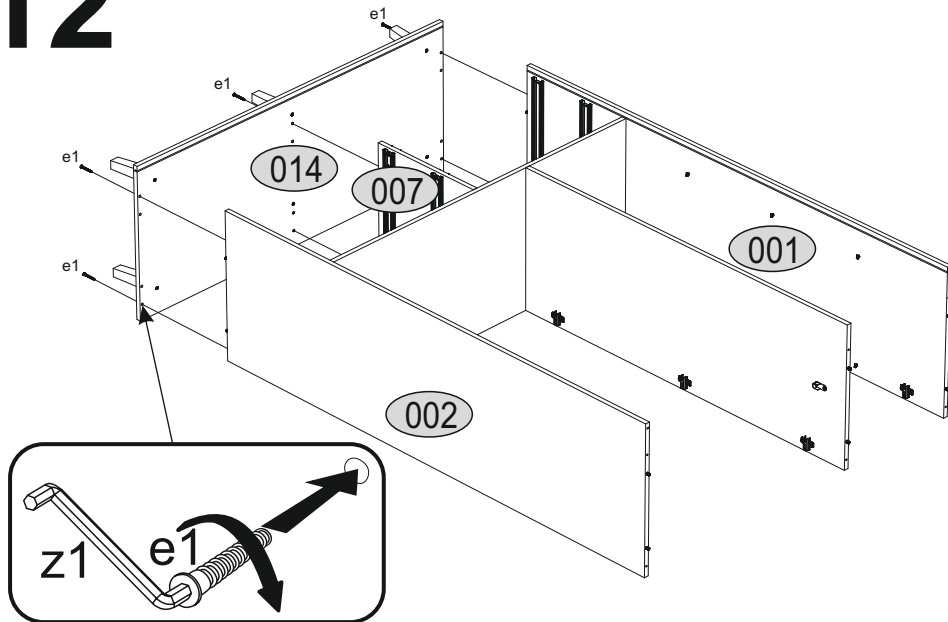


13

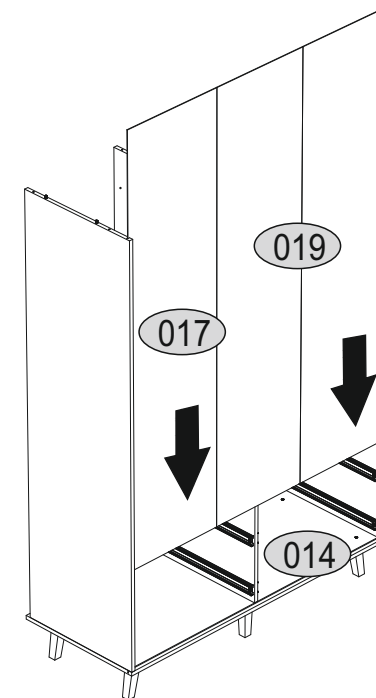


14

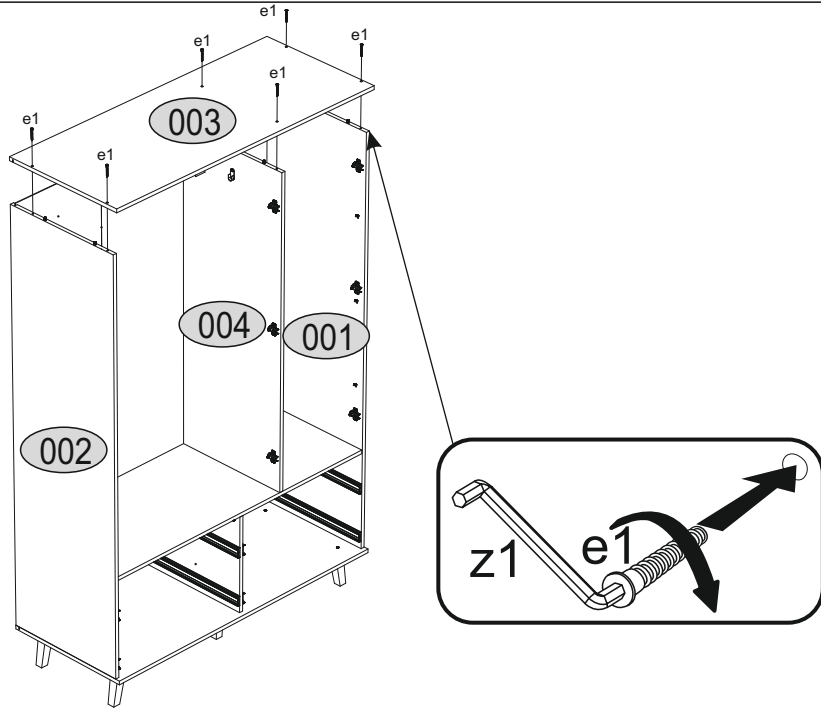


15

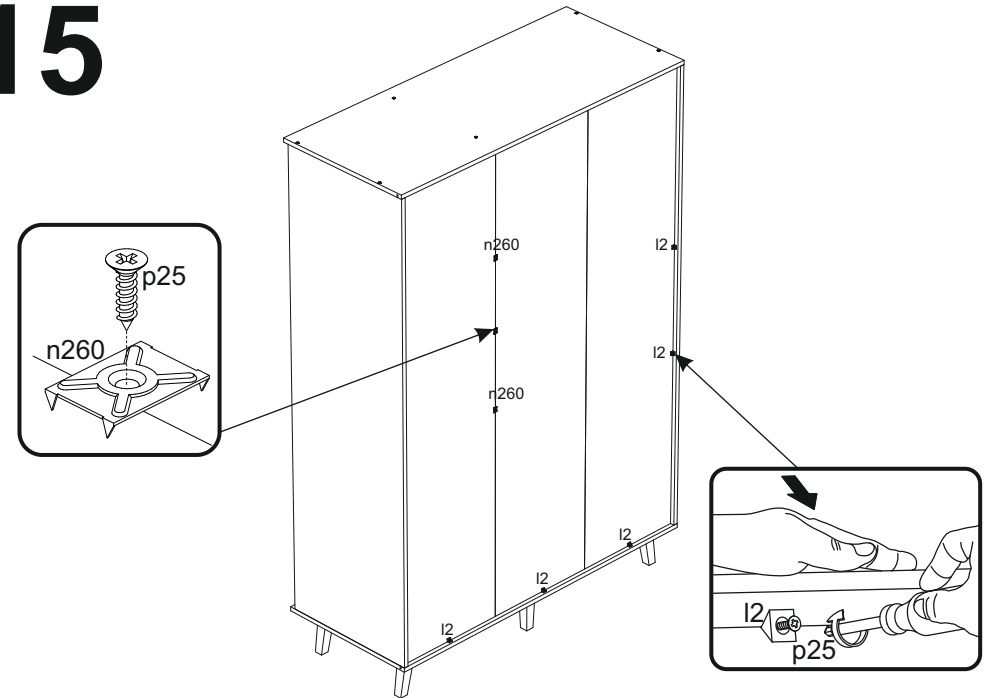


16

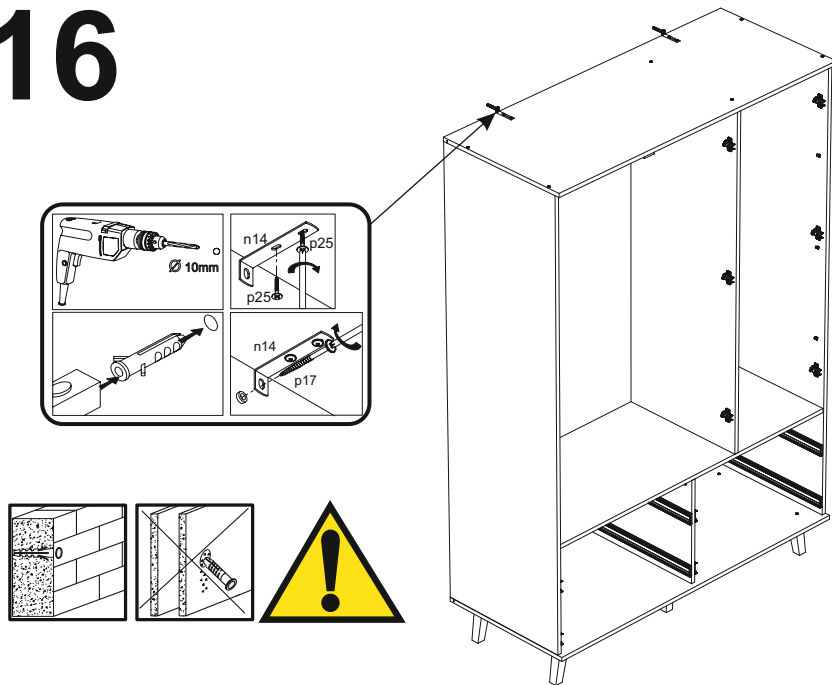


17

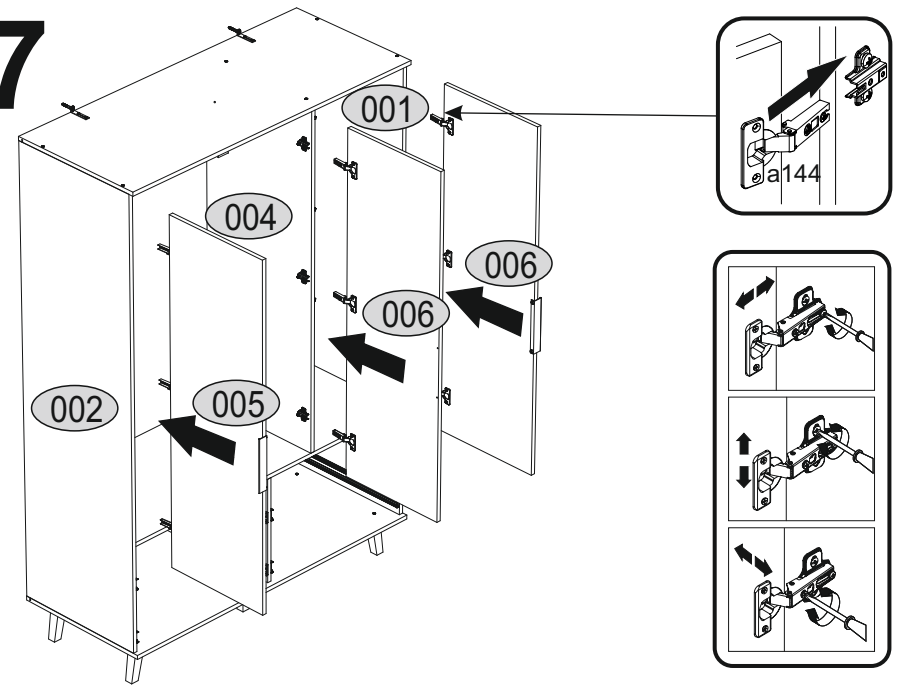


18

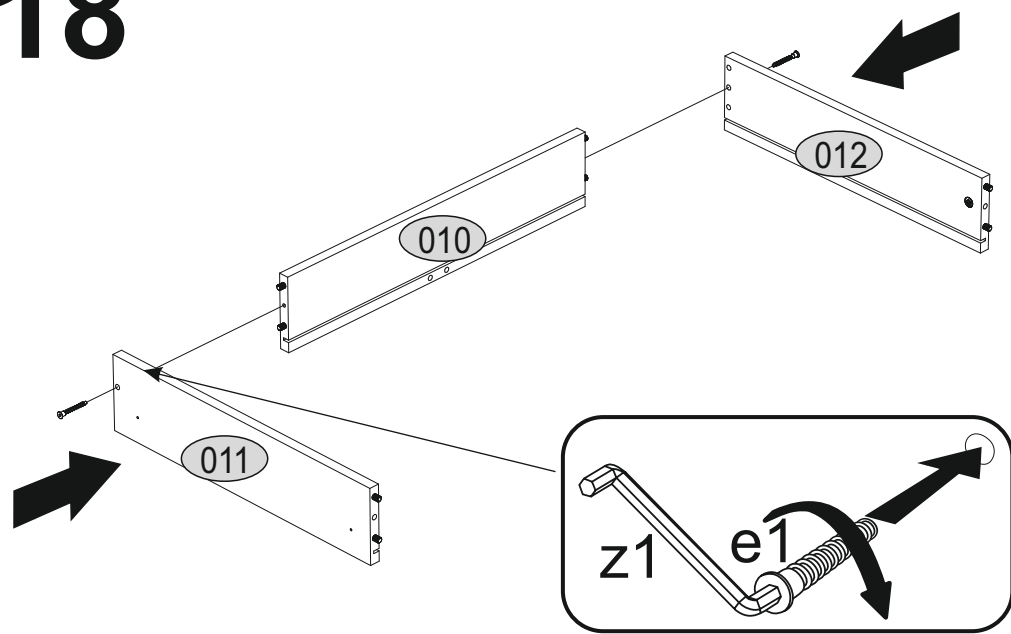


19

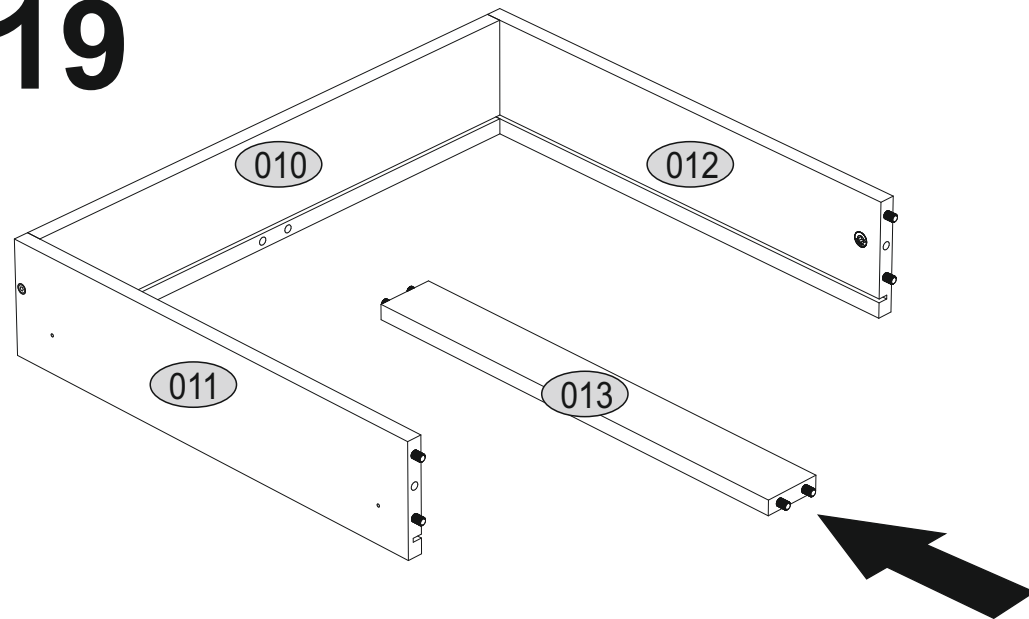



20

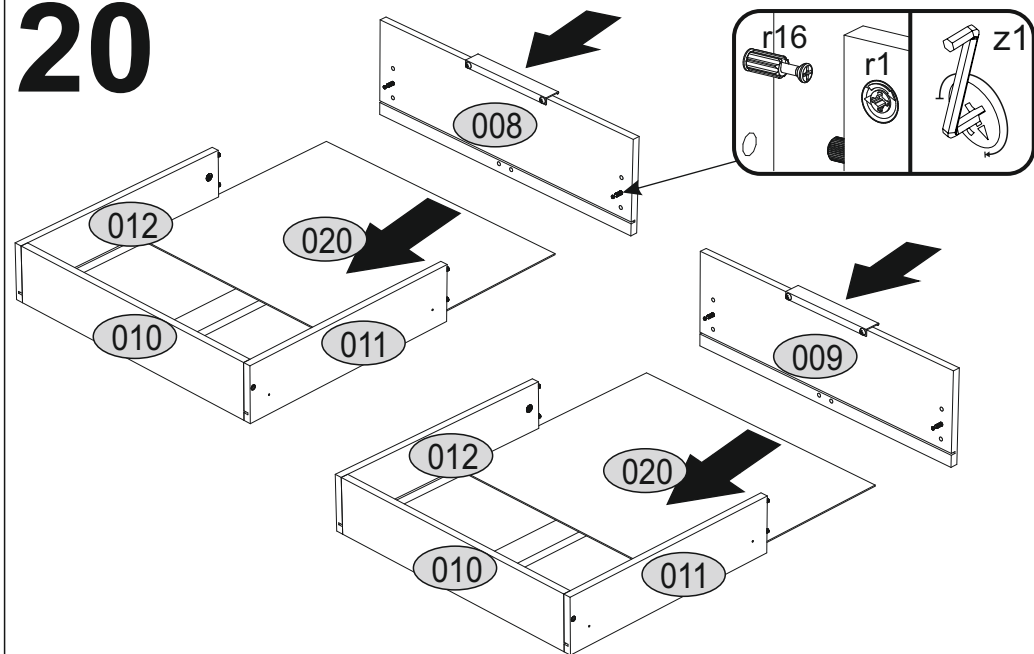

21

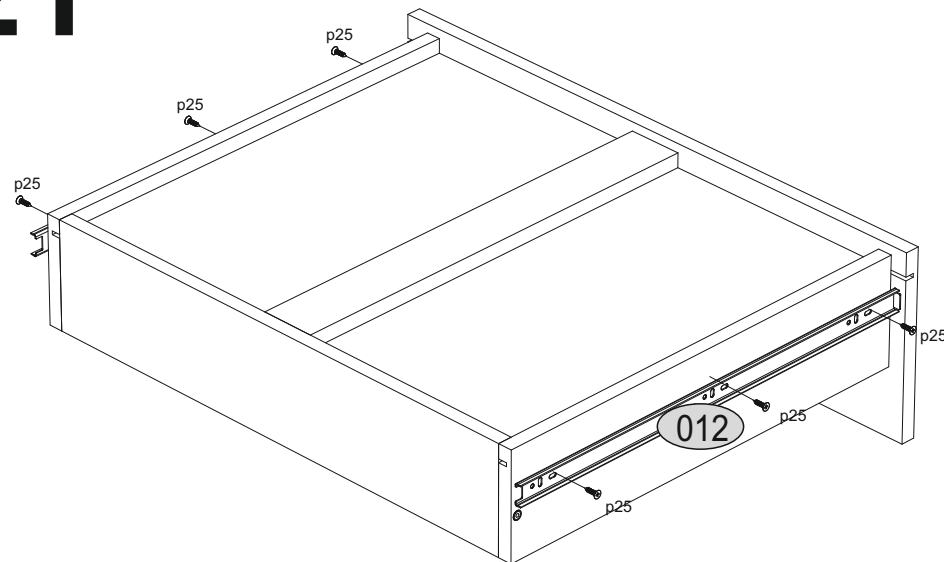

22

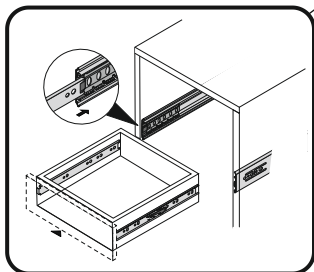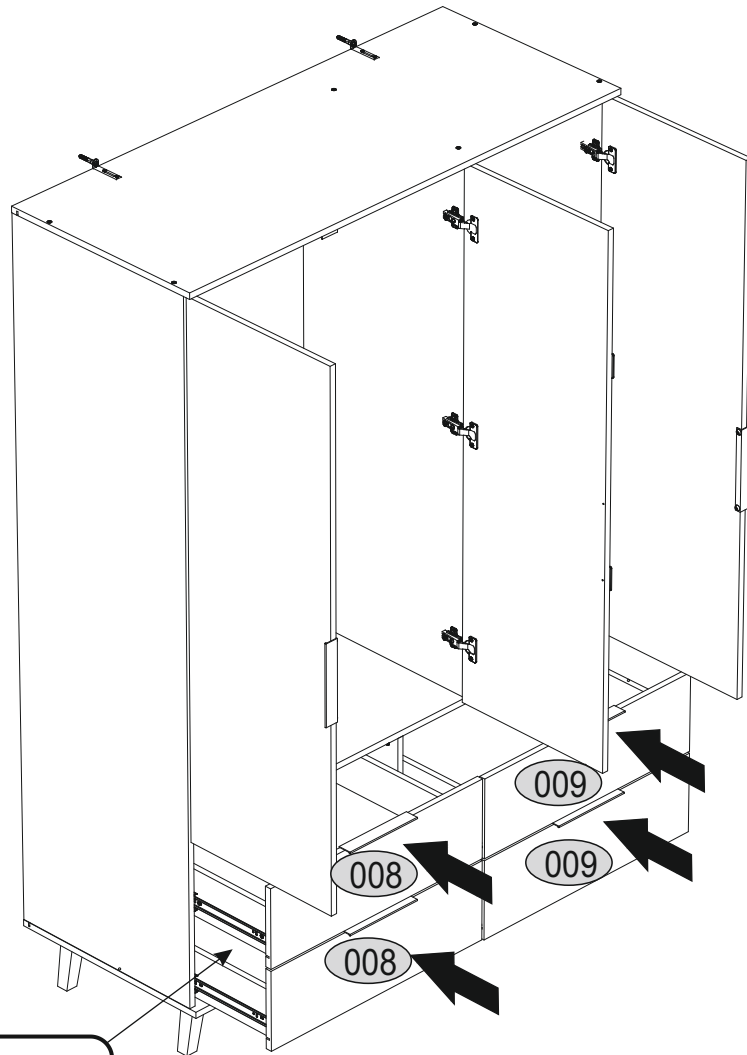

23

