

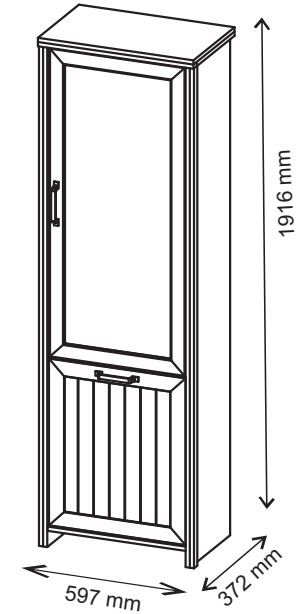
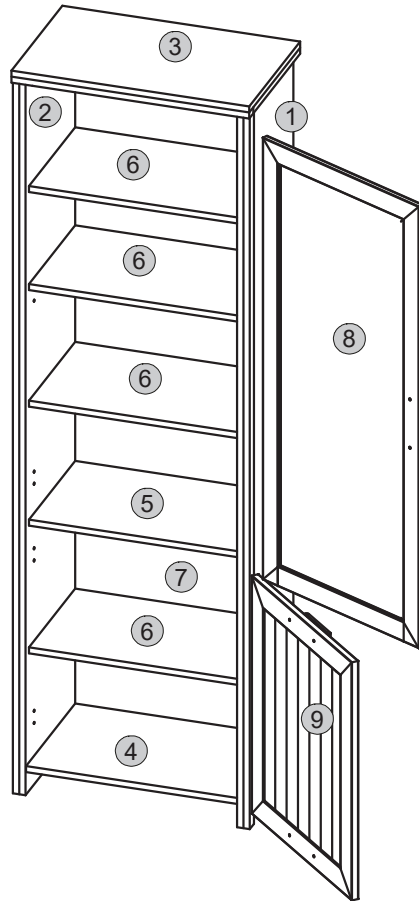



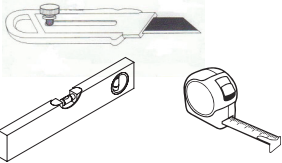


# Instalation manual

## Βιτρίνα Verne 1D

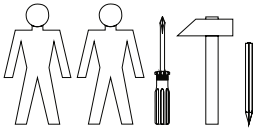


Element symbol	Dimensions			Code	Package
1	1884	365		1 WIT_1W1D_vagonka.001	1/3
2	1884	365		1 WIT_1W1D_vagonka.002	1/3
3	598	372		1 WIT_1W1D_vagonka.003	1/3
4	532	359		1 WIT_1W1D_vagonka.004	1/3
5	532	337		1 WIT_1W1D_vagonka.005	1/3
6	532	337		4 WIT_1W1D_vagonka.006	1/3
7	1849	550		1 WIT_1W1D_vagonka.009	1/3
8	1063	421		1 WIT_1W1D_vagonka.010	3/3
9	630	527		1 WIT_1W1D_vagonka.016	2/3

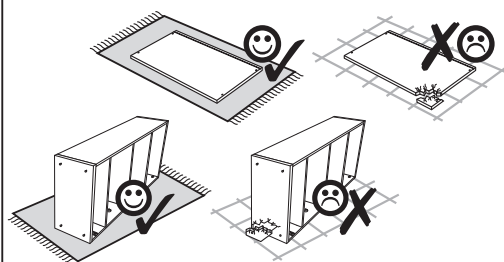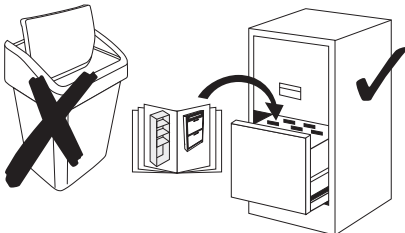


4x k1	1x φ5x60 mm p17	1x n14	1x φ10 mm f3	12x ø5 s4
2x 2Z285	4x M4x25 mm j8	16x φ5x17 mm d1	12x φ15x12mm #16 r1	12x r16
1x z1	12x φ8x30 mm f1	10x φ3,5x16 mm p25	40x l1	5x a143
				5x b119




# 1

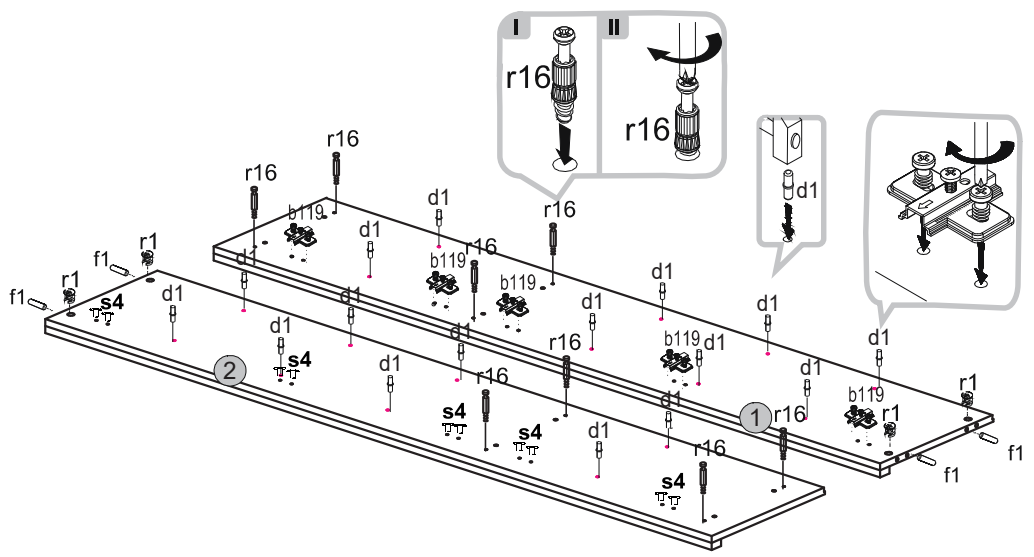


# 3

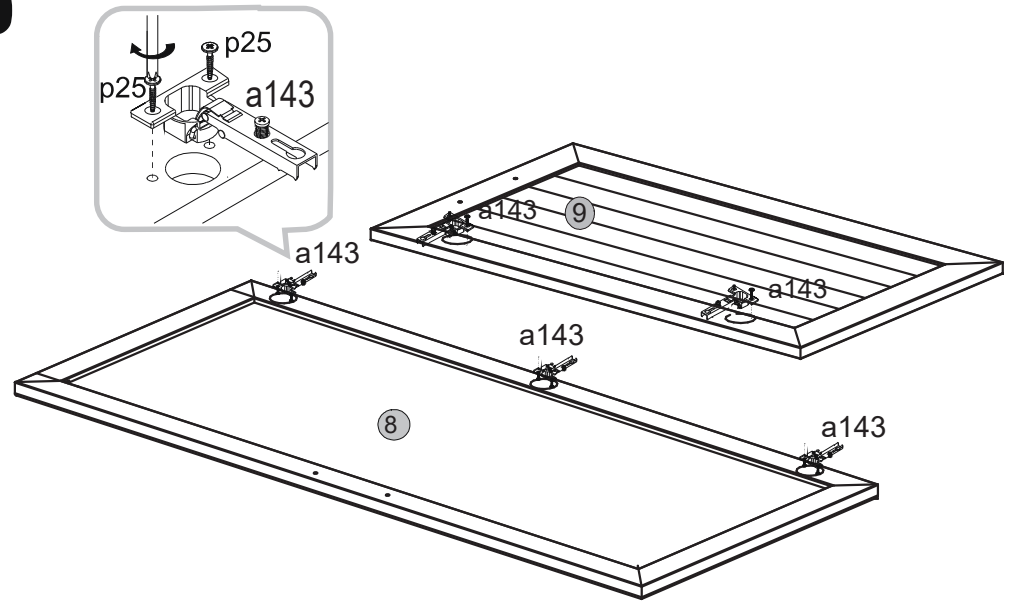


# 2

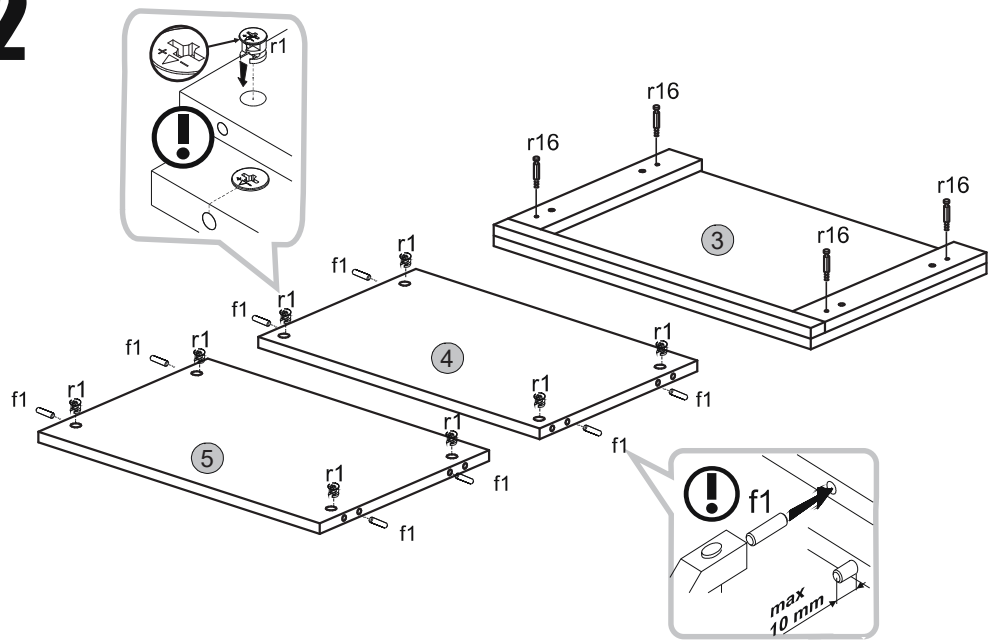


# 4

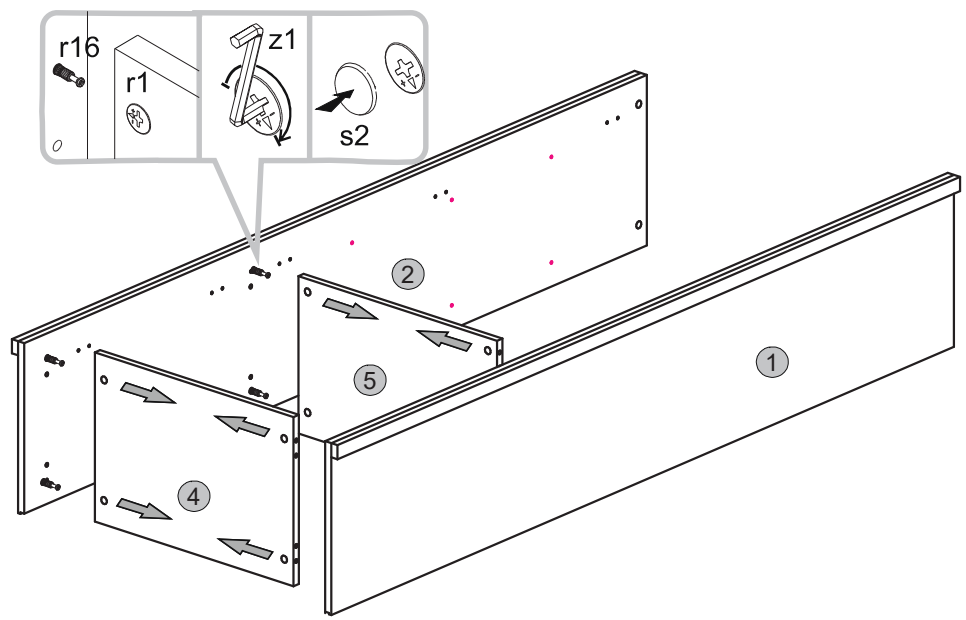

# 5

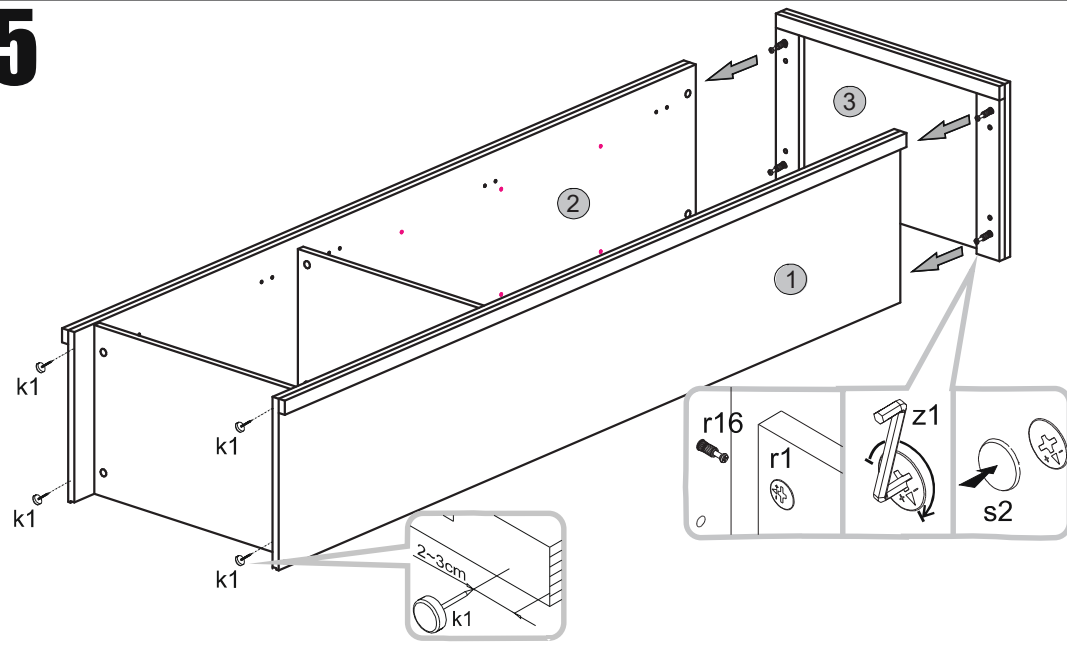

# 7

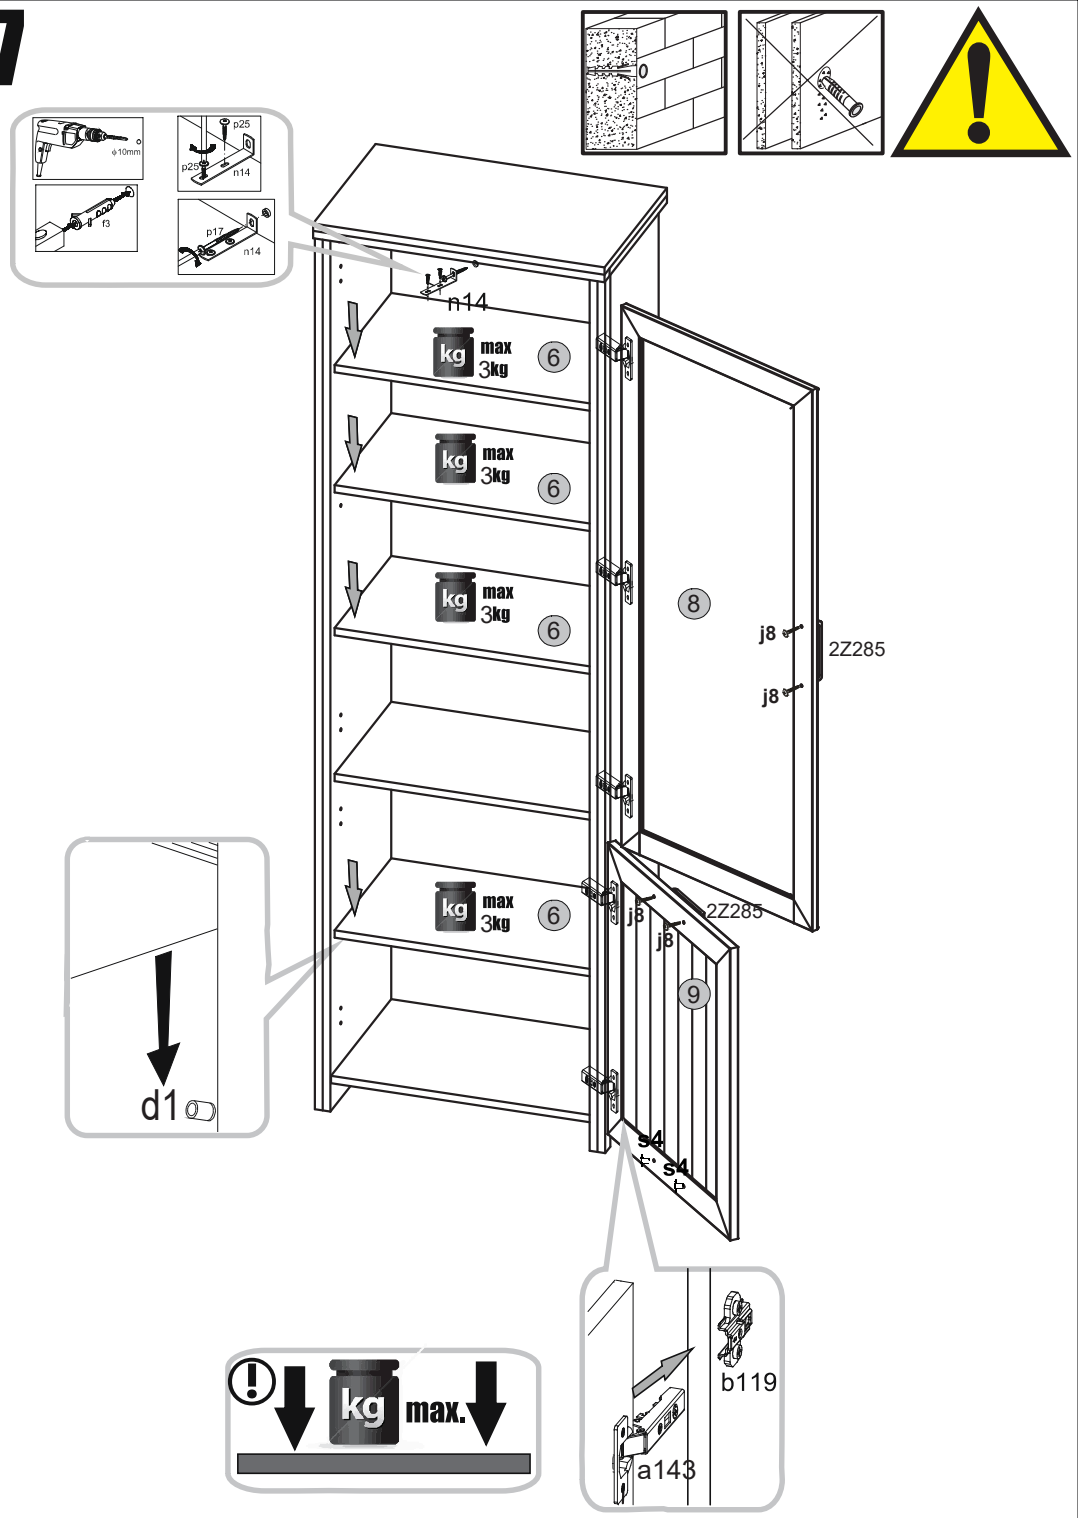

# 6

