








Οδηγίες συναρμολόγησης



KARIN 90 ΚΡΕΒΑΤΙ 206.5*94.5*71 (90*200) με ΠΑΤΩΜΑ

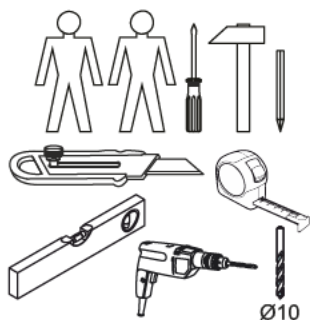

Ø10

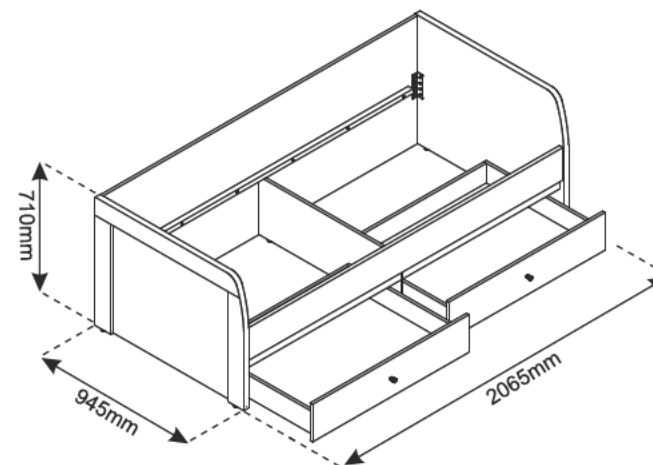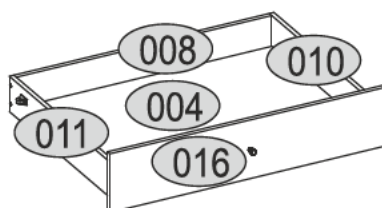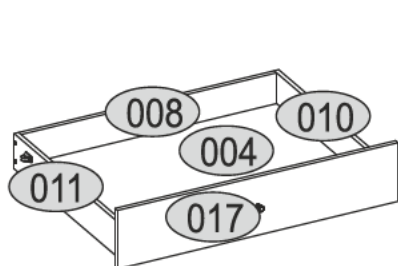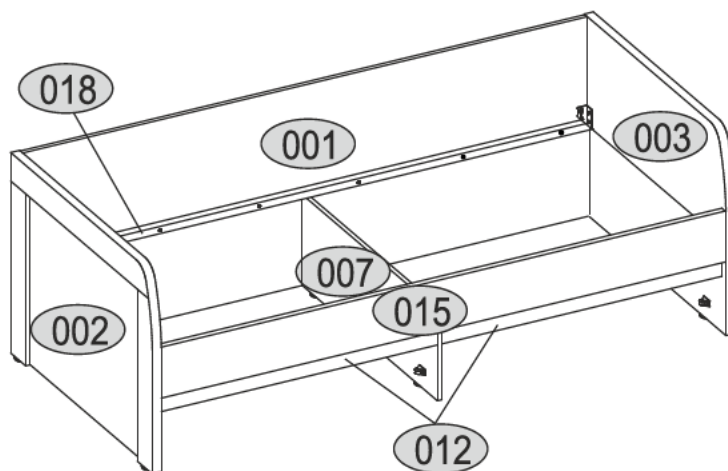


001	2000	702	16	1	1/3
002	944	704	16/32	1	1/3
003	944	704	16/32	1	1/3
004	905	700	16	2	2/3
007	900	314	16	1	2/3
008	905	124	16	2	2/3
010	716	124	16	2	1/3
011	716	124	16	2	1/3
012	70	992	16	2	3/3
015	2000	179	22	1	3/3
016	994	206	16	1	3/3
017	994	206	16	1	3/3
018	1880	30	27	2	3/3
				1	1/3

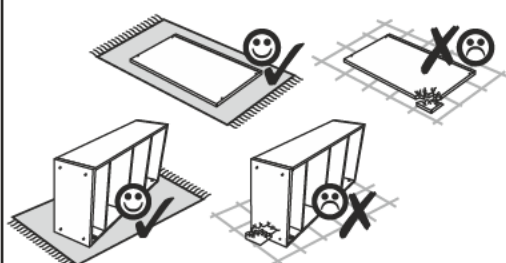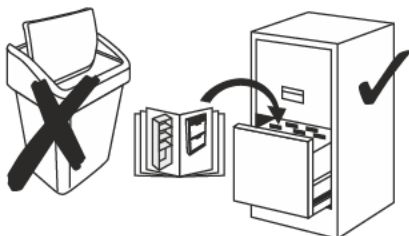

4x r3 	32x e2 	48x p25 Ø3.5x16 	12x p21 Ø4.0x30 
16x k34 	4x n63 	2x p9 Ø4x30 	12x p10 Ø4x40 
8x s2 	2x c411.058 	2x f6 	1x z1 
8x k1 	4x n221 		


1

r1	f1	k34	p25	f6	k1
x15	x27	x14	x28	x2	x2

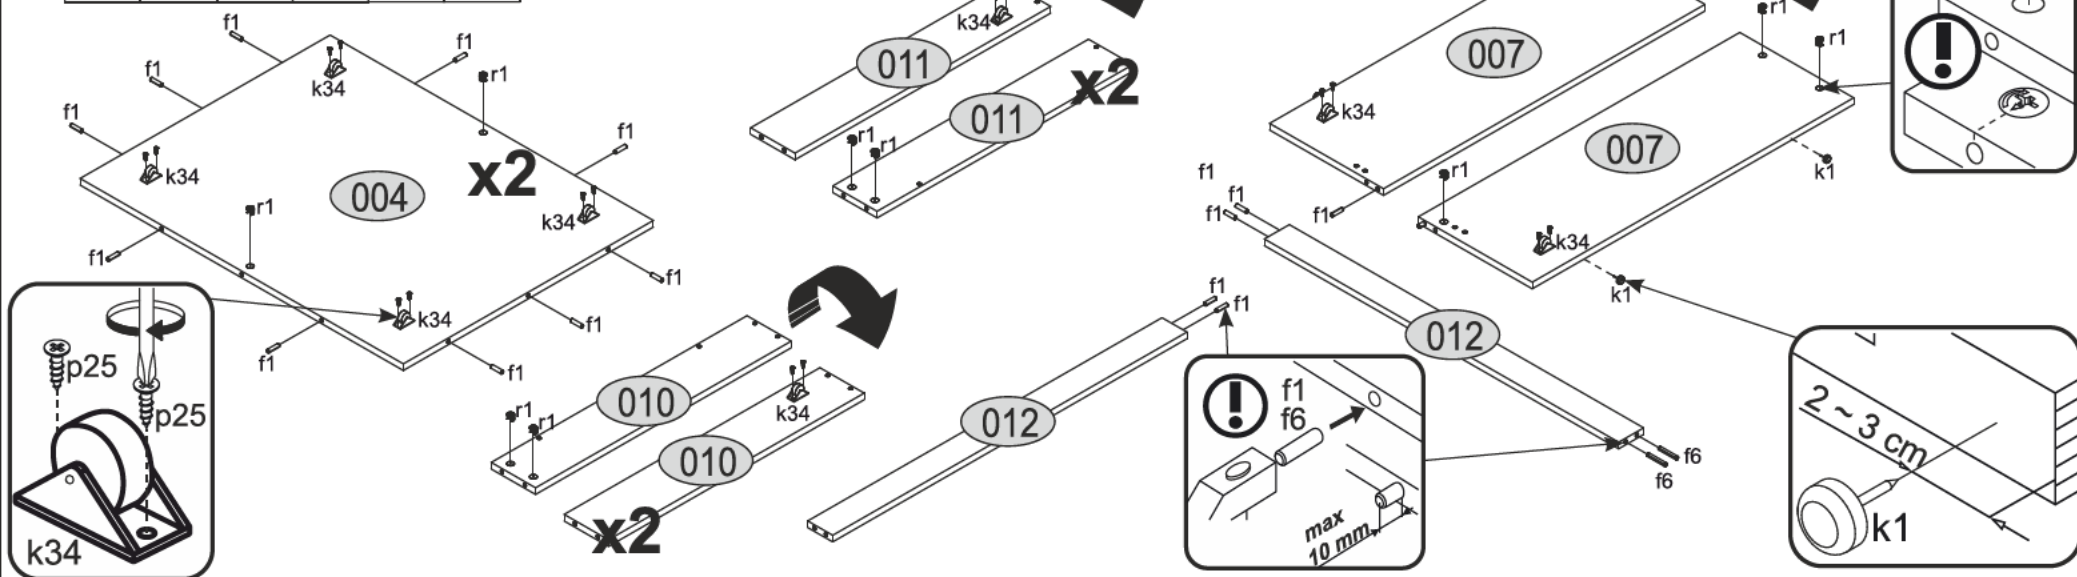


2

r1	f1	r16	c411.058	p9	r3	k1
x6	x12	x15	x2	x2	x4	x2

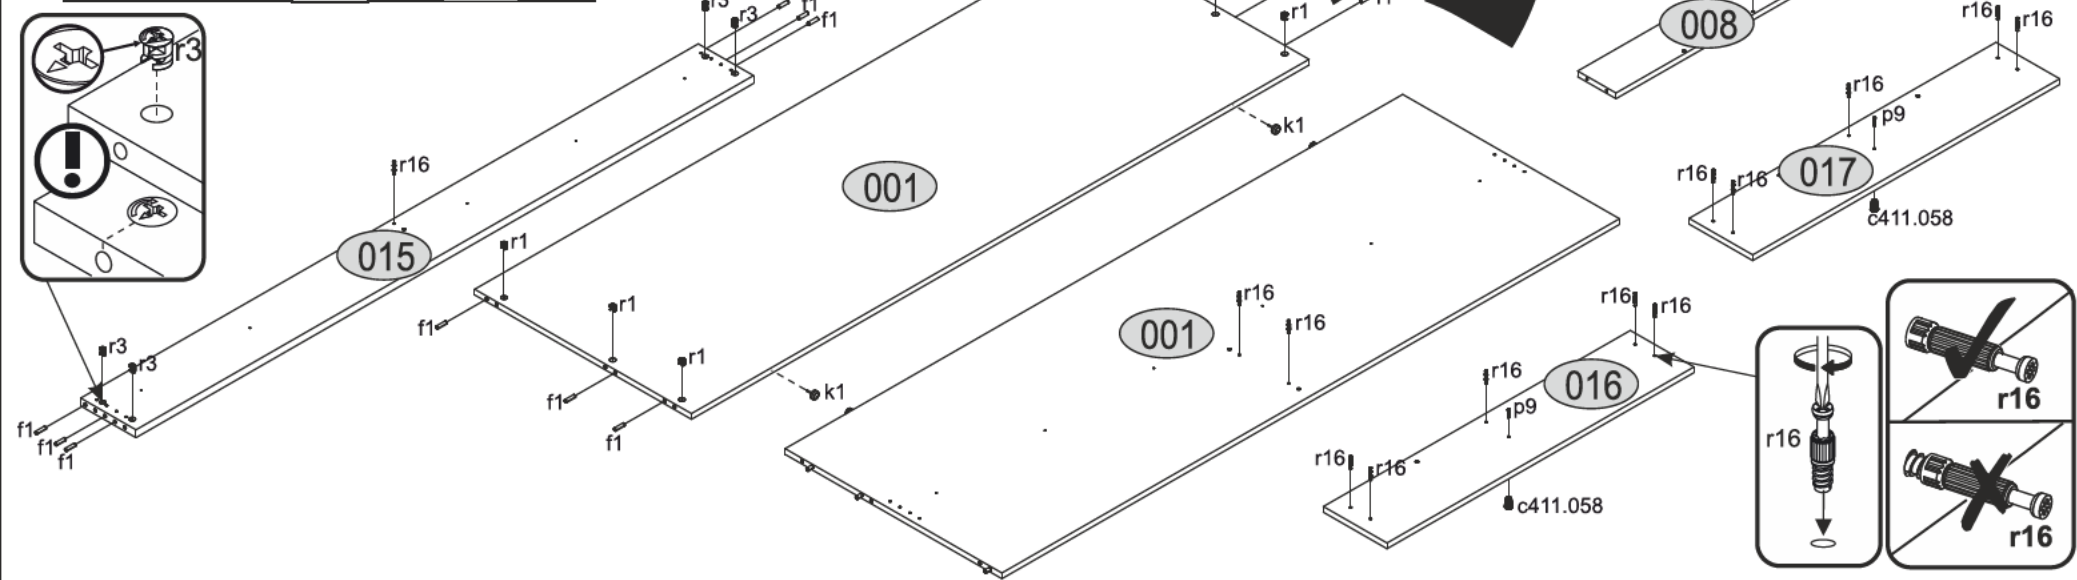


3


k34	p25	r16	k1
x2	x4	x10	x4

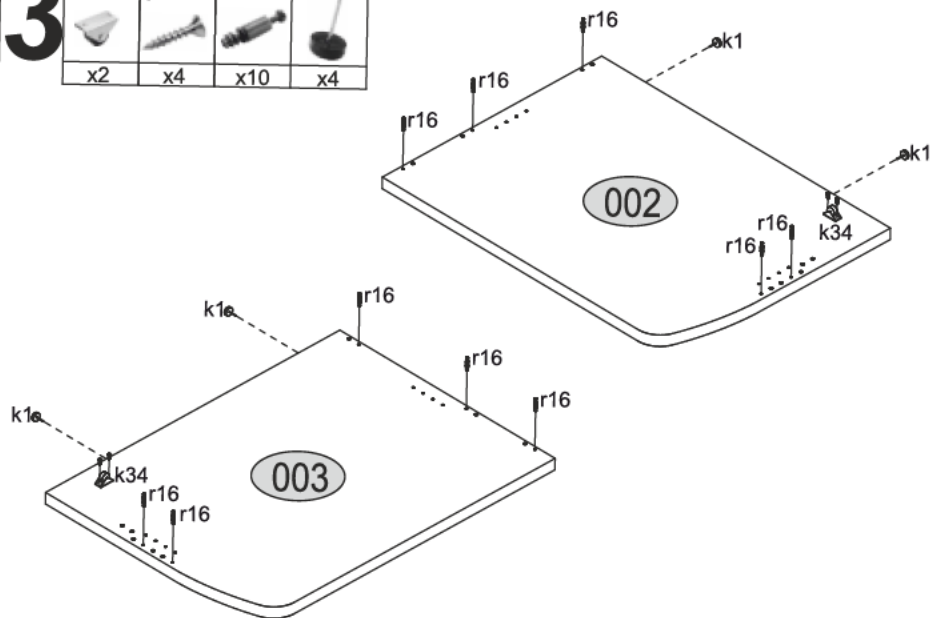


4

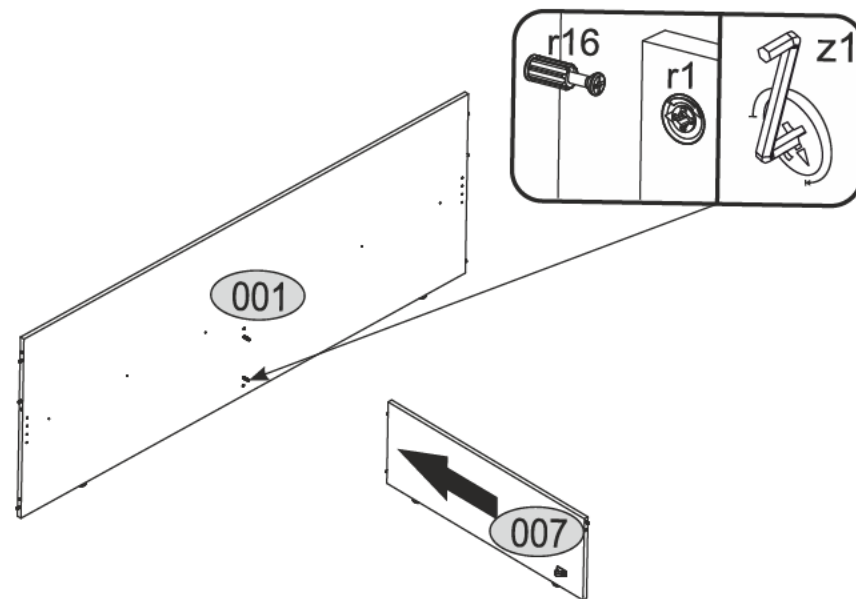


5

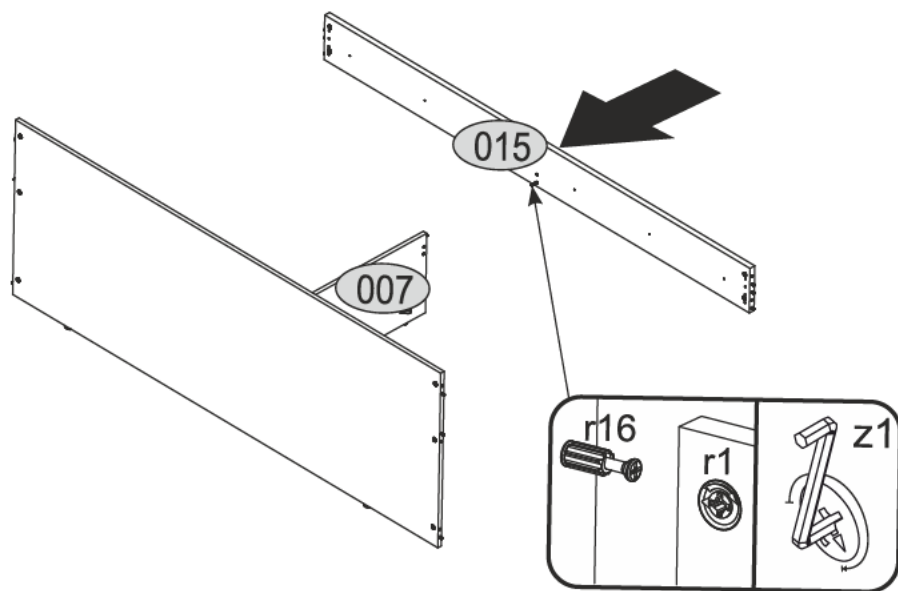


6

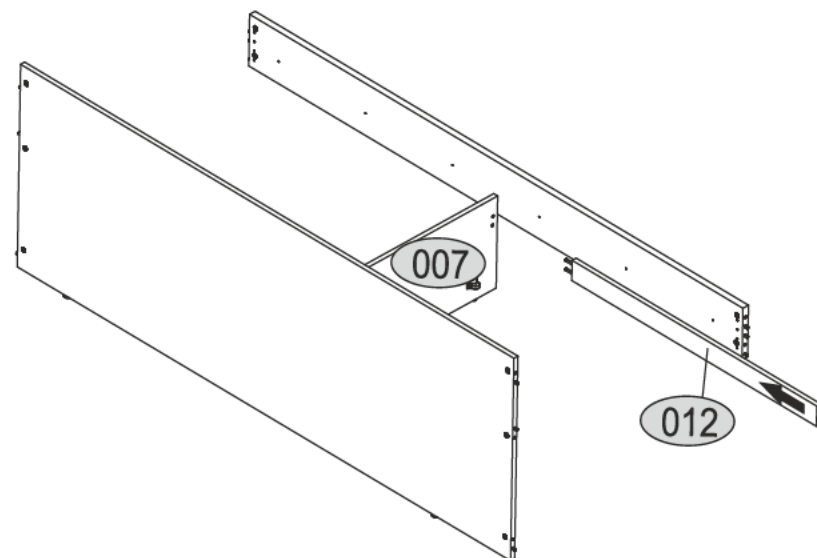

7



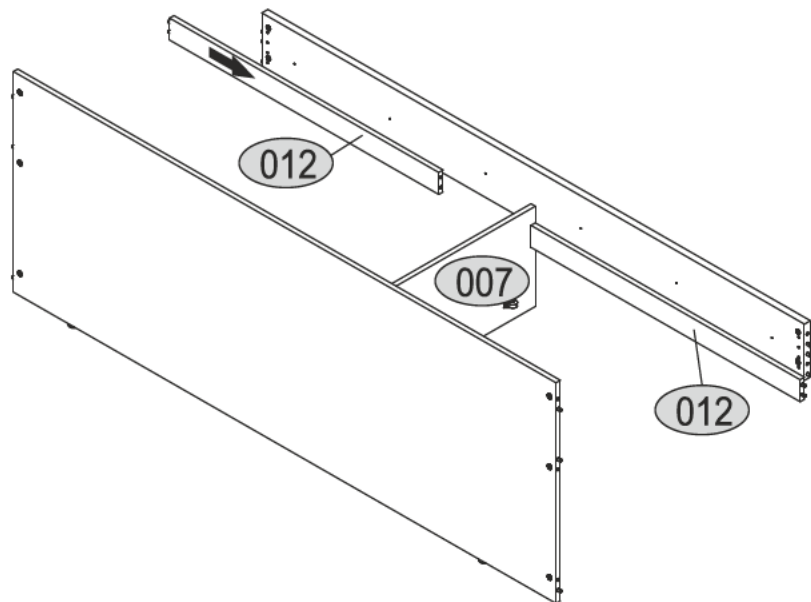


8

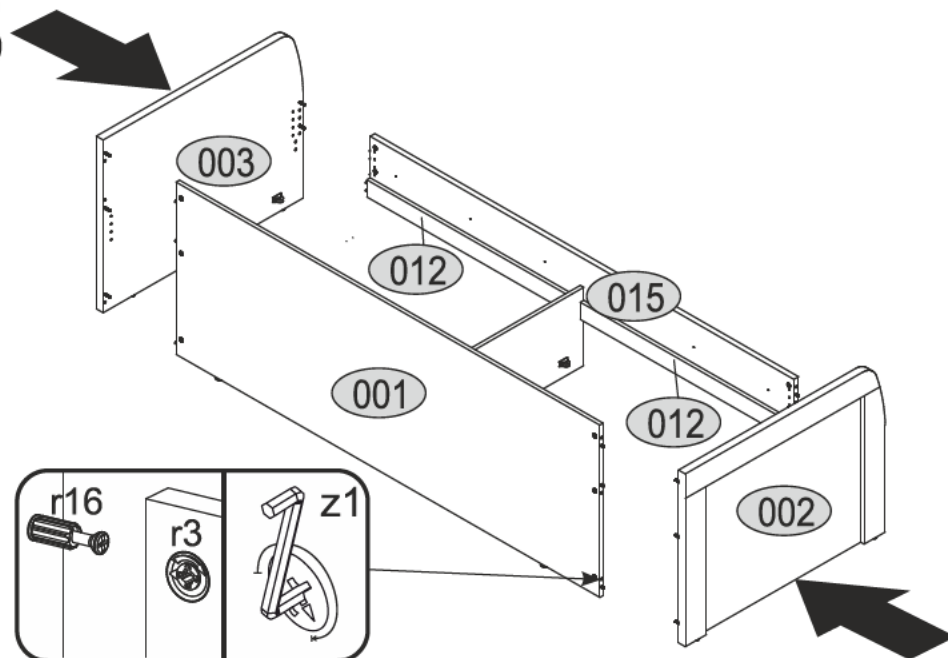


9


n63	e2	p10	n221	p25
x4	x32	x12	x4	x16

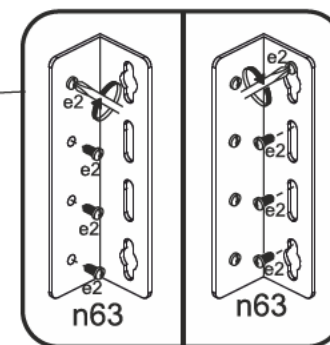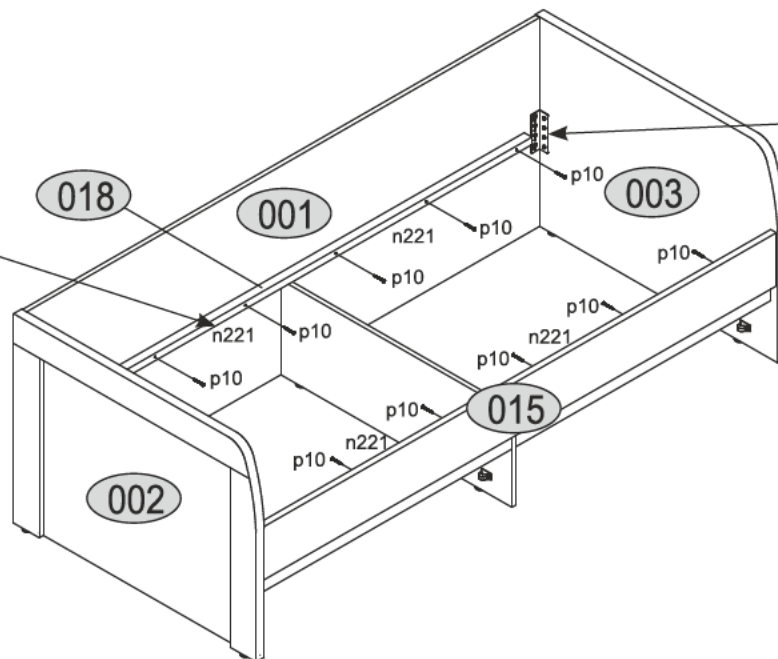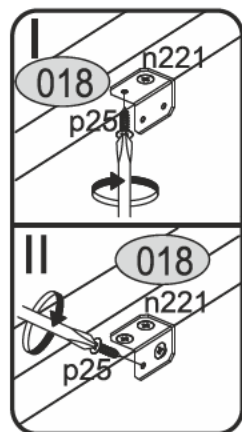


10

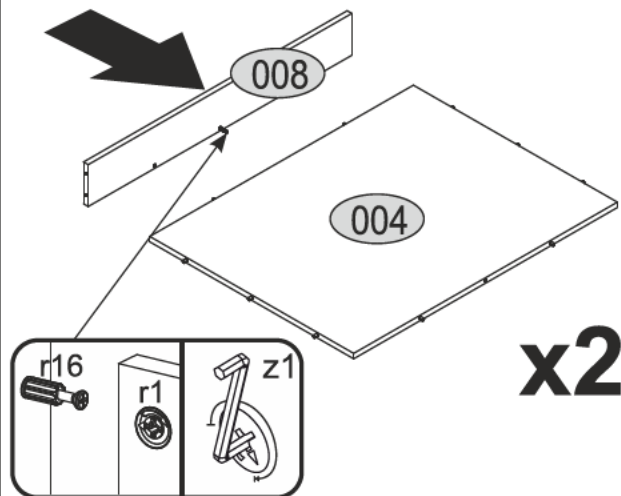



11

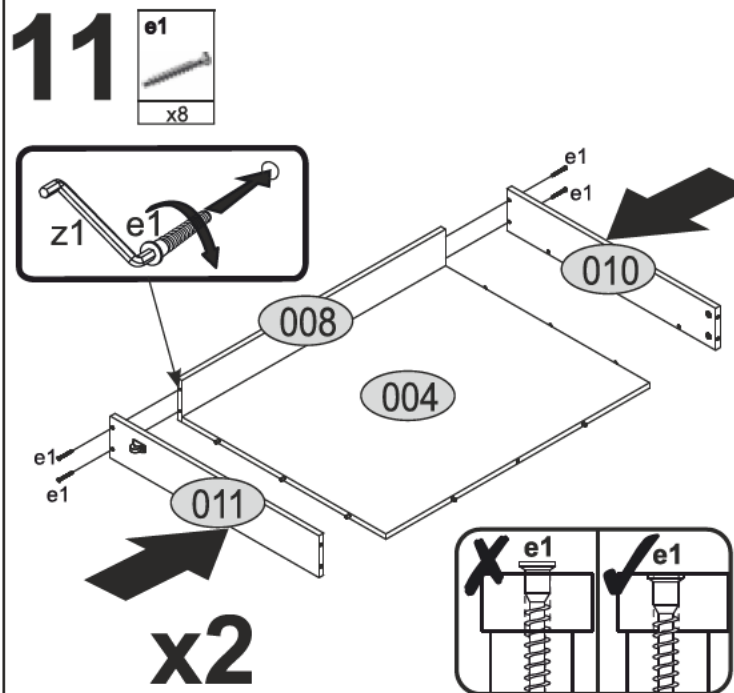

12

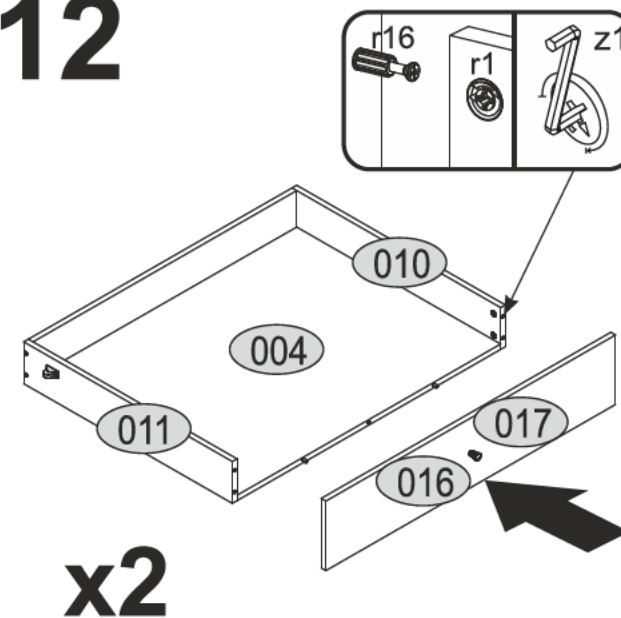

13

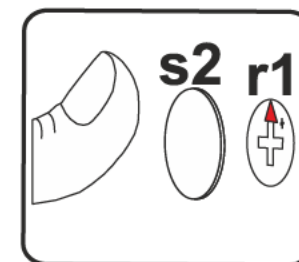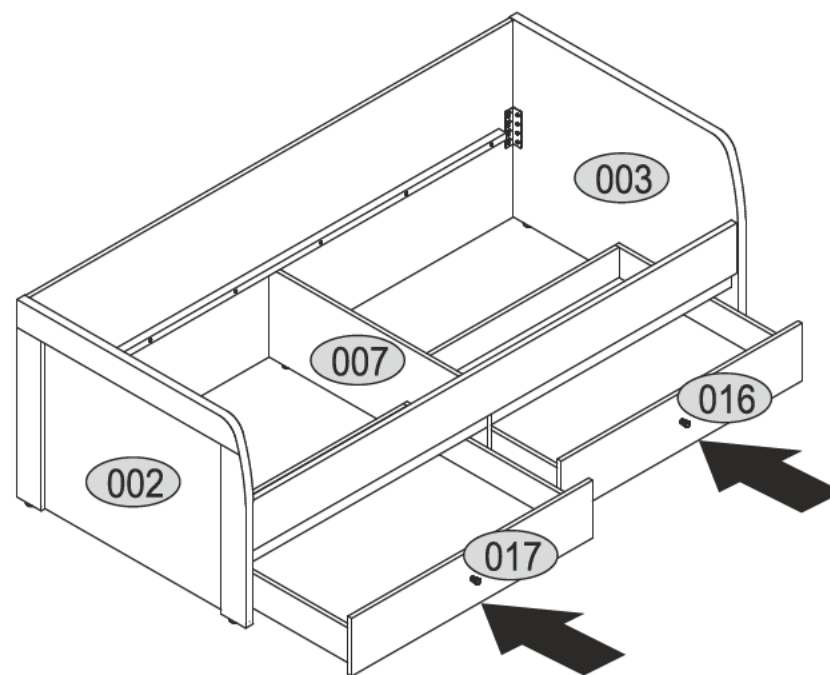

14

