
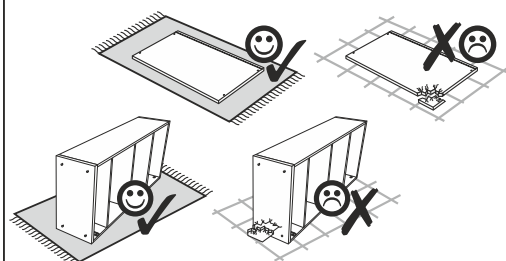
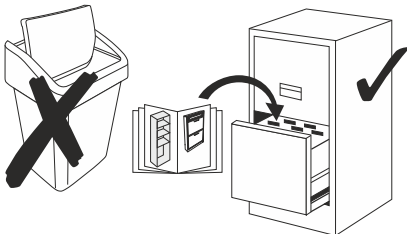
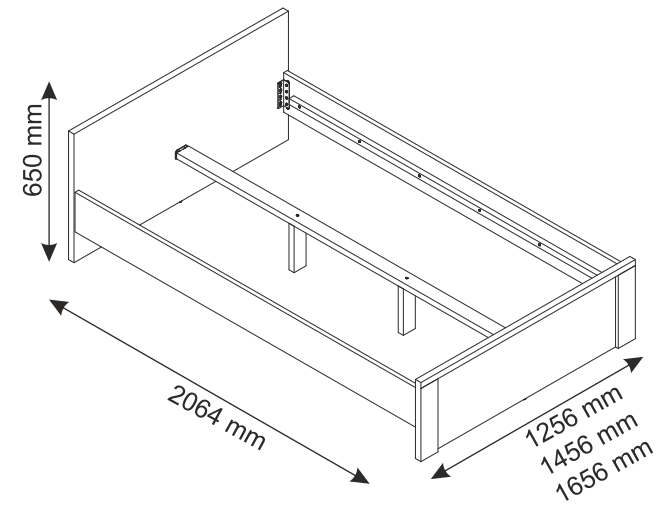
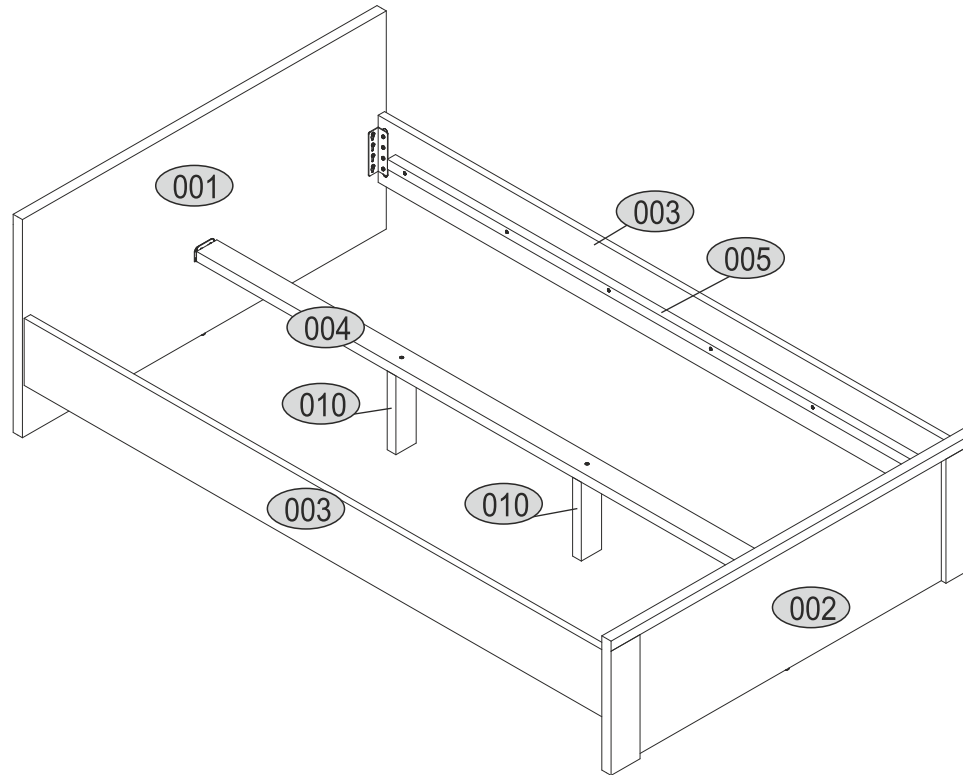
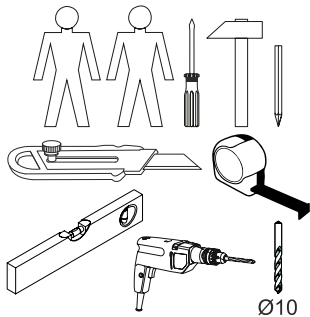


# Installation manual



## PAVI Bed 120/140/160

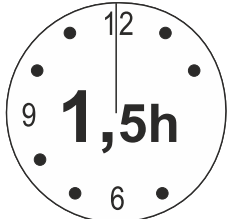

Code	Dimensions				Package
<b>Bed 120/140/160</b>					
003	2000	200	22	2	1/2
004	1984	70	30	1	1/2
005	1880	26	30	2	1/2
010	235	70	30	2	1/2
accessories				1	1/2
<b>Bed 120</b>					
001	1256	650	16/32	1	2/2
002	1256	400	16/32	1	2/2
<b>Bed 140</b>					
001	1456	650	16/32	1	2/2
002	1456	400	16/32	1	2/2
<b>Bed 160</b>					
001	1656	650	16/32	1	2/2
002	1656	400	16/32	1	2/2




# Accessories:

<p>4x n63</p> 	<p>2x n34<sup>1</sup></p> 	<p>2x n34<sup>2</sup></p> 	<p>6x</p> 
<p>2x e27</p> 	<p>8x r3</p> 	<p>12x p10 Ø4x40</p> 	<p>16x p25 Ø3.5x16</p> 
<p>8x e3 Ø6.3x13</p> 	<p>8x r16</p> 	<p>12x f1 Ø8x30</p> 	<p>32x e2 Ø6.3x13</p> 
<p>6x p36 Ø4x25</p> 	<p>n221</p> 	<p>1x z1</p> 	<p>12x p21 Ø4x30</p> 

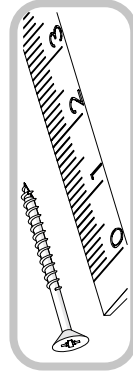



# 1

<b>r16</b> 	<b>n34</b> 	<b>e3</b> 	<b>k1</b> 
x8	x2	x8	x6

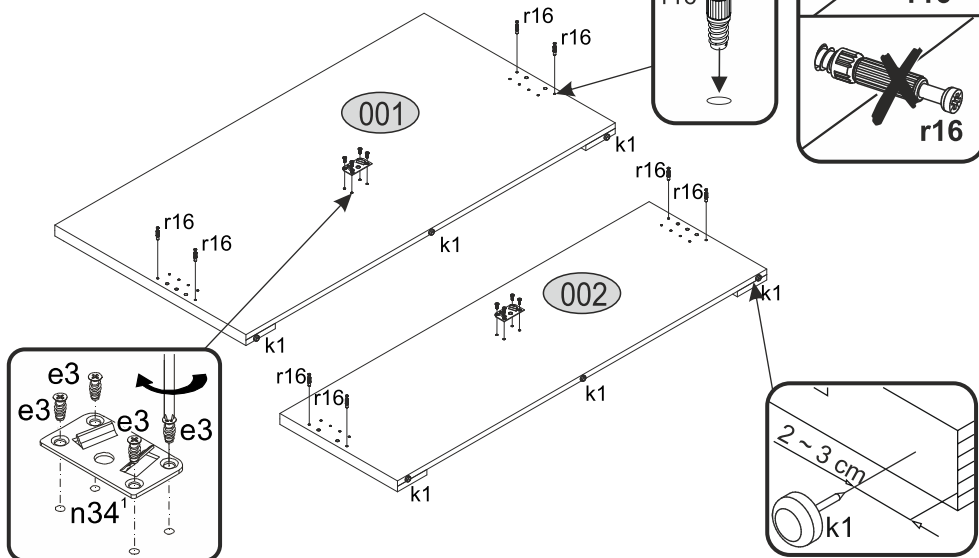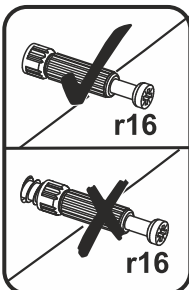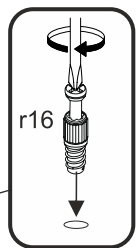


# 2

<b>r3</b> 	<b>f1</b> 
x8	x12

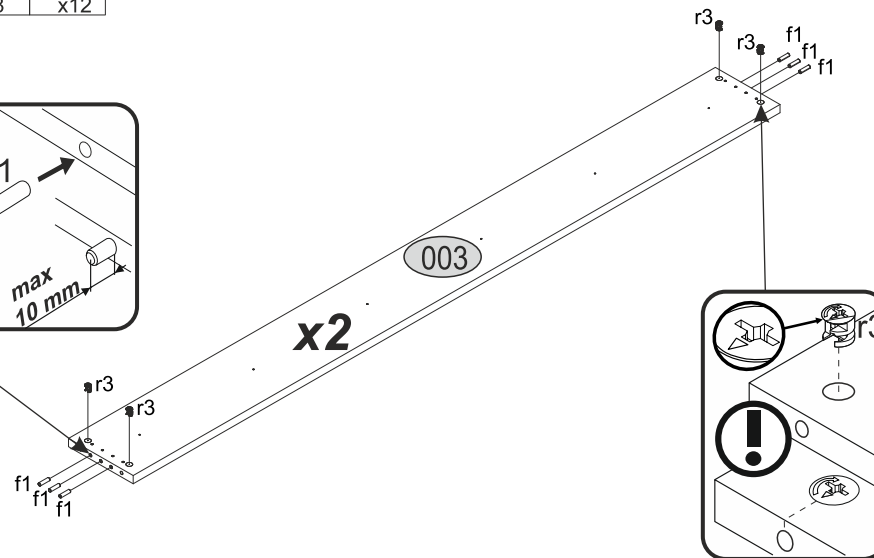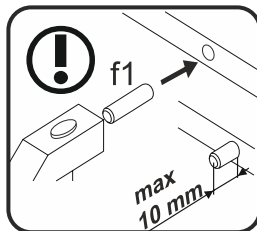


# 3

<b>p10</b> 
x12

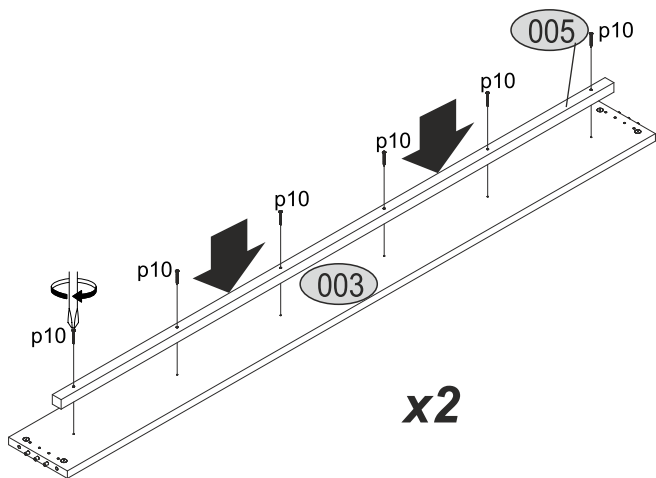


# 4


<b>n221</b> 	<b>p25</b> 
x4	x16

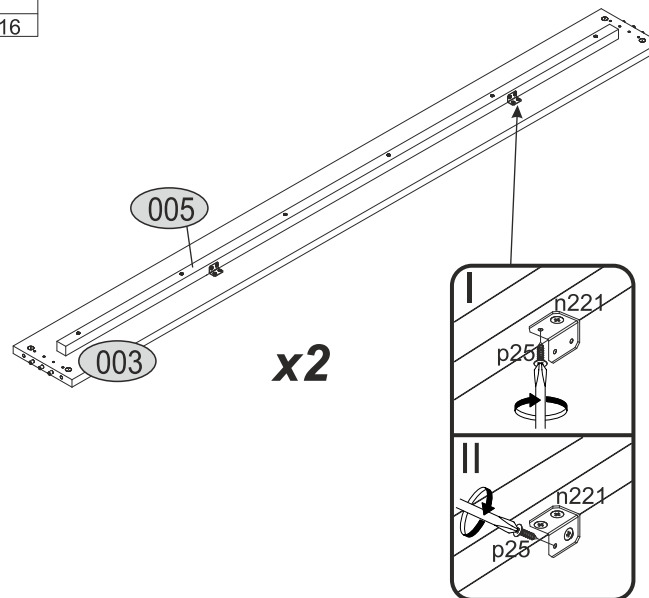


# 5

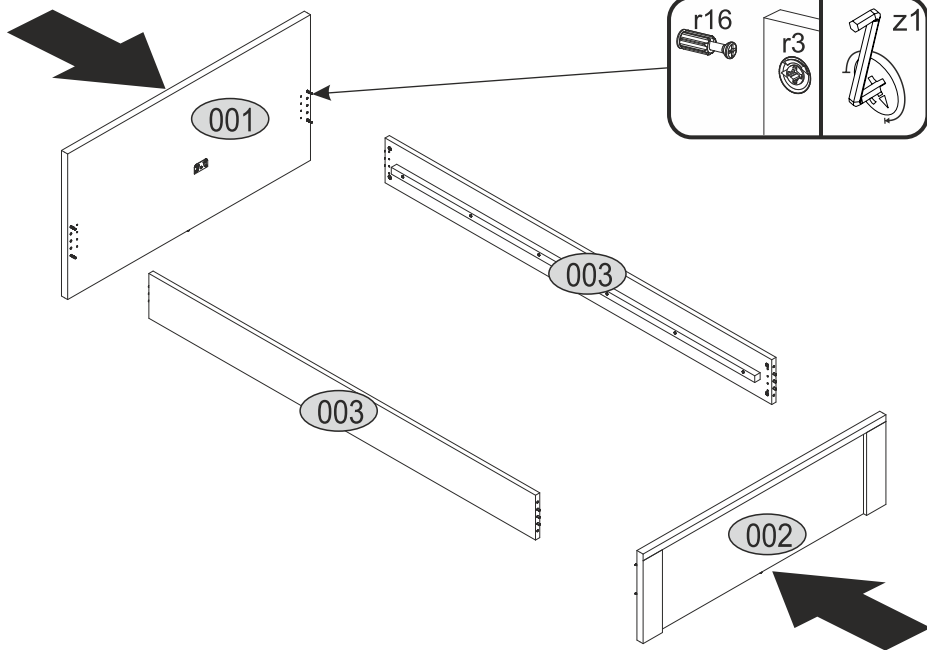


# 6

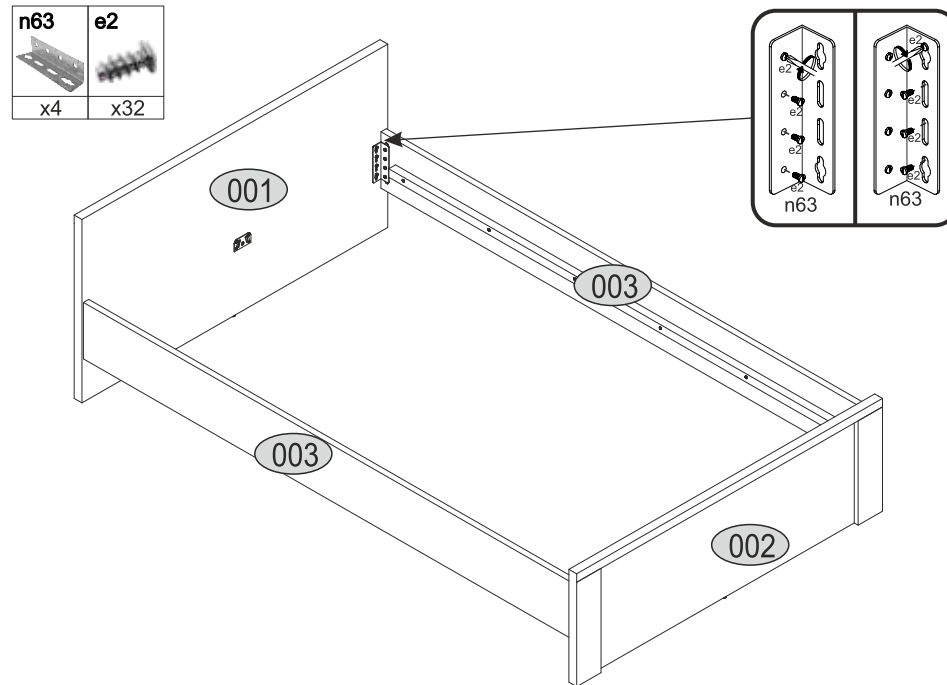

# 7

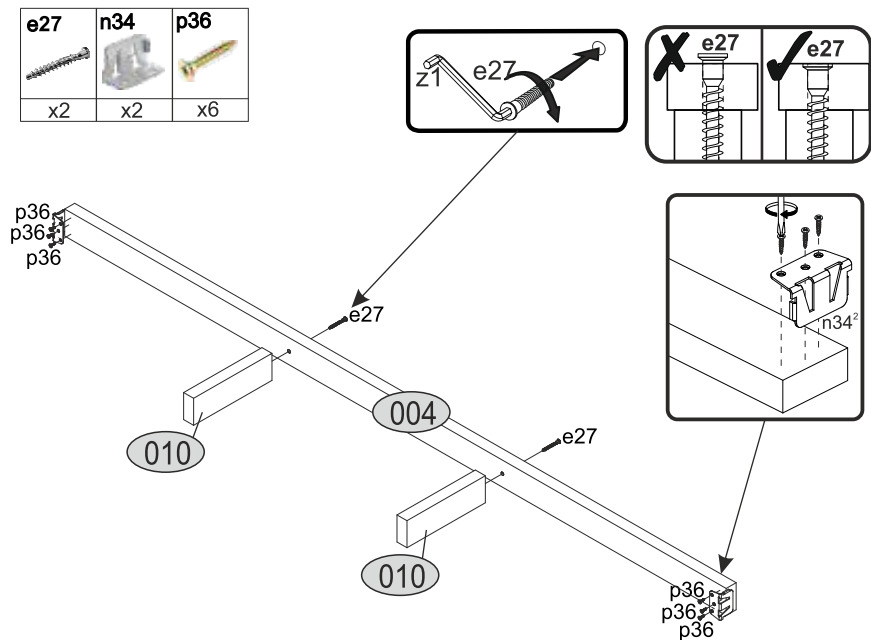

# 8

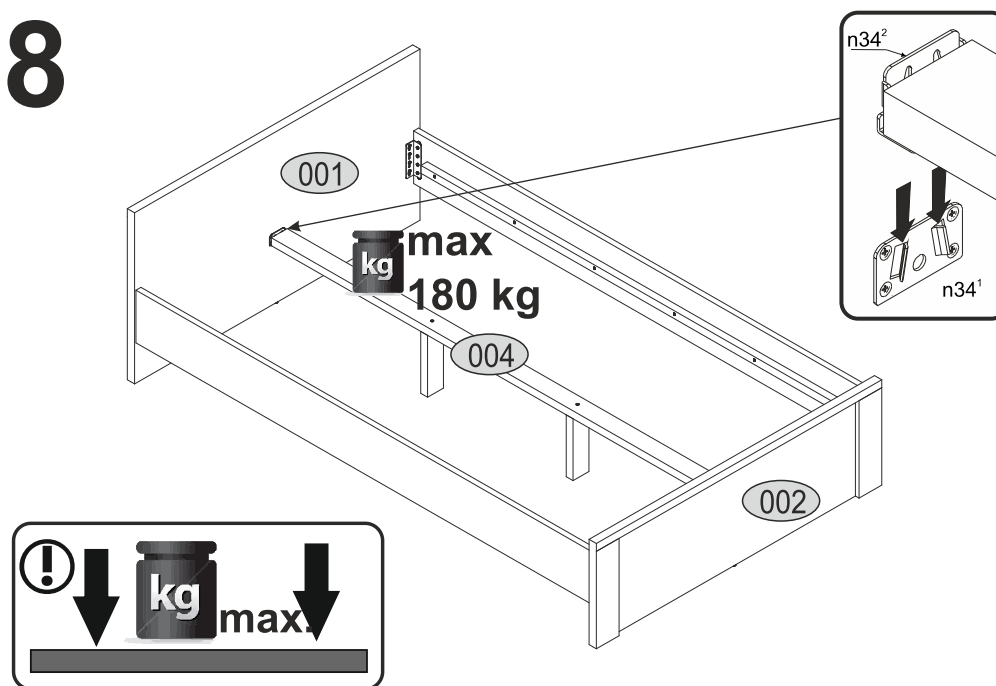

9

p21  
x12

