

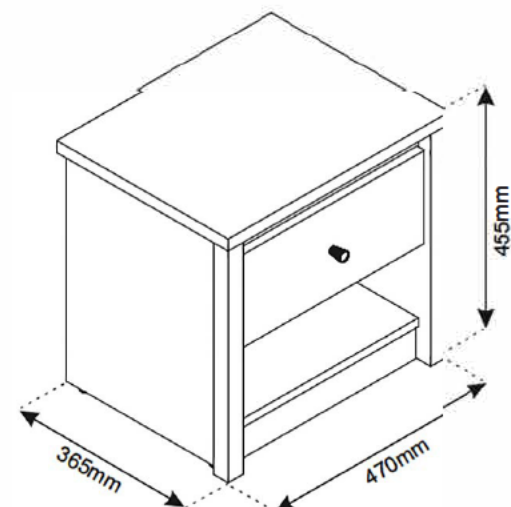
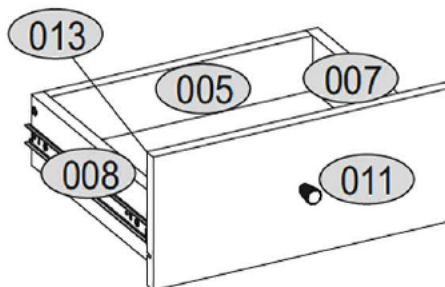



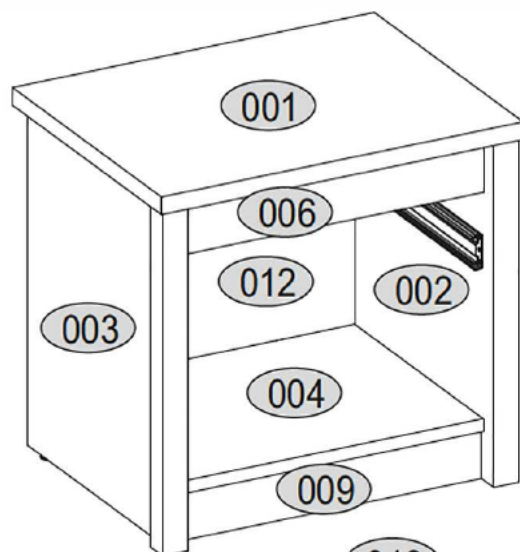


Οδηγίες συναρμολόγησης

KARIN κομοδίνο 1 S

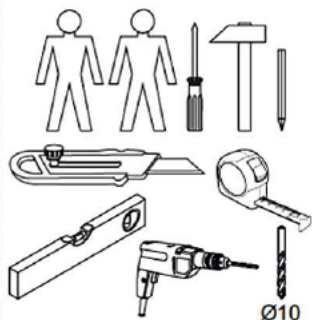


Kod	Wymiary				Pakiet
001	470	364	22	1	1/1
002	428	360	16/32	1	1/1
003	428	360	16/32	1	1/1
004	398	334	16	1	1/1
005	341	90	16	1	1/1
006	70	398	16	1	1/1
007	300	90	16	1	1/1
008	300	90	16	1	1/1
009	398	60	16	1	1/1
011	392	170	16	1	1/1
012	370	416	2,5	1	1/1
013	302	359	2,5	1	1/1
Akcesoria				1	1/1

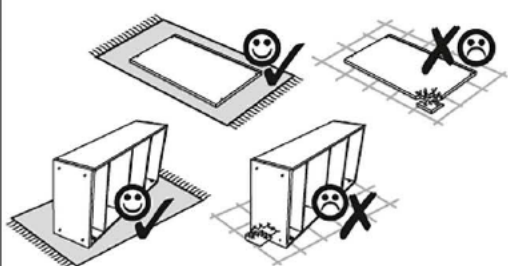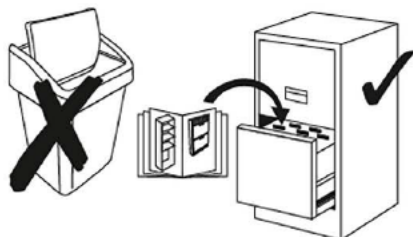


Aksesoria:

20x f1 Ø8x30	10x r1 15x12	10x r16 Ø5x24	2x e1 Ø7x50
4x k1	1x lb-300	20x p25 Ø3.5x16	8x l2
1x p9	1x c411.058	6x s2	1x z1

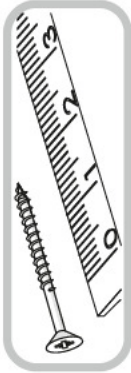


1

r1	f1	r16	c411.058	p9
x6	x16	x6	x1	x1

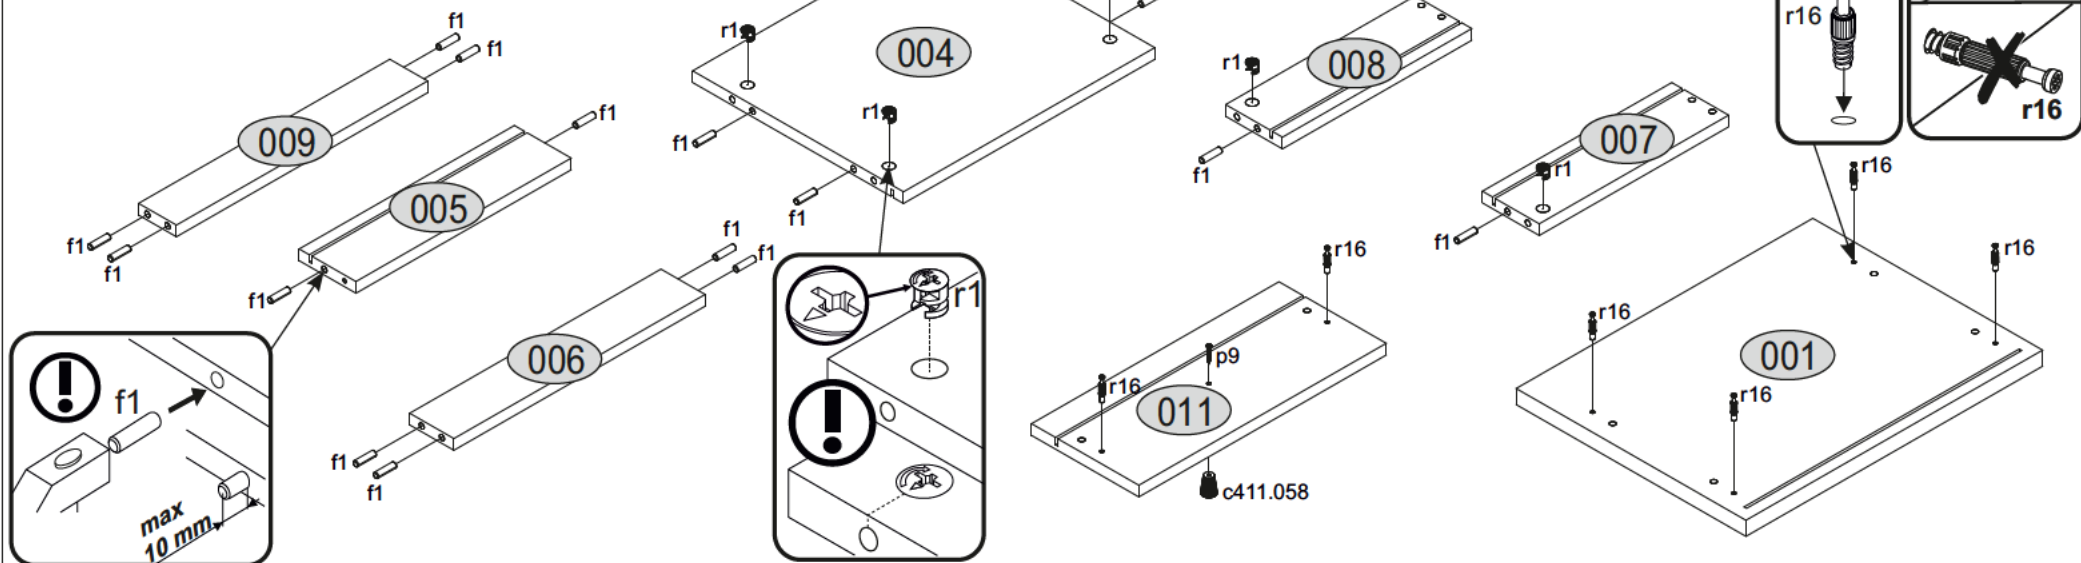


2


r1	f1	r16	p25	lb-300	k1
x4	x4	x4	x6	x1	x4

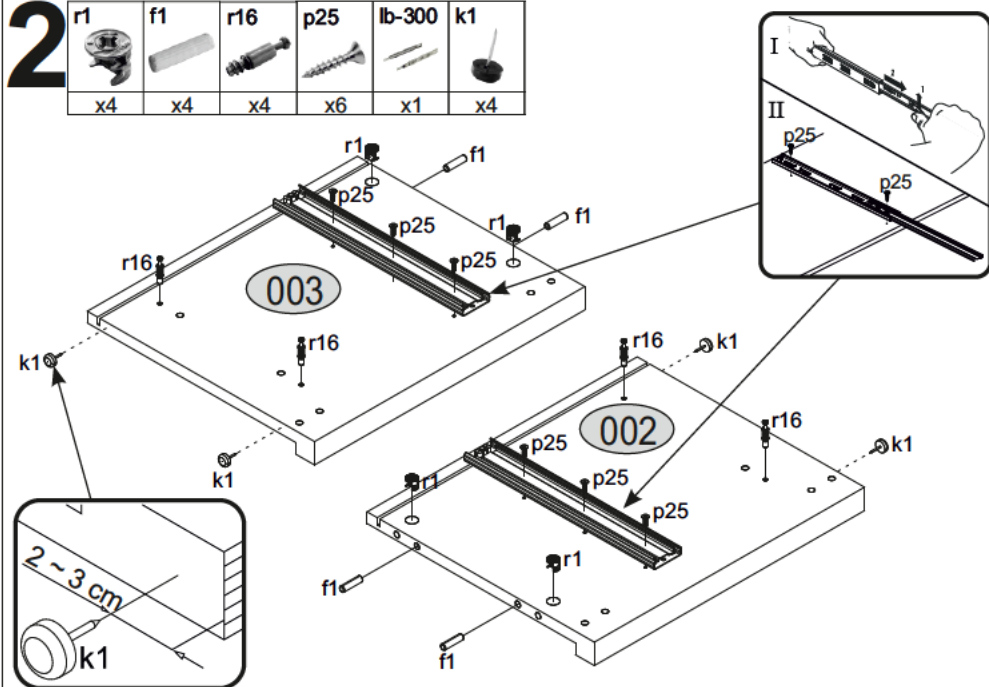



3

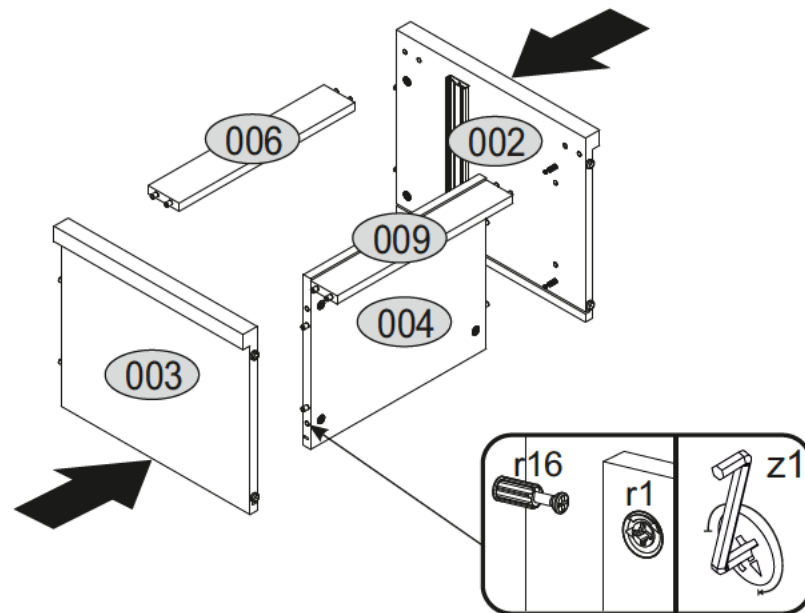


4

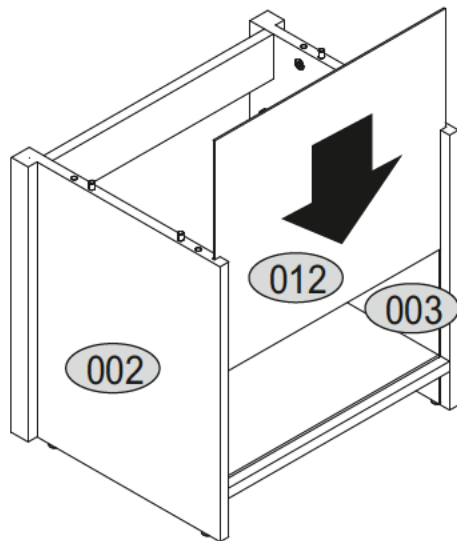




5

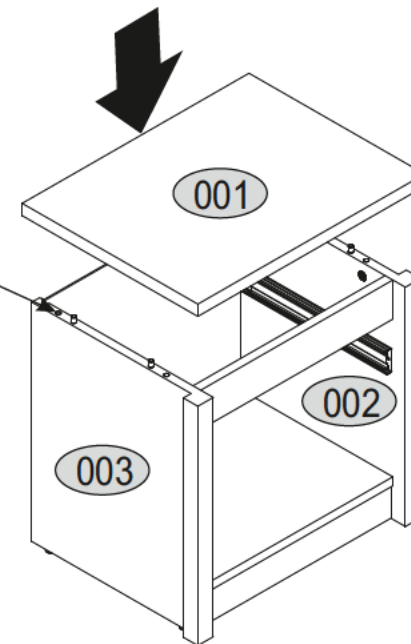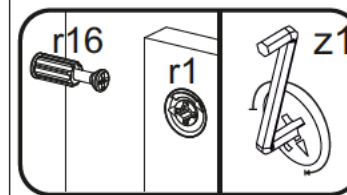


6

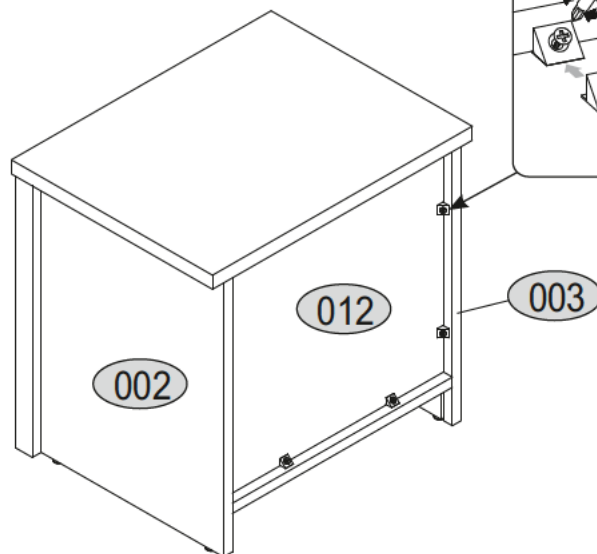



7

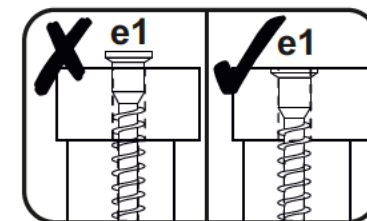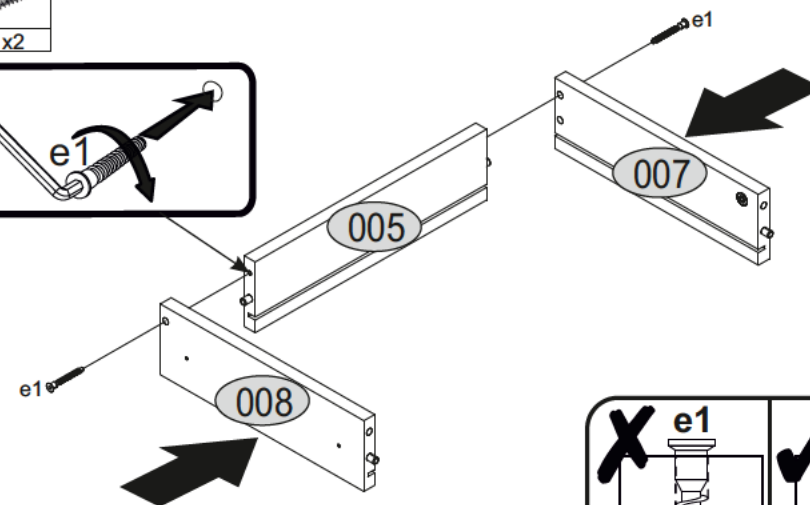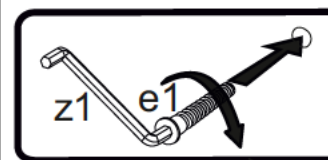

8

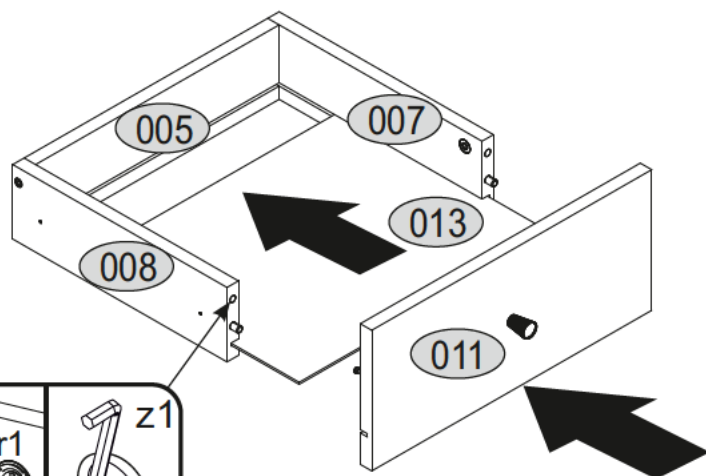

10

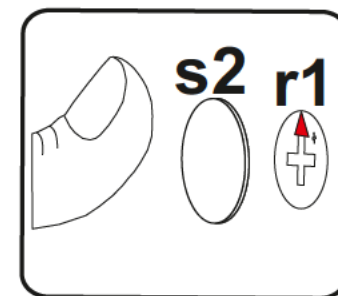

9

