

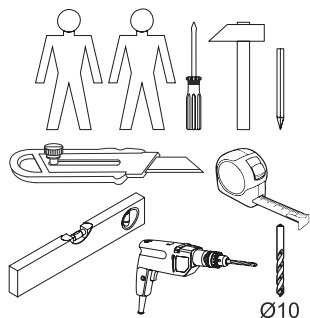
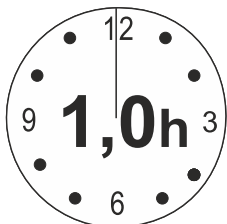
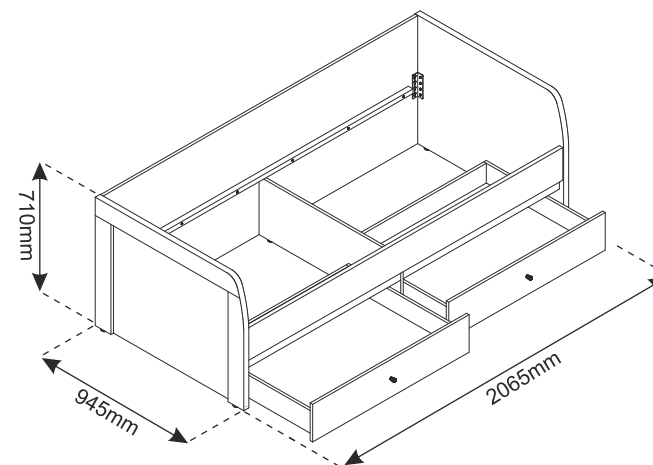
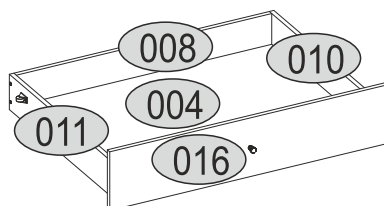


Οδηγίες συναρμολόγησης



KARIN 90 ΚΡΕΒΑΤΙ 206.5*94.5*71 (90*200) ΧΩΡΙΣ ΠΑΤΩΜΑ

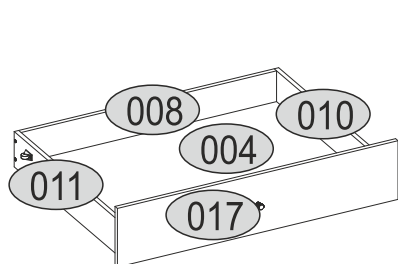

Ø10

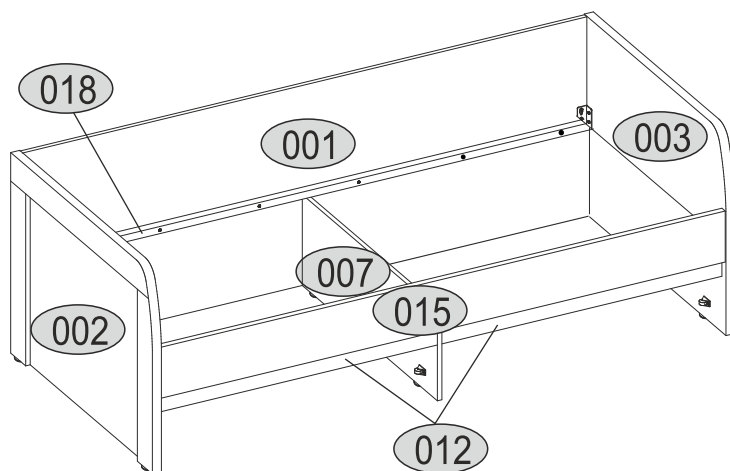


001	2000	702	16	1	1/3
002	944	704	16/32	1	1/3
003	944	704	16/32	1	1/3
004	905	700	16	2	2/3
007	900	314	16	1	2/3
008	905	124	16	2	2/3
010	716	124	16	2	1/3
011	716	124	16	2	1/3
012	70	992	16	2	3/3
015	2000	179	22	1	3/3
016	994	206	16	1	3/3
017	994	206	16	1	3/3
018	1880	30	27	2	3/3
				1	1/3

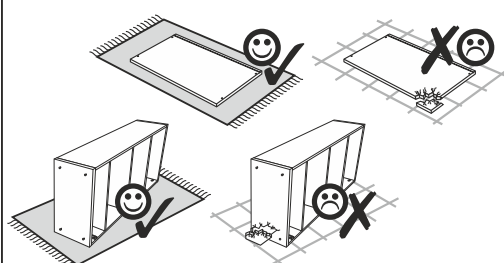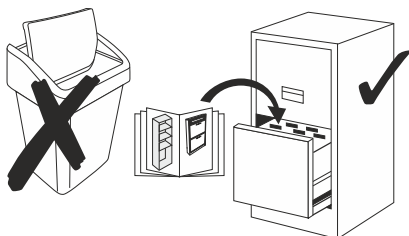


Παρελκόμενα

39x f1 Ø8x30 	21x r1 15x12 	25x r16 Ø5x24 	8x e1 Ø7x50 
4x r3 	32x e2 	48x p25 Ø3.5x16 	12x p21 Ø4.0x30 
16x k34 	4x n63 	2x p9 Ø4x30 	12x p10 Ø4x40 
8x s2 	2x c411.058 	2x f6 	1x z1 
8x k1 	4x n221 		

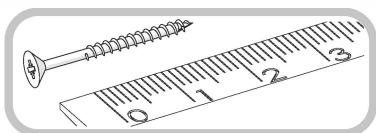


1

r1	f1	k34	p25	f6	k1
x15	x27	x14	x28	x2	x2

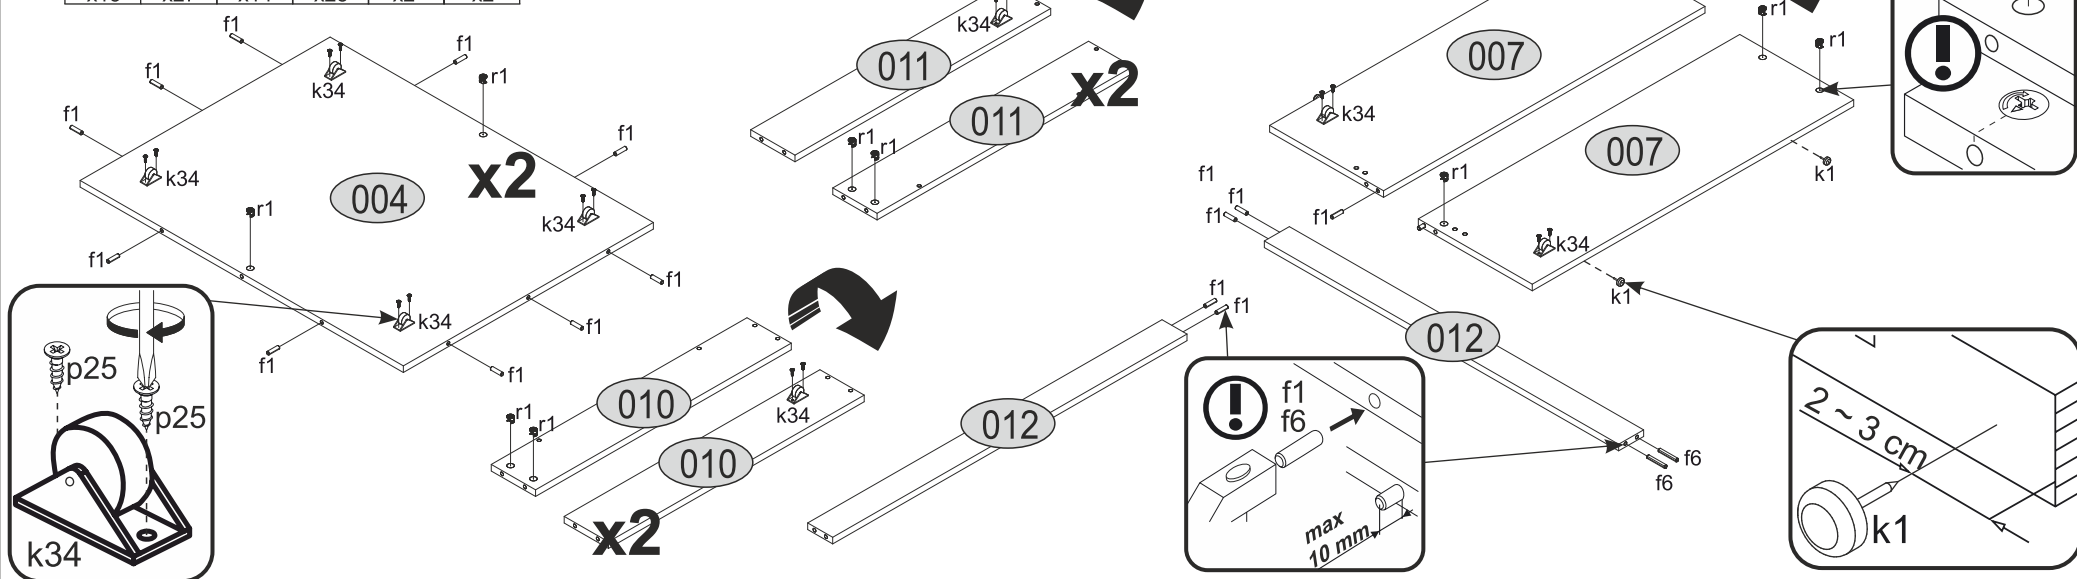


2

r1	f1	r16	c411.058	p9	r3	k1
x6	x12	x15	x2	x2	x4	x2

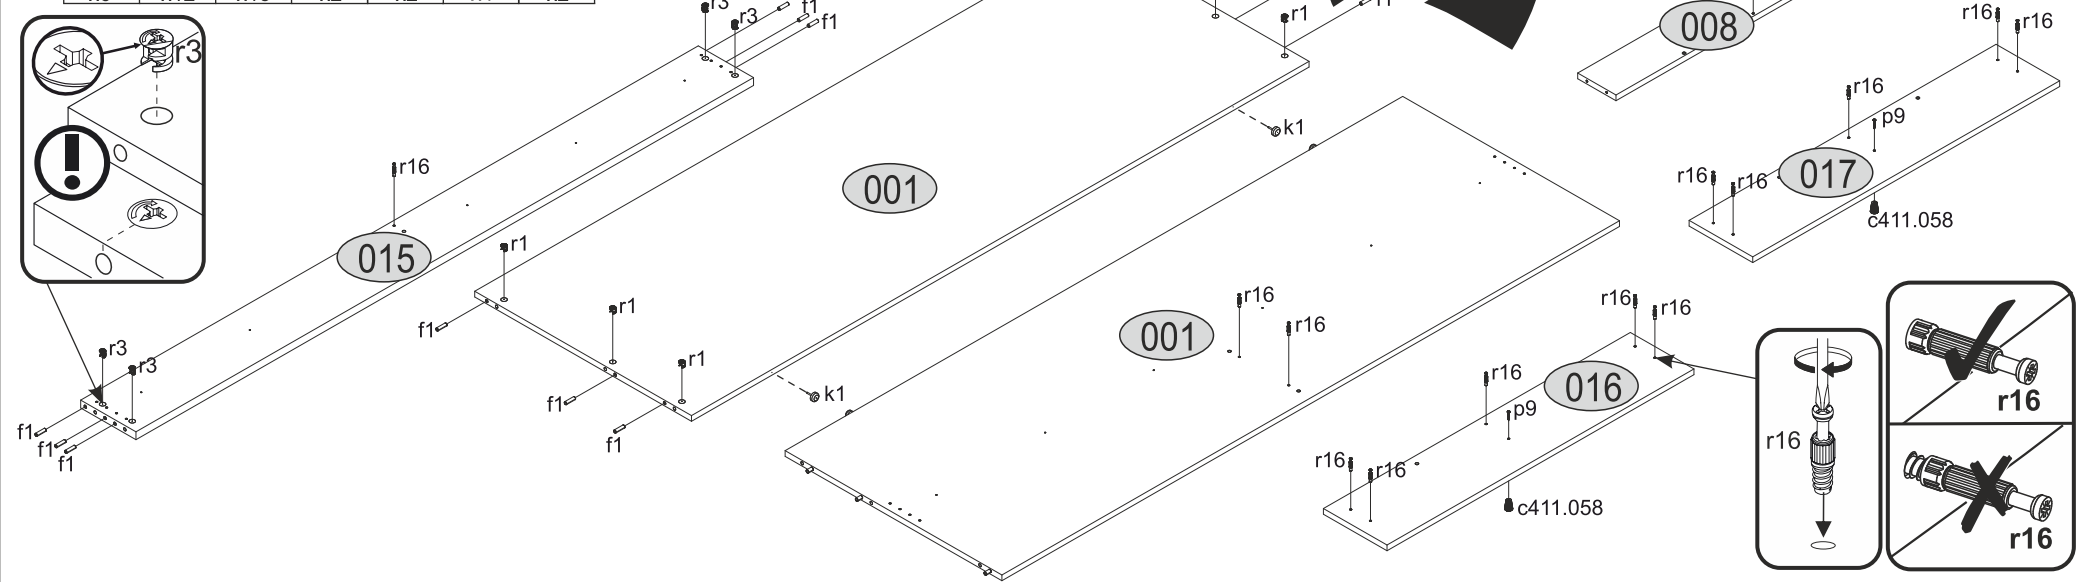


3


k34	p25	r16	k1
x2	x4	x10	x4

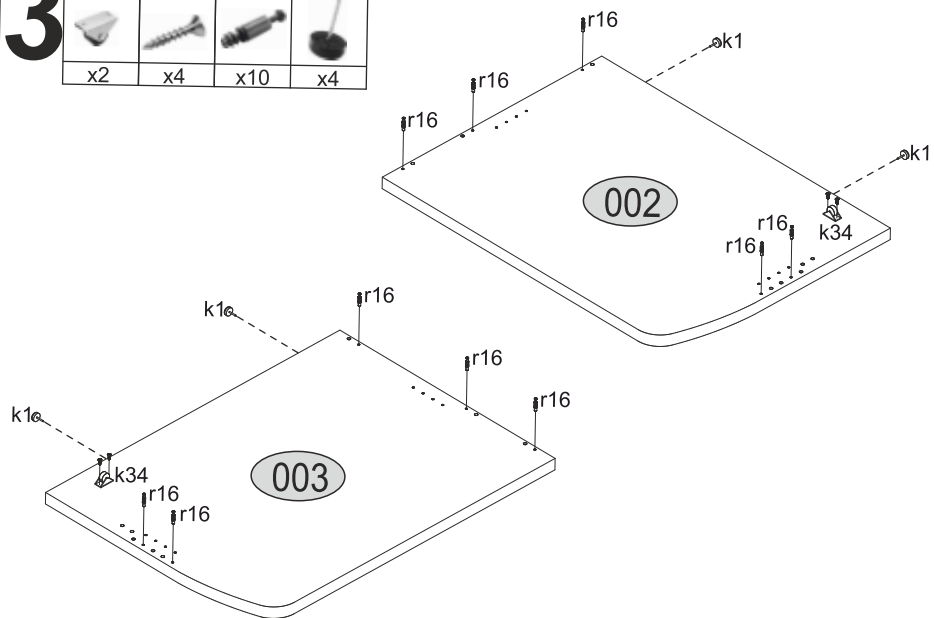


4

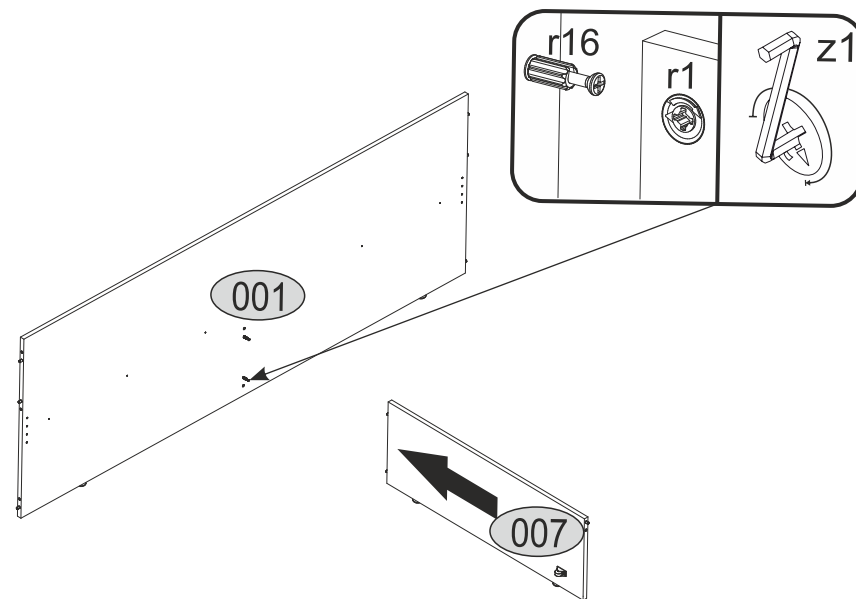


5

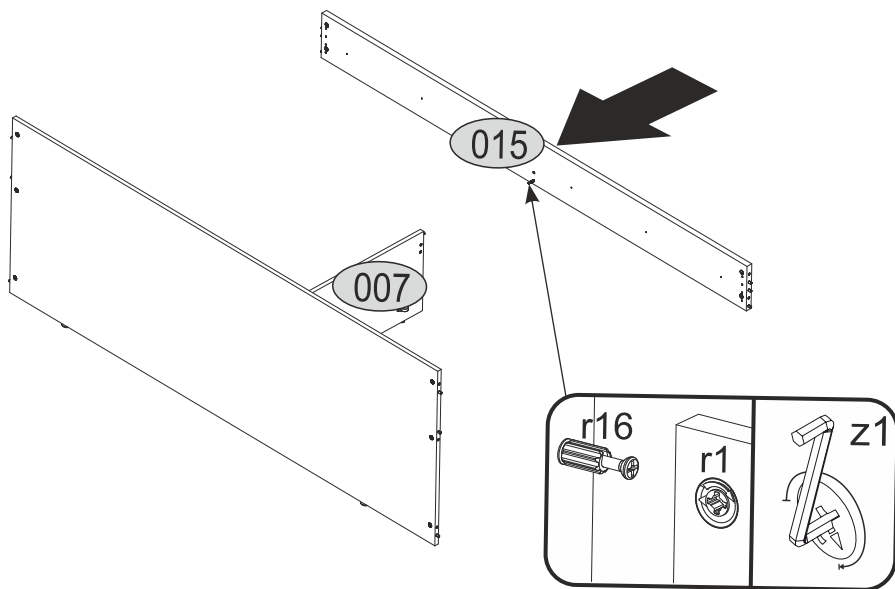


6

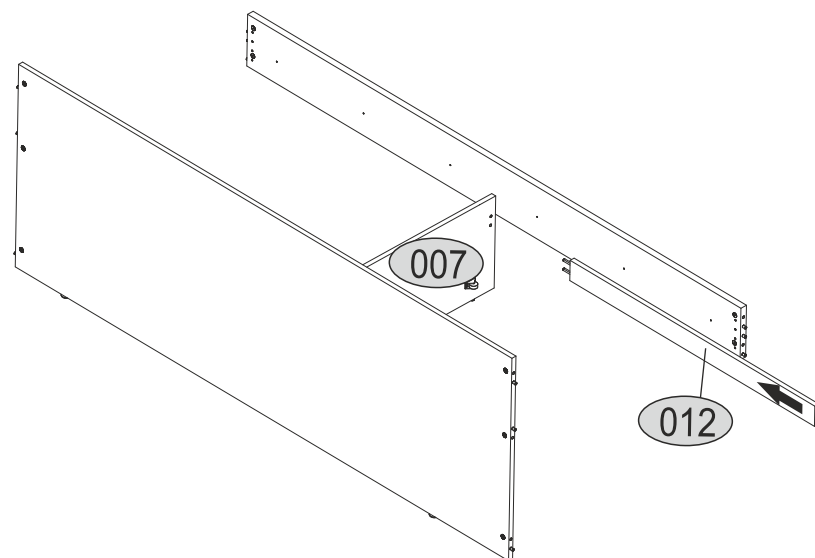

7



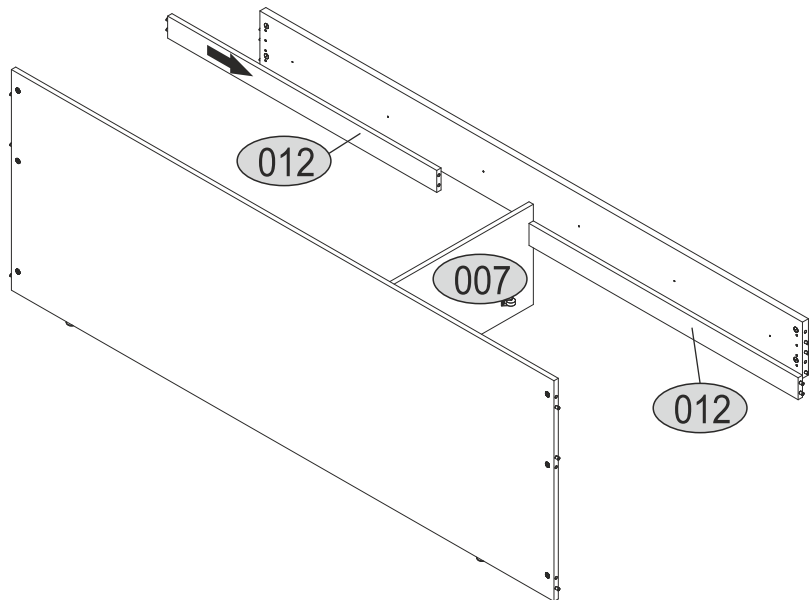


8

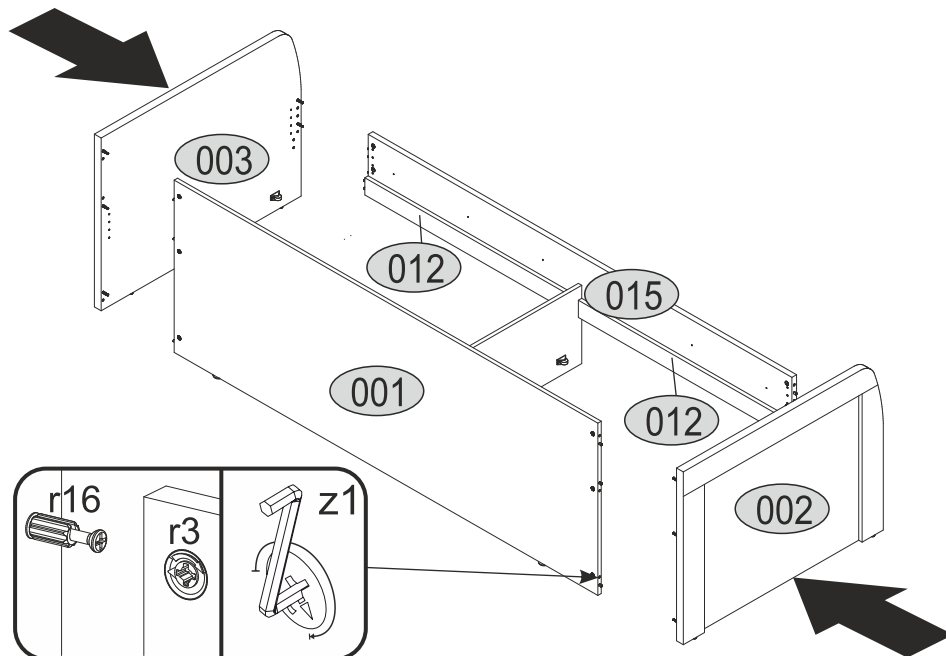


9



n63	e2	p10	n221	p25
x4	x32	x12	x4	x16

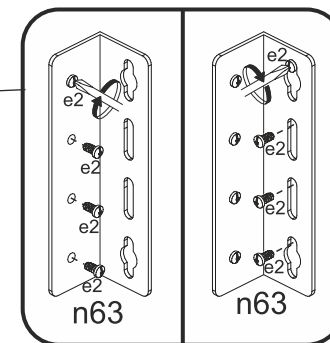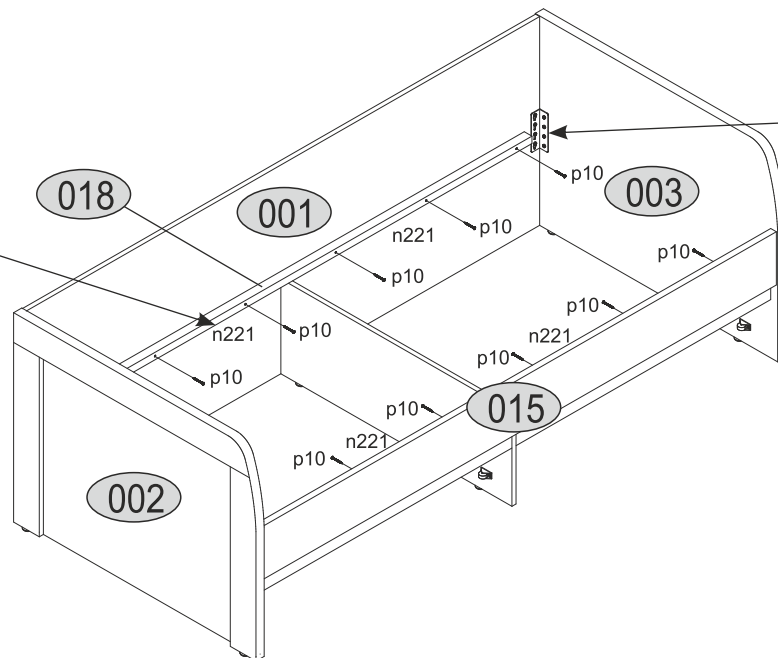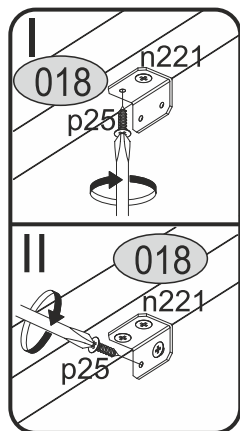


10

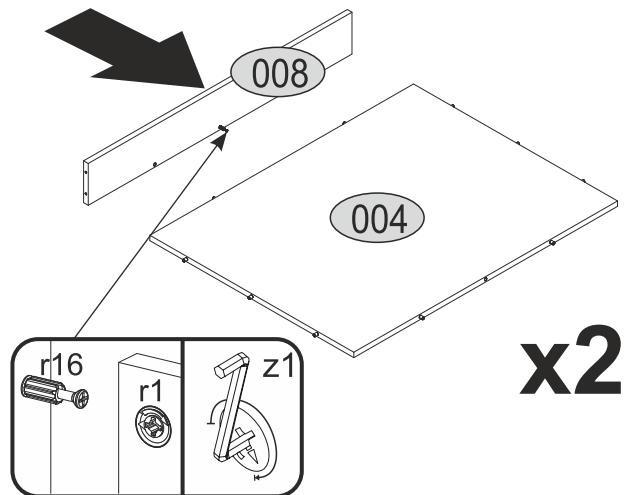

11

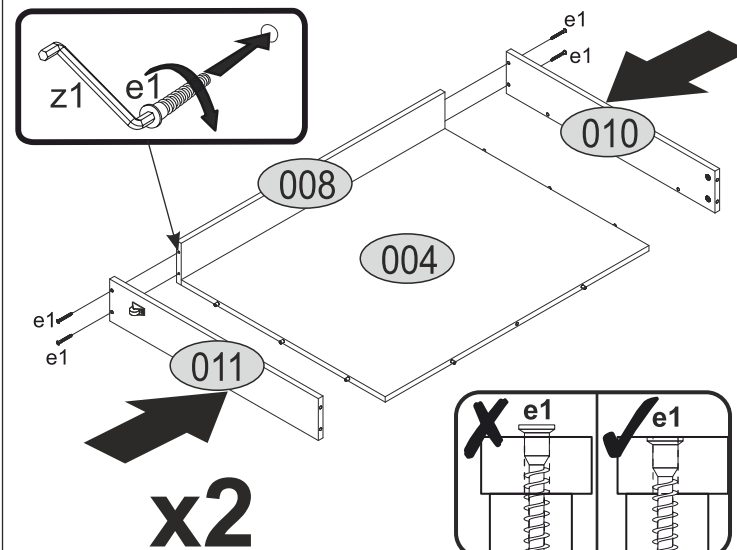

12

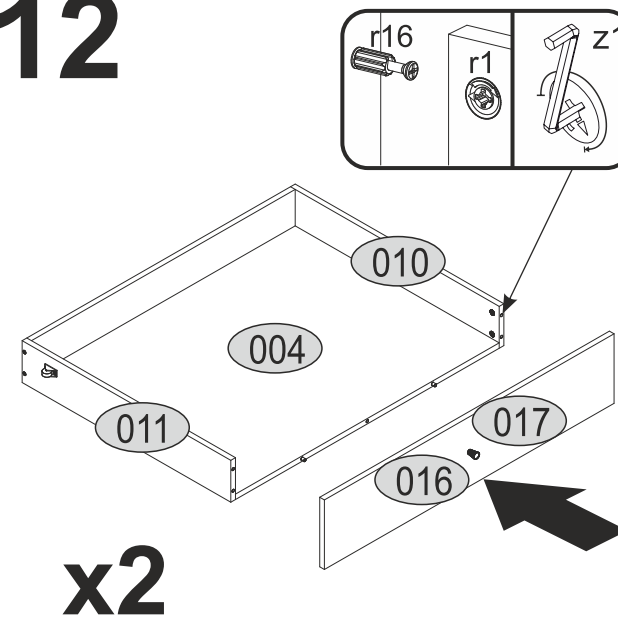

13

