

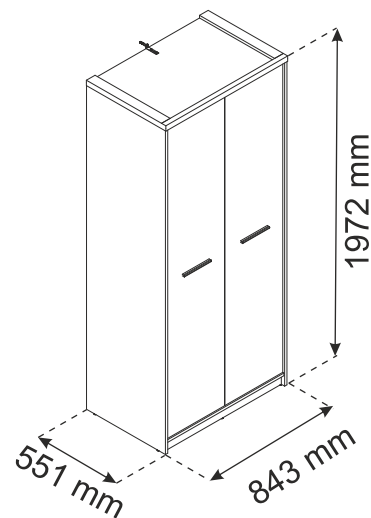
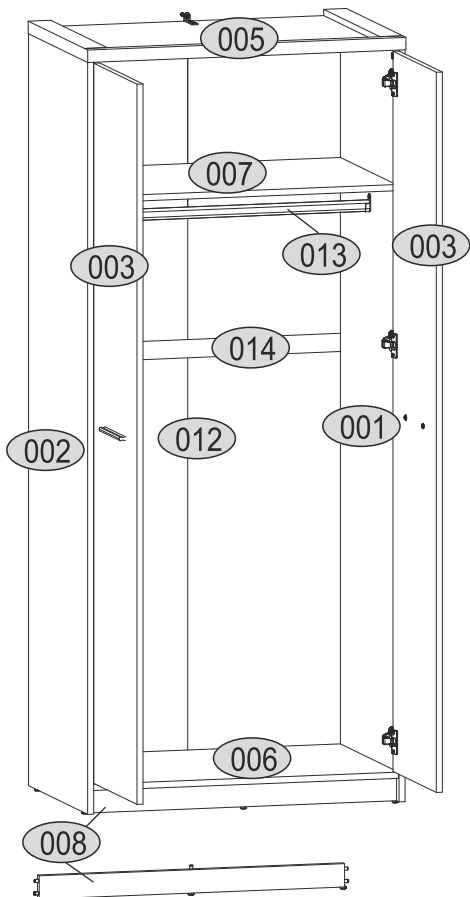



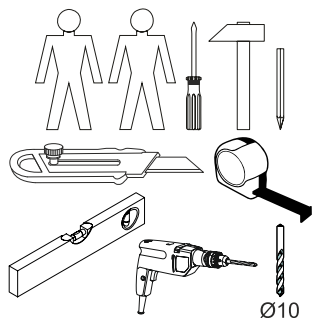


Installation manual

PAVI Wardrobe 2D


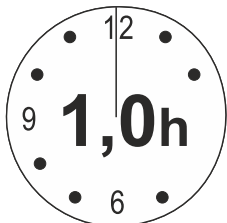


Code	Dimensions				Package
	Height	Depth	Width	Weight	
001	1934	546	16	1	2/3
002	1934	546	16	1	2/3
003	1852	400	16	2	3/3
005	843	551	16/32	1	1/3
006	809	537	16	1	1/3
007	809	515	16	1	1/3
008	809	60	16	2	1/3
012	1882	826	2,5	1	2/3
013	804			1	1/3
014	809	60	16	1	1/3
accessories				1	1/3

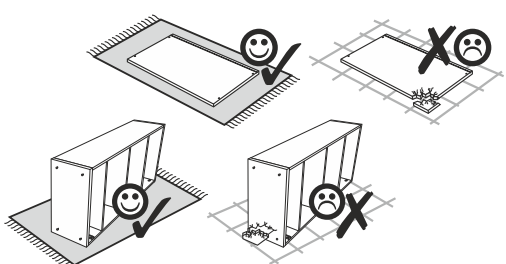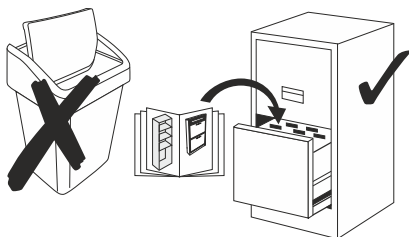


Accessories:

<p>6x a143</p> 	<p>6x b119</p> 	<p>2x c412.030</p> 	<p>8x s2</p> 
<p>24x f1 Ø8x30</p> 	<p>1x f3</p> 	<p>6x k1</p> 	<p>1x n14</p> 
<p>2x n301</p> 	<p>1x p17 Ø6x50</p> 	<p>18x p25 Ø3.5x16</p> 	<p>4x p42</p> 
<p>40x l1</p> 	<p>14x r1 15x12</p> 	<p>14x r16 Ø5x24</p> 	<p>1x z1</p> 

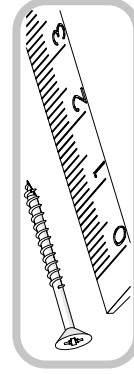


1

r1 	r16 	f1
x8	x4	x18

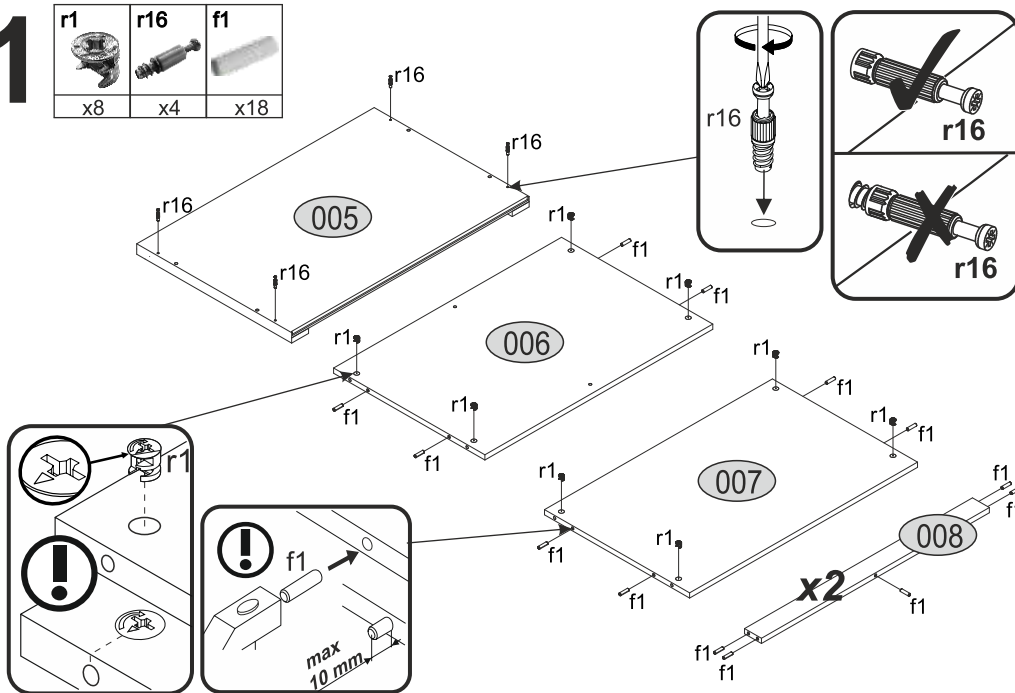


2

p42 	c412.030 	a143 	p25
x4	x2	x6	x12

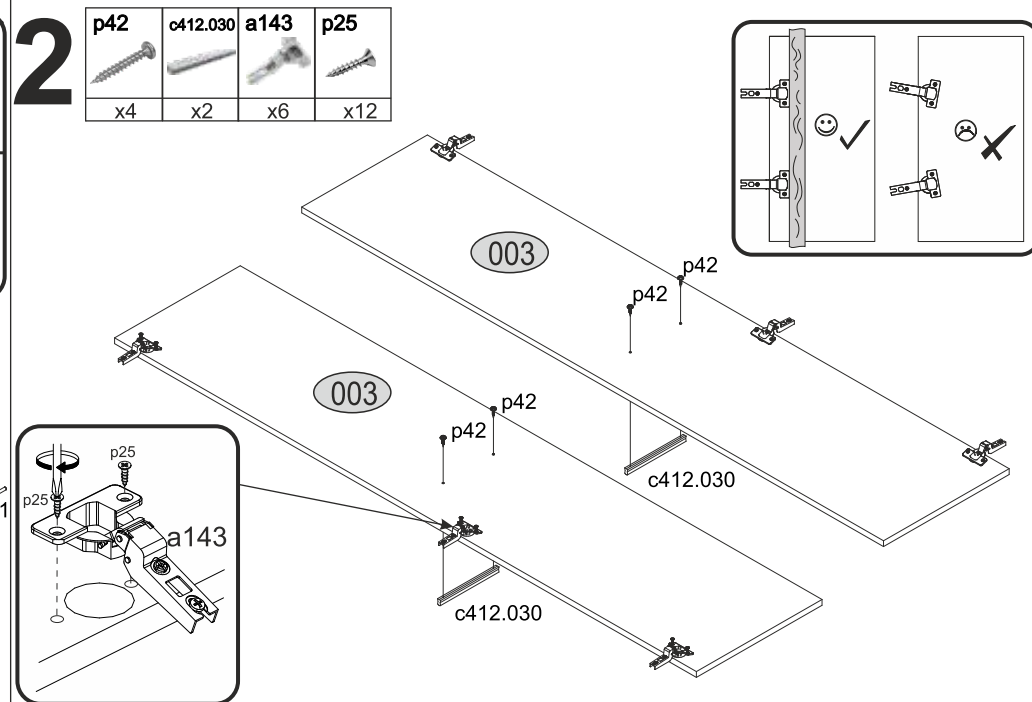


3


n301 	r1 	r16 	f1 	p25 	b119
x2	x6	x10	x6	x4	x6

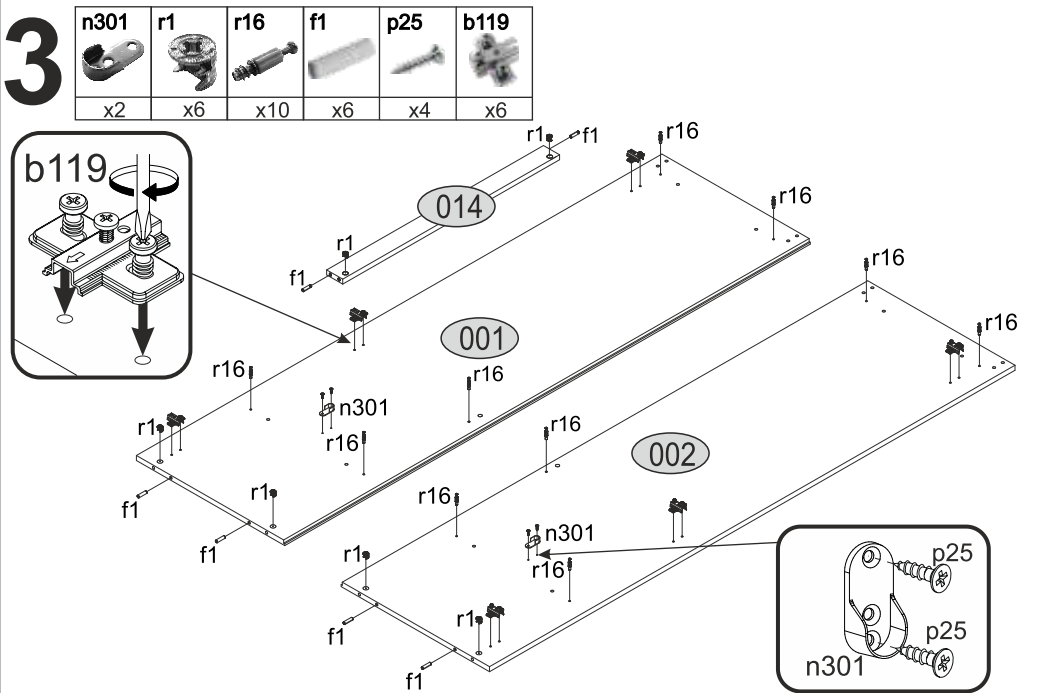



4

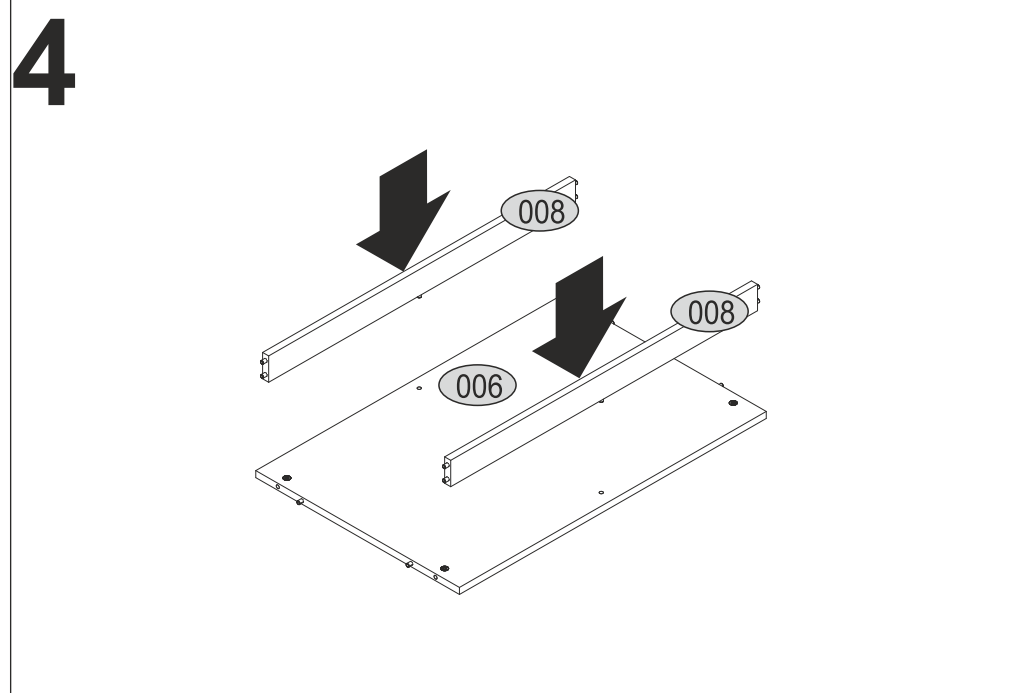






5

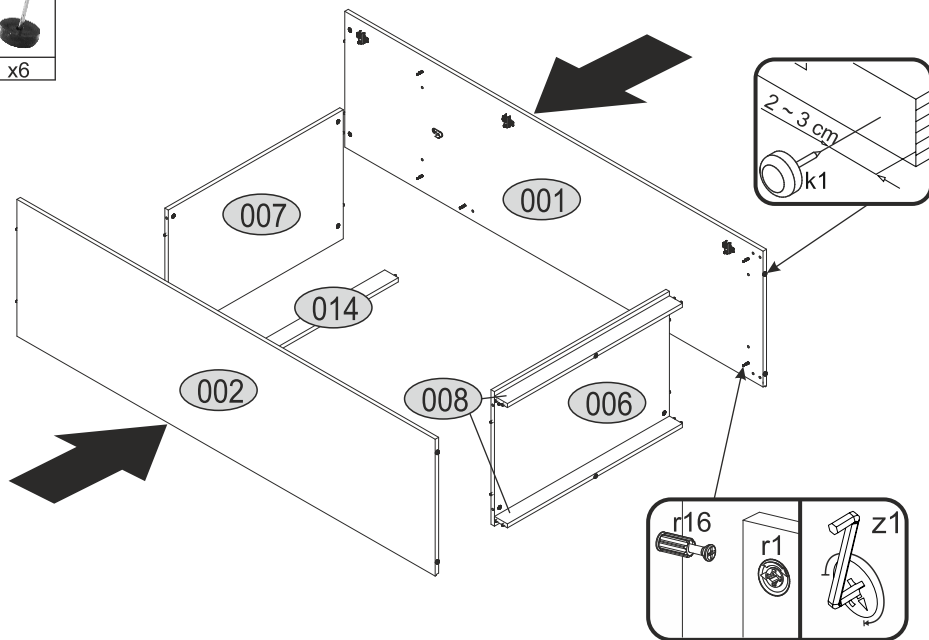



6

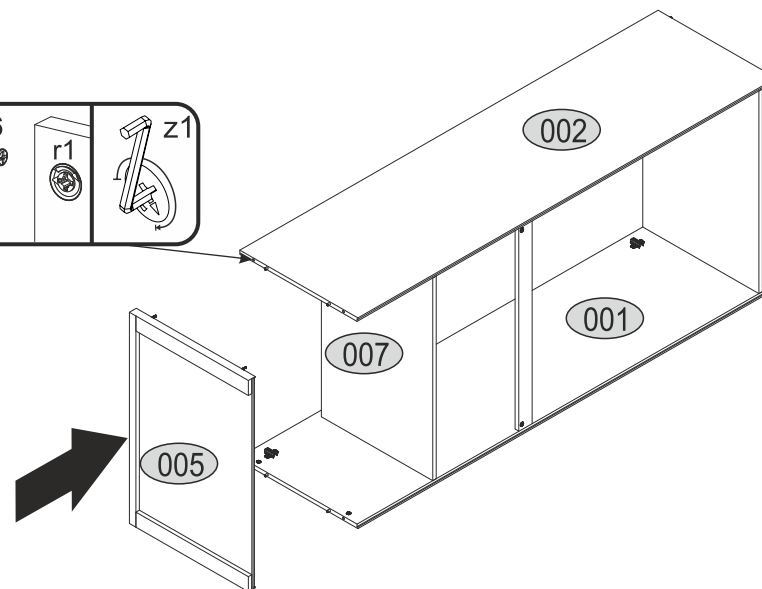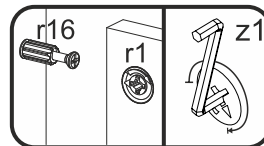

7

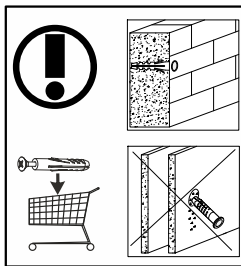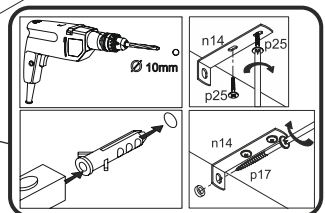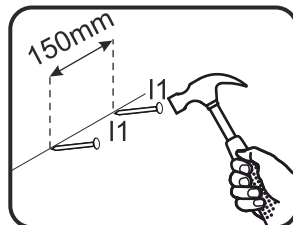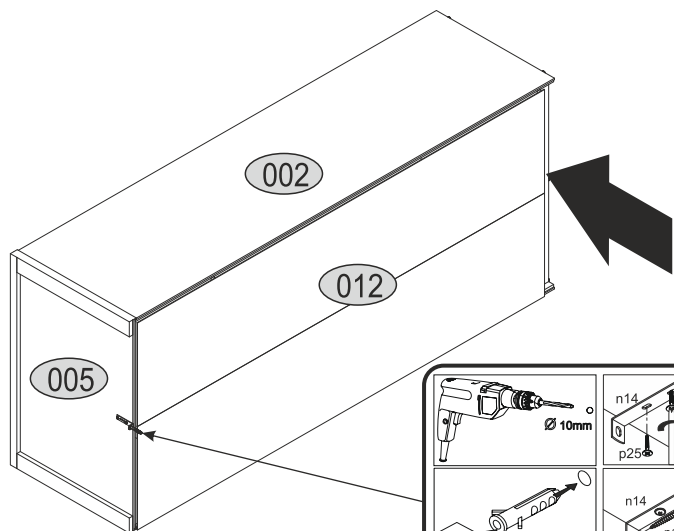

8

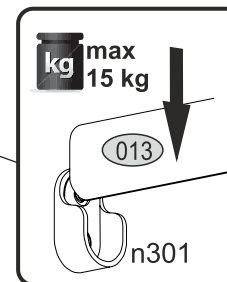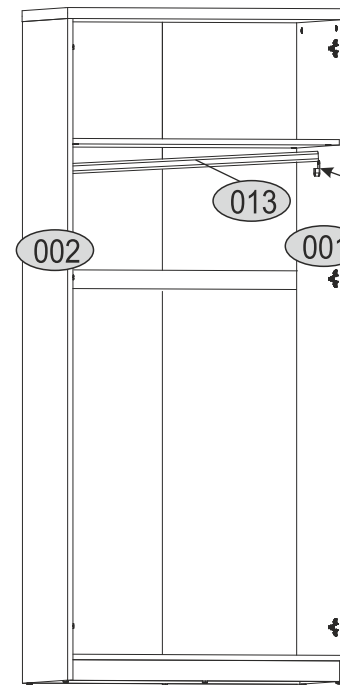

9

