
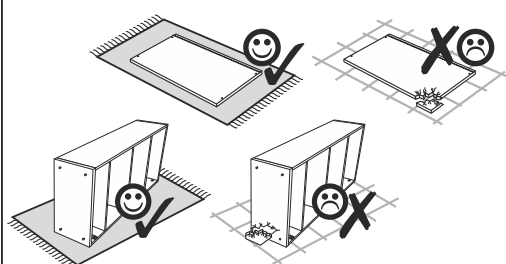
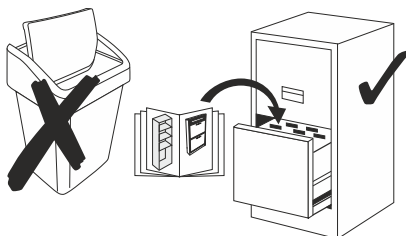
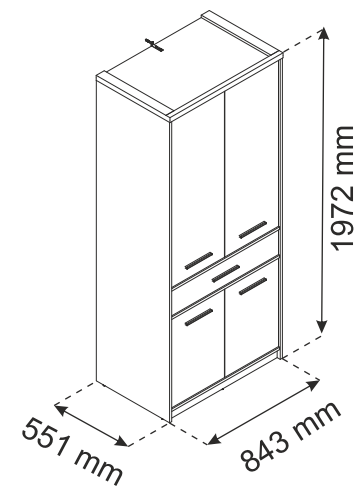
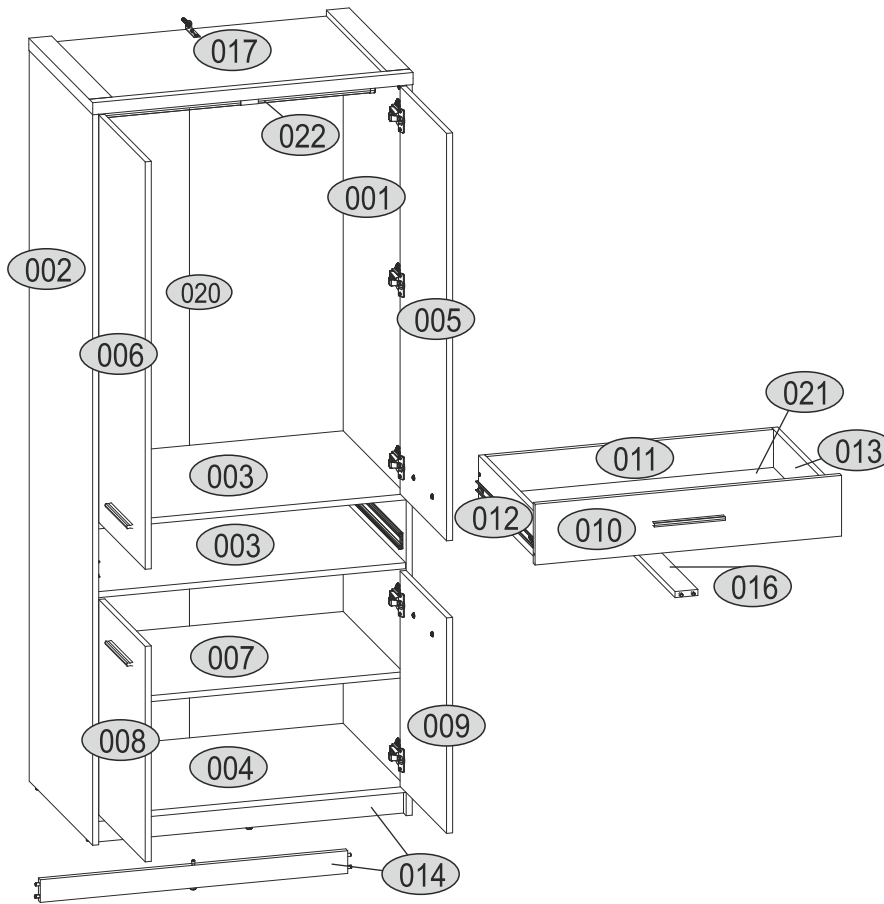
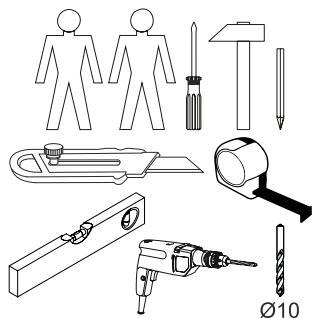


Installation manual



PAVI Wadrobe 4D1S

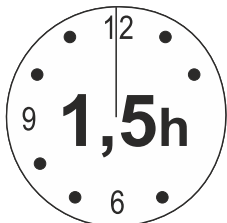

Code	Dimensions			Package	
001	1934	546	16	1	2/3
002	1934	546	16	1	2/3
003	809	537	16	2	1/3
004	809	537	16	1	1/3
005	1078	400	16	1	3/3
006	1078	400	16	1	3/3
007	809	515	16	1	1/3
008	570	400	16	1	3/3
009	570	400	16	1	3/3
010	803	160	16	1	1/3
011	752	120	16	1	1/3
012	500	120	16	1	1/3
013	500	120	16	1	1/3
014	809	60	16	2	1/3
016	484	60	16	1	1/3
017	843	551	16/32	1	1/3
020	1882	826	2,5	2	2/3
021	502	770	2,5	1	1/3
022	804	30	15		1/3
accessories				1	1/3






Accessories:

 <p>10x a143</p>	 <p>10x b119</p>	 <p>5x c412.030</p>	 <p>4x d1</p>
 <p>2x e1 Ø7x50</p>	 <p>38x f1 Ø8x30</p>	 <p>1x f3</p>	 <p>6x k1</p>
 <p>1x n14</p>	 <p>1x n25</p>	 <p>2x n260.01</p>	 <p>2x n301</p>
 <p>1x p17 Ø6x50</p>	 <p>42x p25 Ø3.5x16</p>	 <p>10x p42</p>	 <p>40x l1</p>
 <p>1x Lb-500</p>	 <p>18x r1 15x12</p>	 <p>18x r16 Ø5x24</p>	 <p>10x s2</p>
 <p>1x z1</p>			

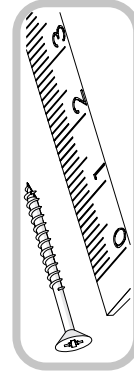



1

r1	r16	f1	p42	c412.030	n25	p25
x14	x6	x34	x2	x1	x1	x2

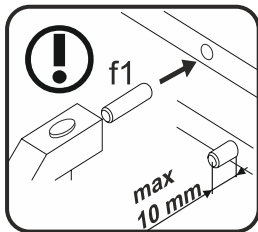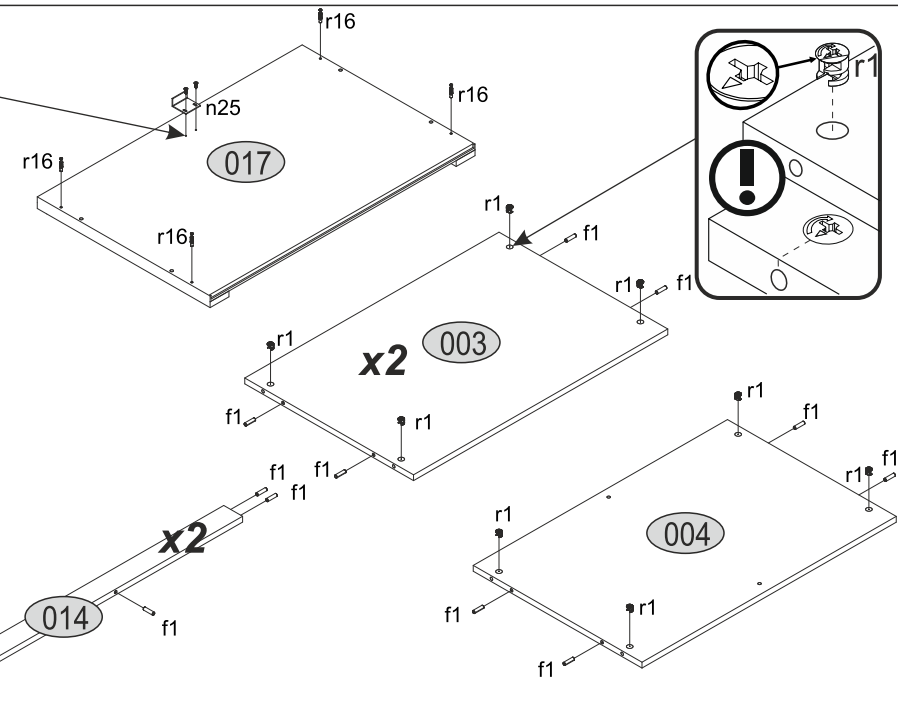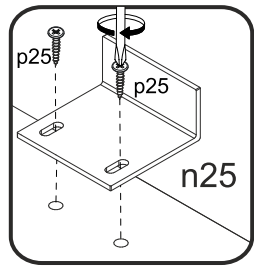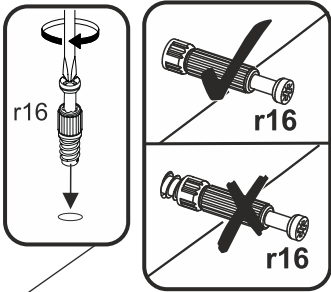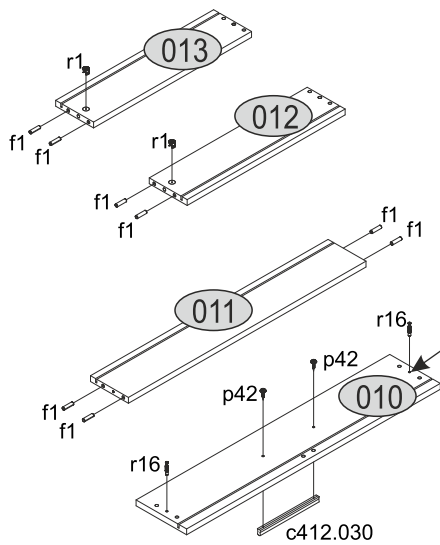





2

p42	c412.030	a143	p25
x8	x4	x10	x20

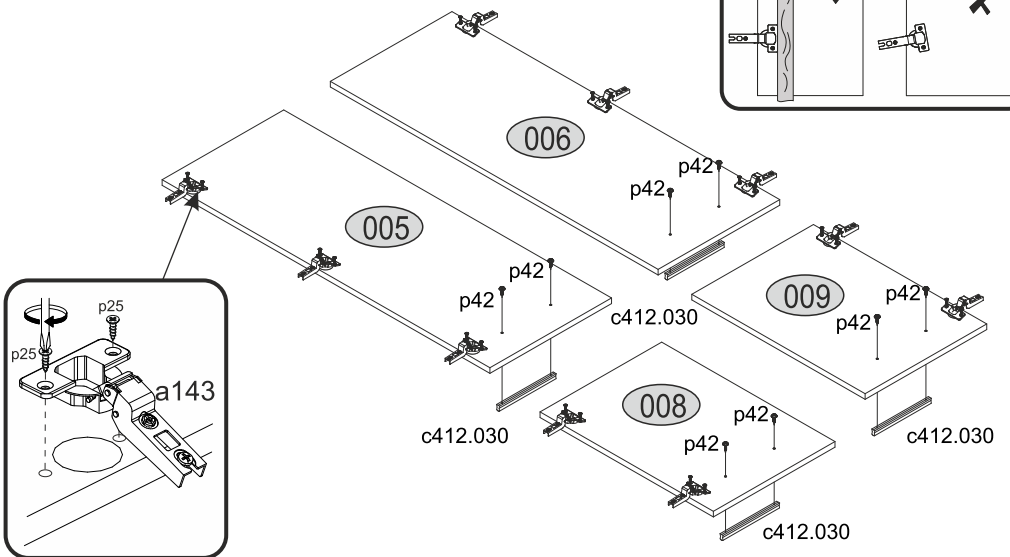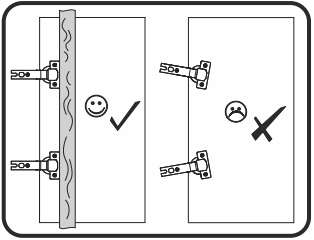


3


n301	r1	r16	f1	p25	d1	b119	lb-500
x2	x4	x12	x4	x10	x4	x10	x1

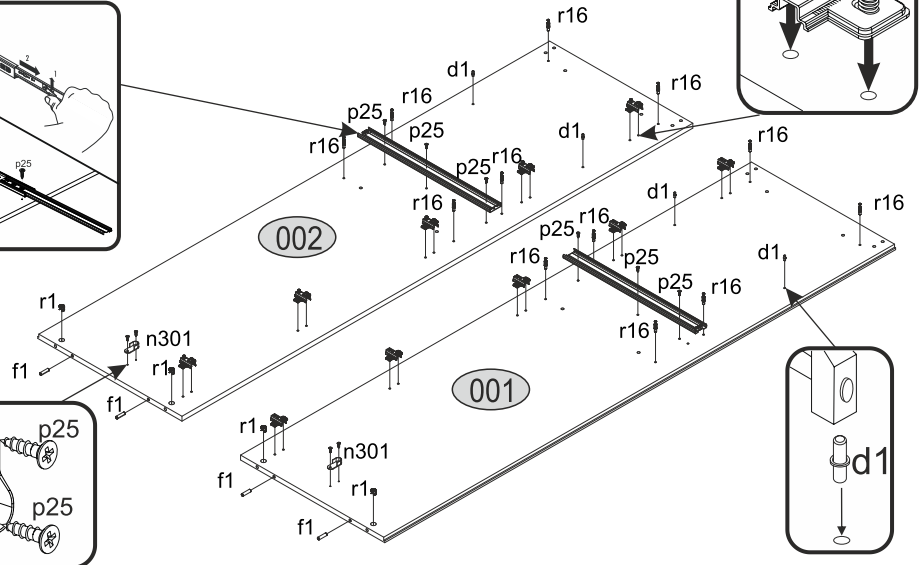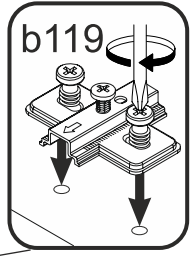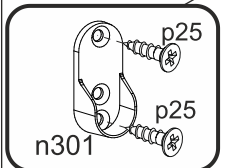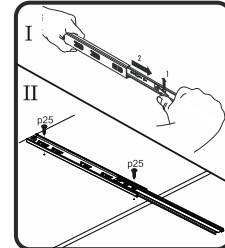


4

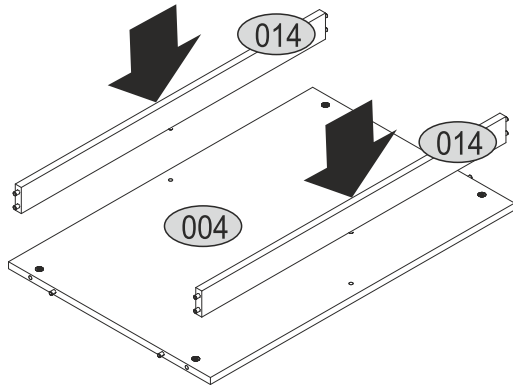

5


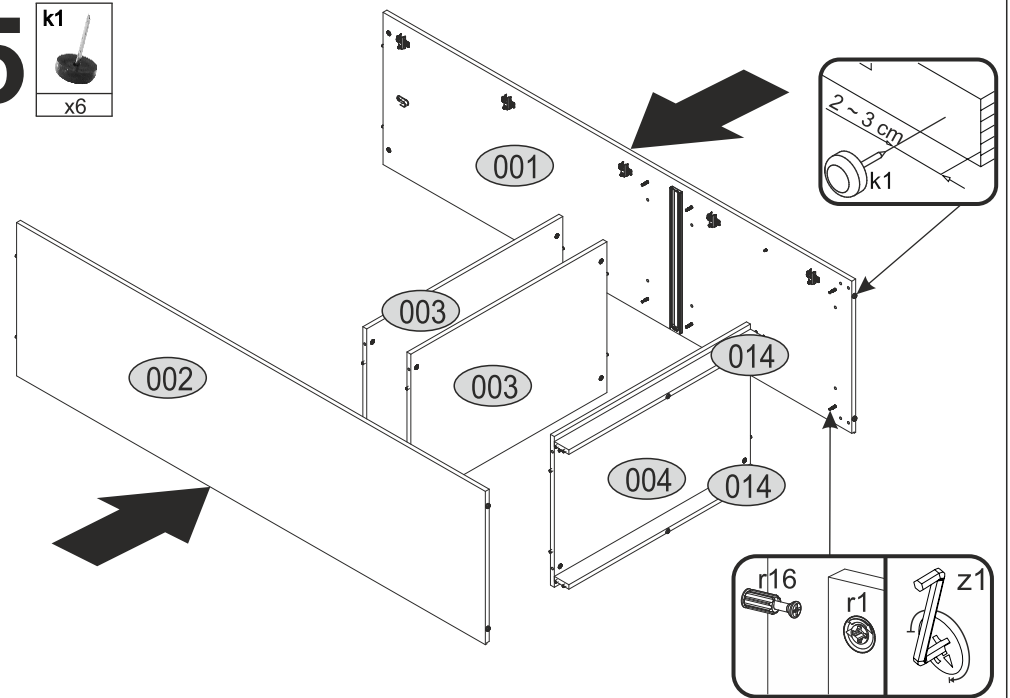


6


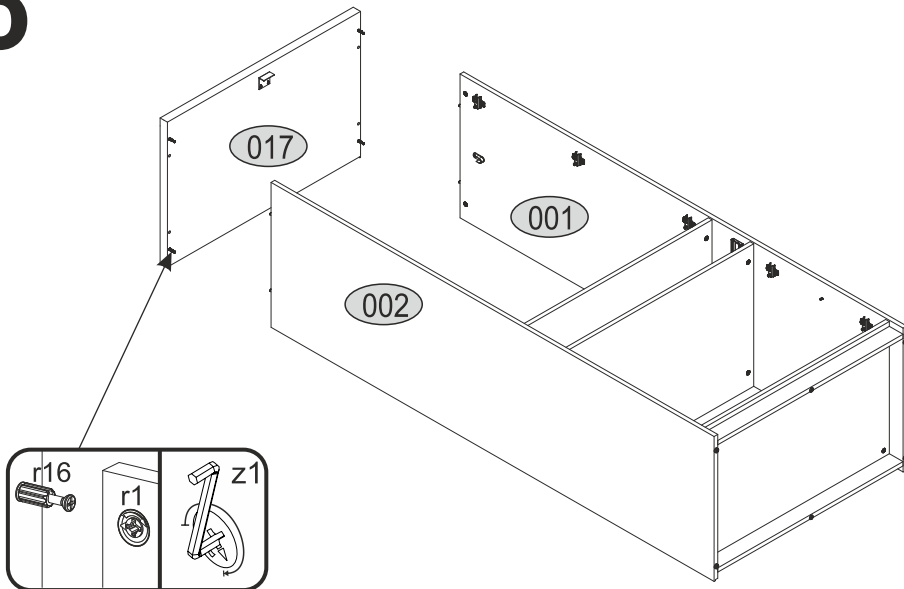


7


p25 	l1 	n14 	f3 	p17 	n260.01
x4	x40	x1	x1	x1	x2

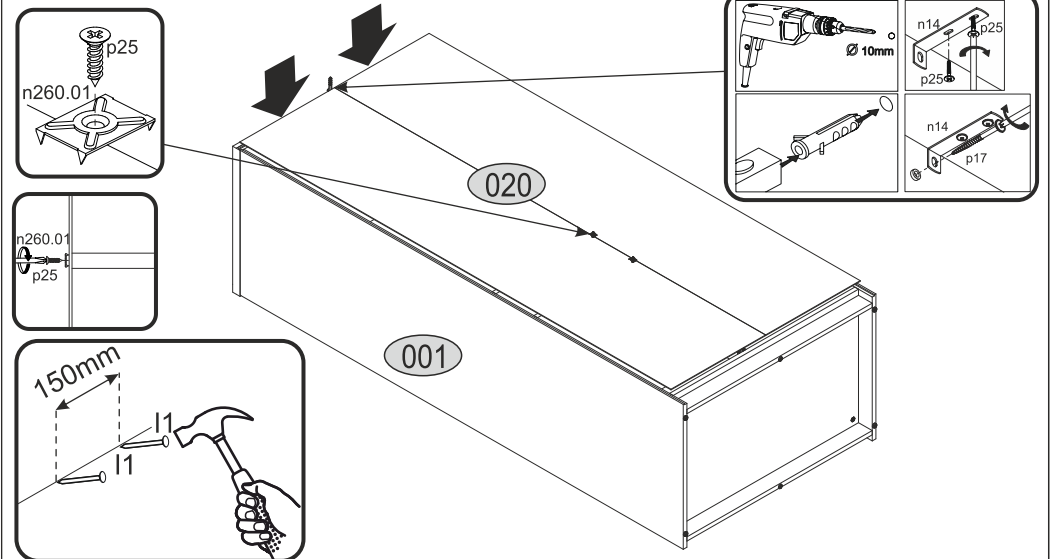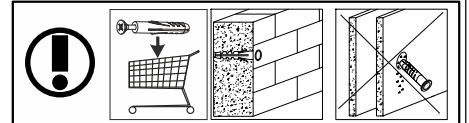



8

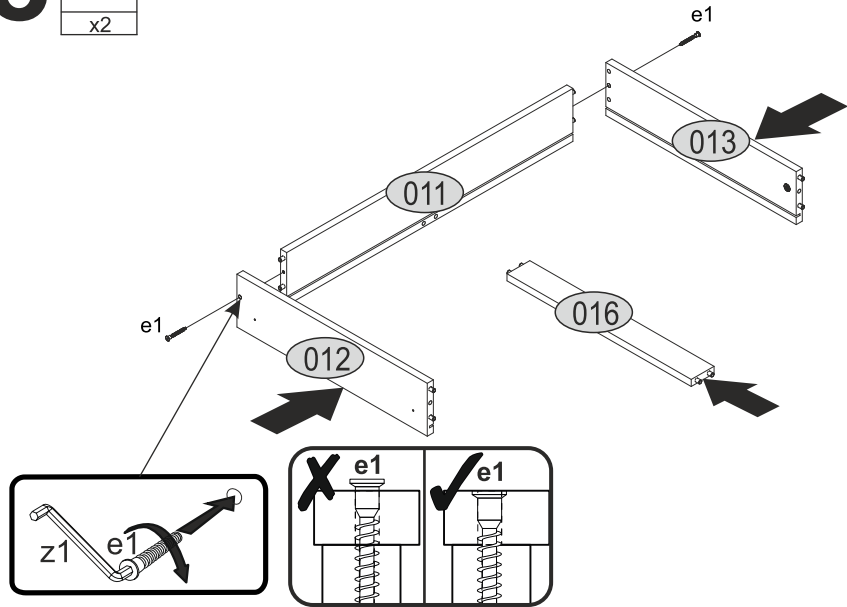


9

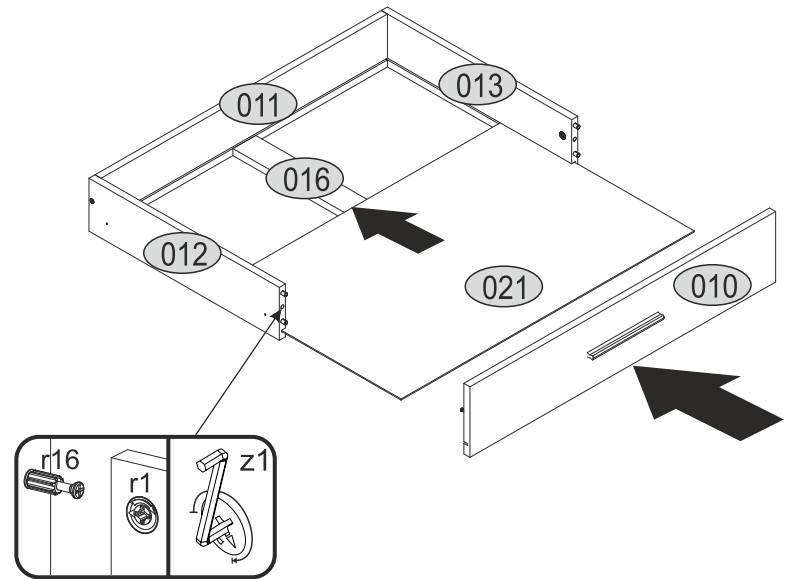


10

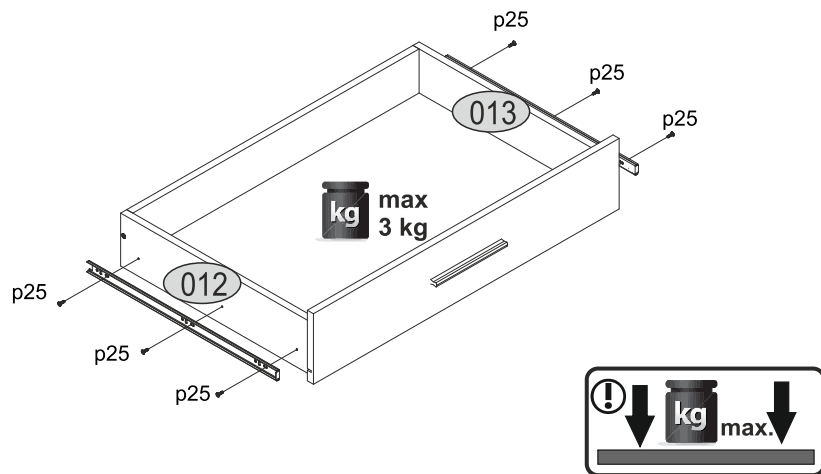

11

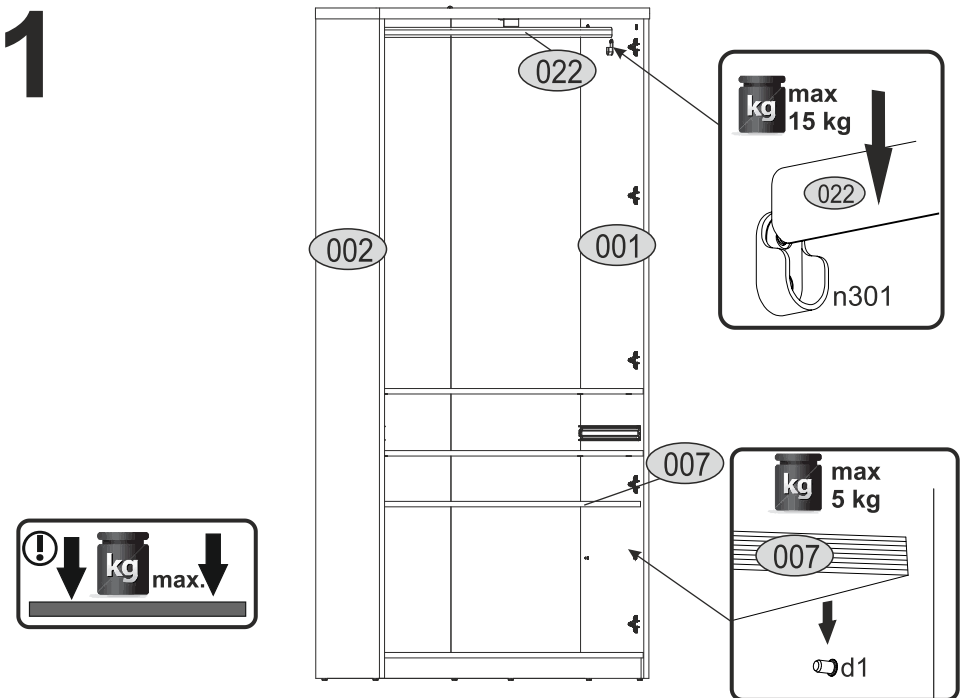

12

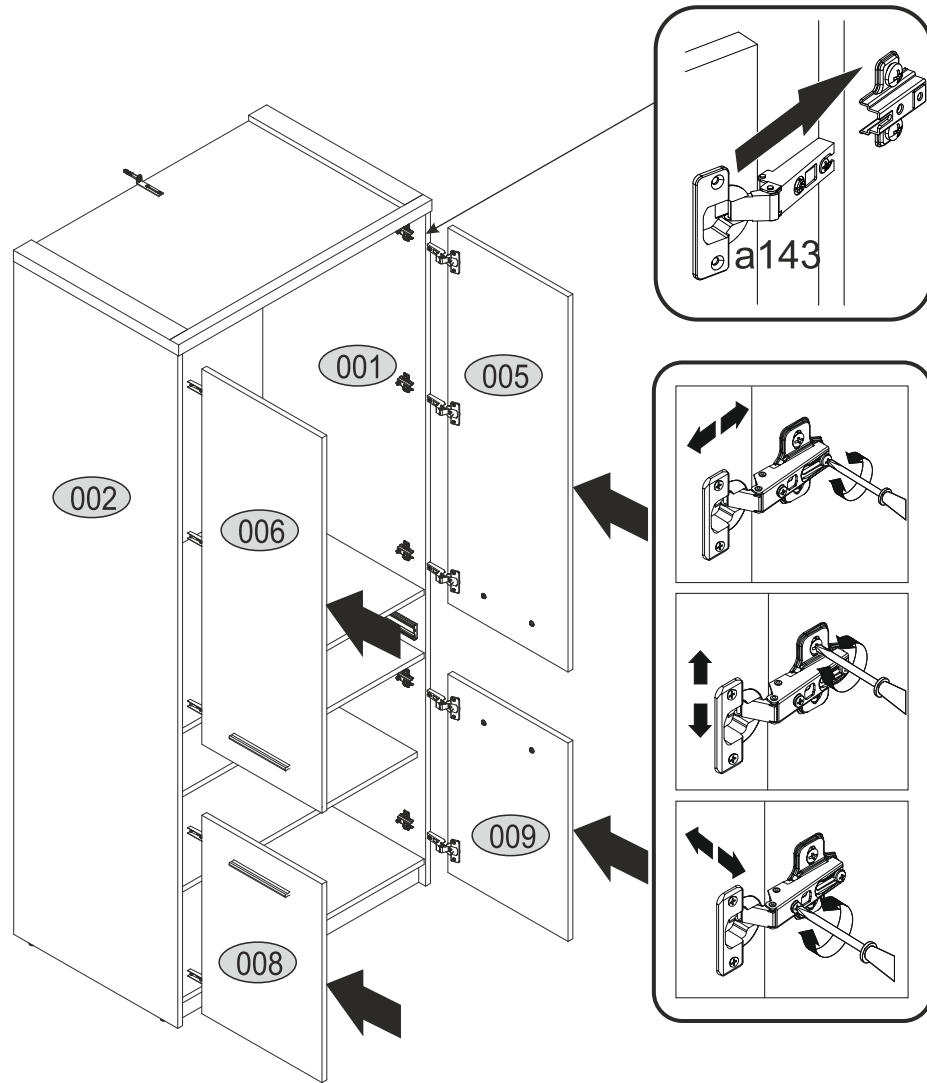

13

s2
x10

