



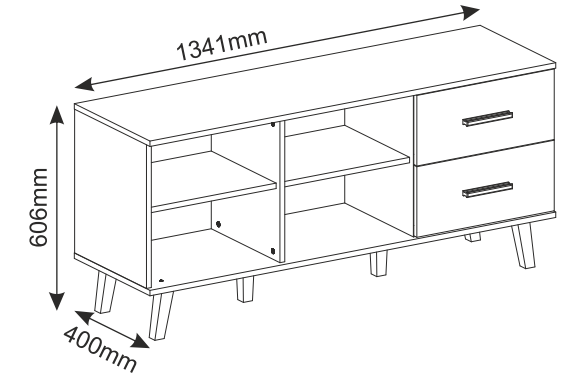
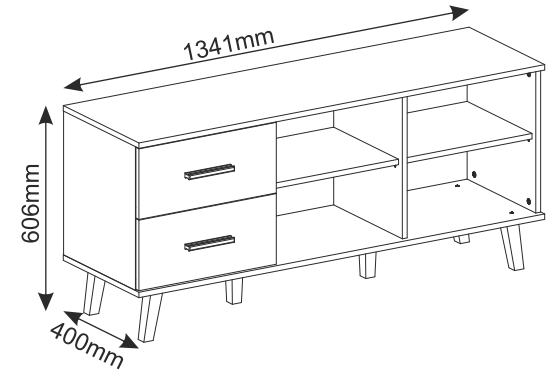



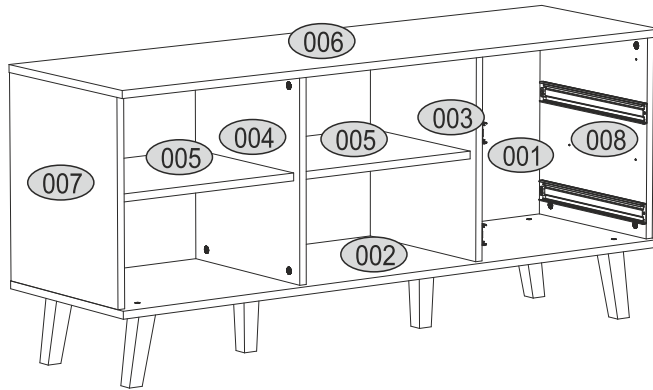


Installation manual

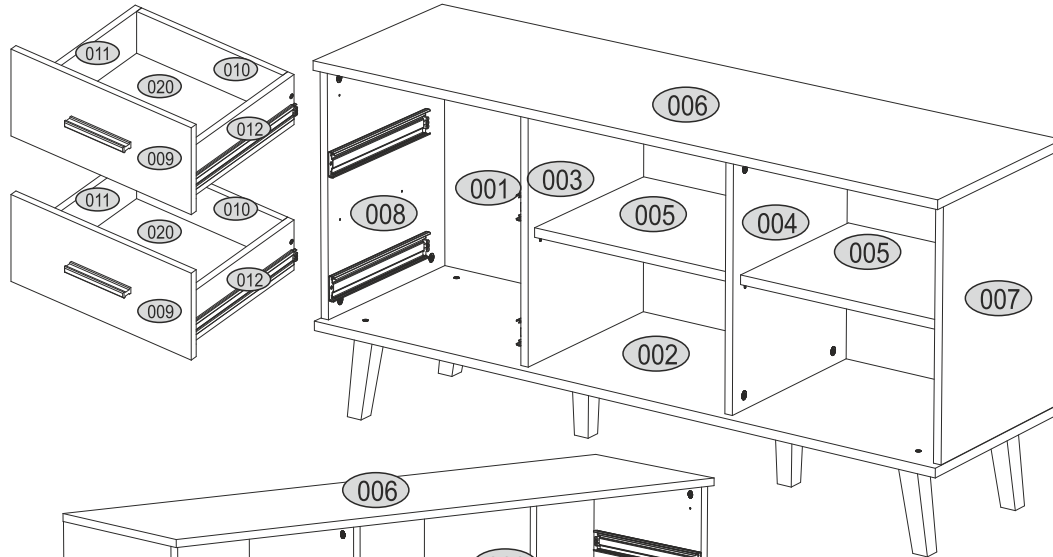

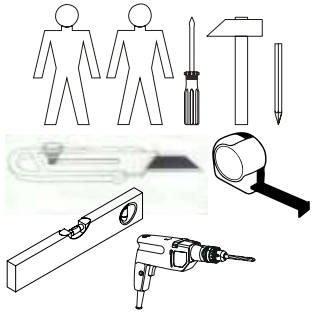

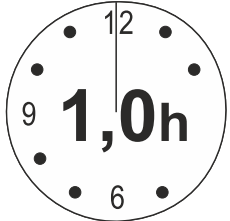

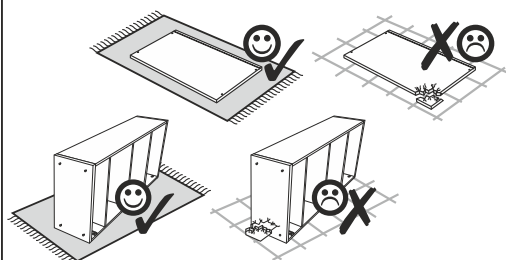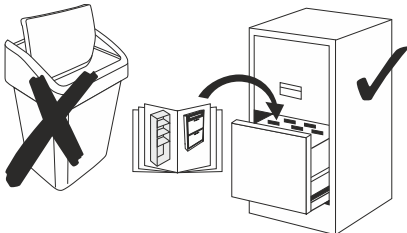







CABINET 2S 134




Code	Dimensions				Package
	mm	mm	mm	mm	
001	424	1307	16	1	1/2
002	1341	400	16	1	2/2
003	424	363	16	1	1/2
004	424	363	16	1	1/2
005	425	343	16	2	1/2
006	1341	400	16	1	2/2
007	424	380	16	1	2/2
008	424	380	16	1	2/2
009	454	208	16	2	1/2
010	368	120	16	2	1/2
011	350	120	16	2	2/2
012	350	120	16	2	1/2
013	352	386	3	2	2/2
accessories				2	1/2




Accessories:


<p>x2 lb-350</p> 	<p>x2 c57</p> 	<p>x20 r1</p> 	<p>x10 e1</p> <p>Ø7x50mm</p> 
<p>x8 s1</p> 	<p>x42 f1</p> <p>Ø8x30mm</p> 	<p>x4 p9</p> 	<p>x1 z1</p> 
<p>x20 r16</p> 	<p>x24 p25</p> 	<p>x24 s2</p> 	<p>x8 d18</p> 
<p>x2 k87</p> 	<p>x4 k88</p> 		

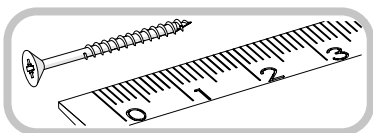


L

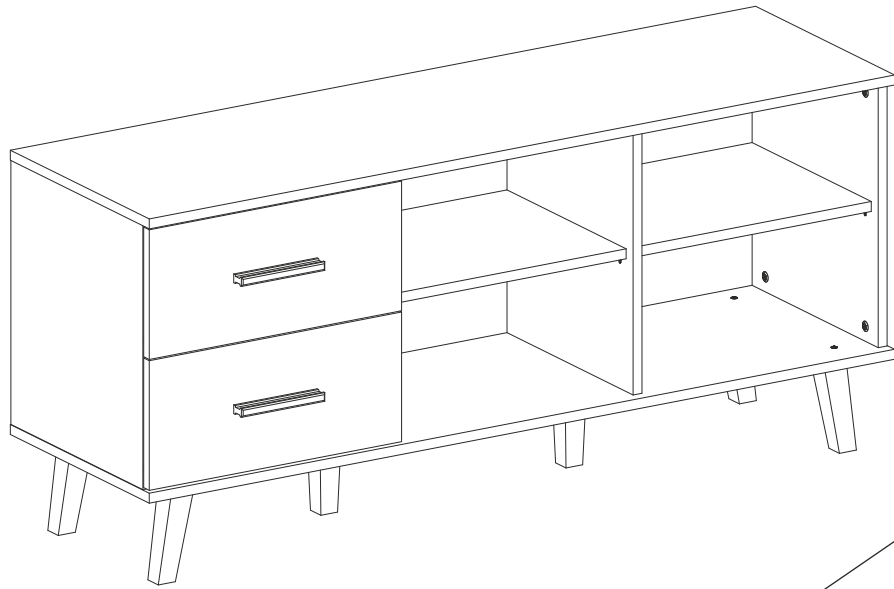


R

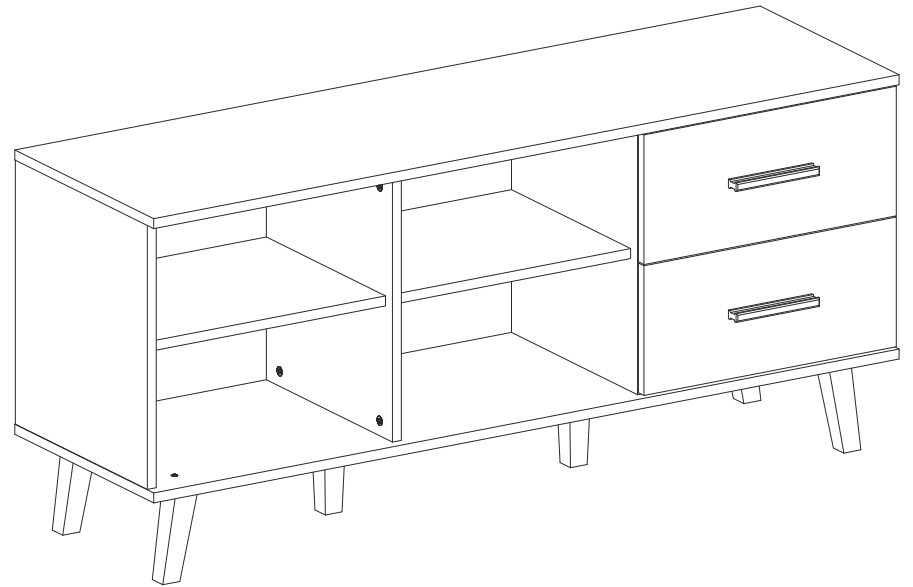


1L

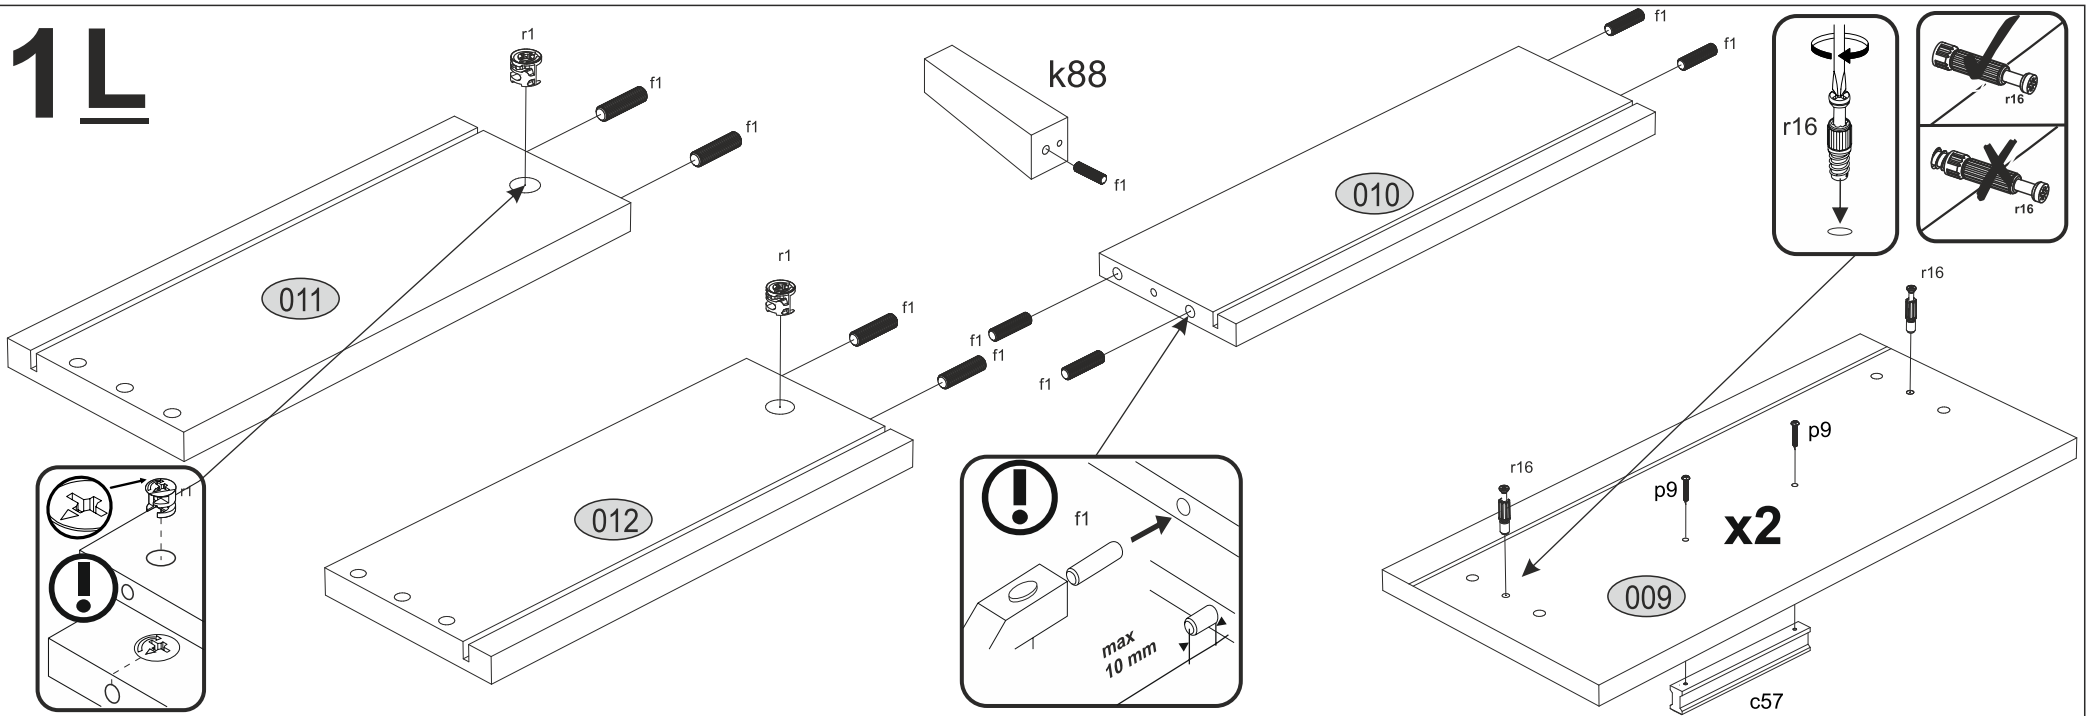


2

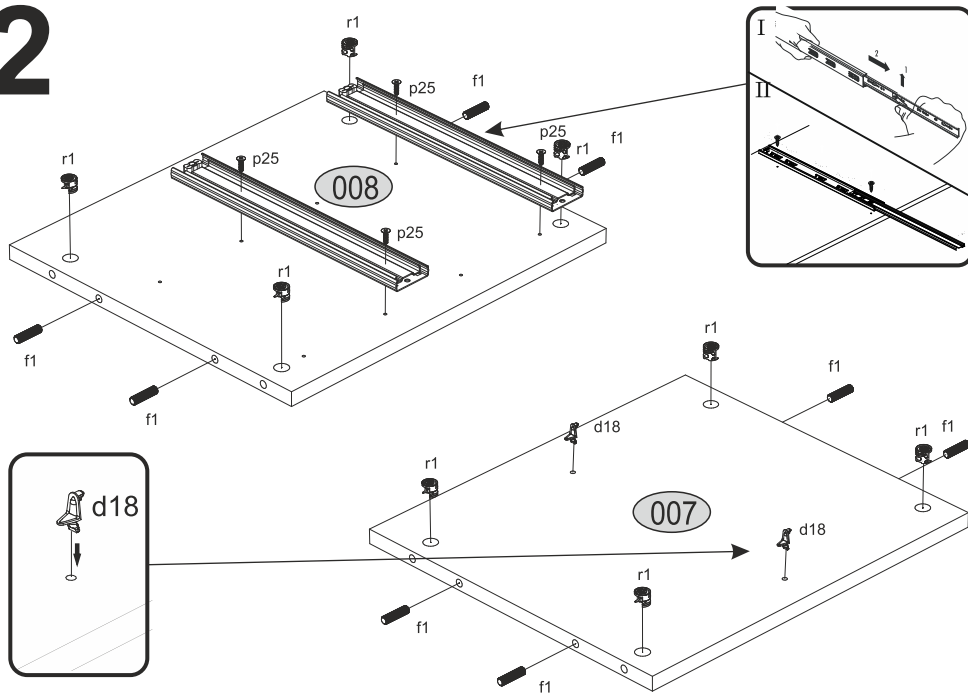


3

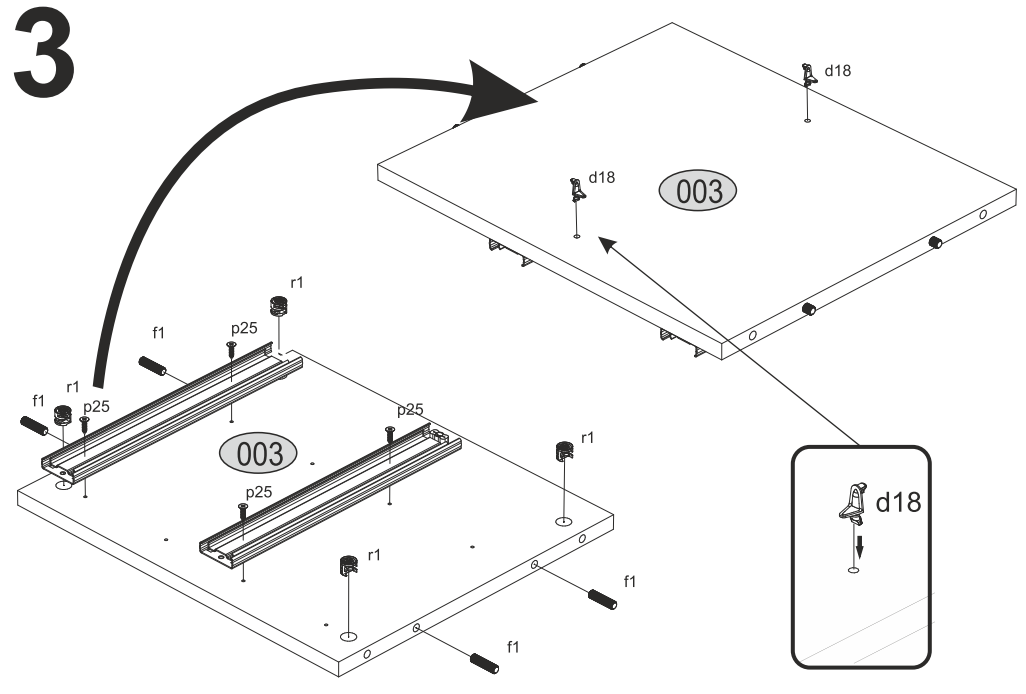


4

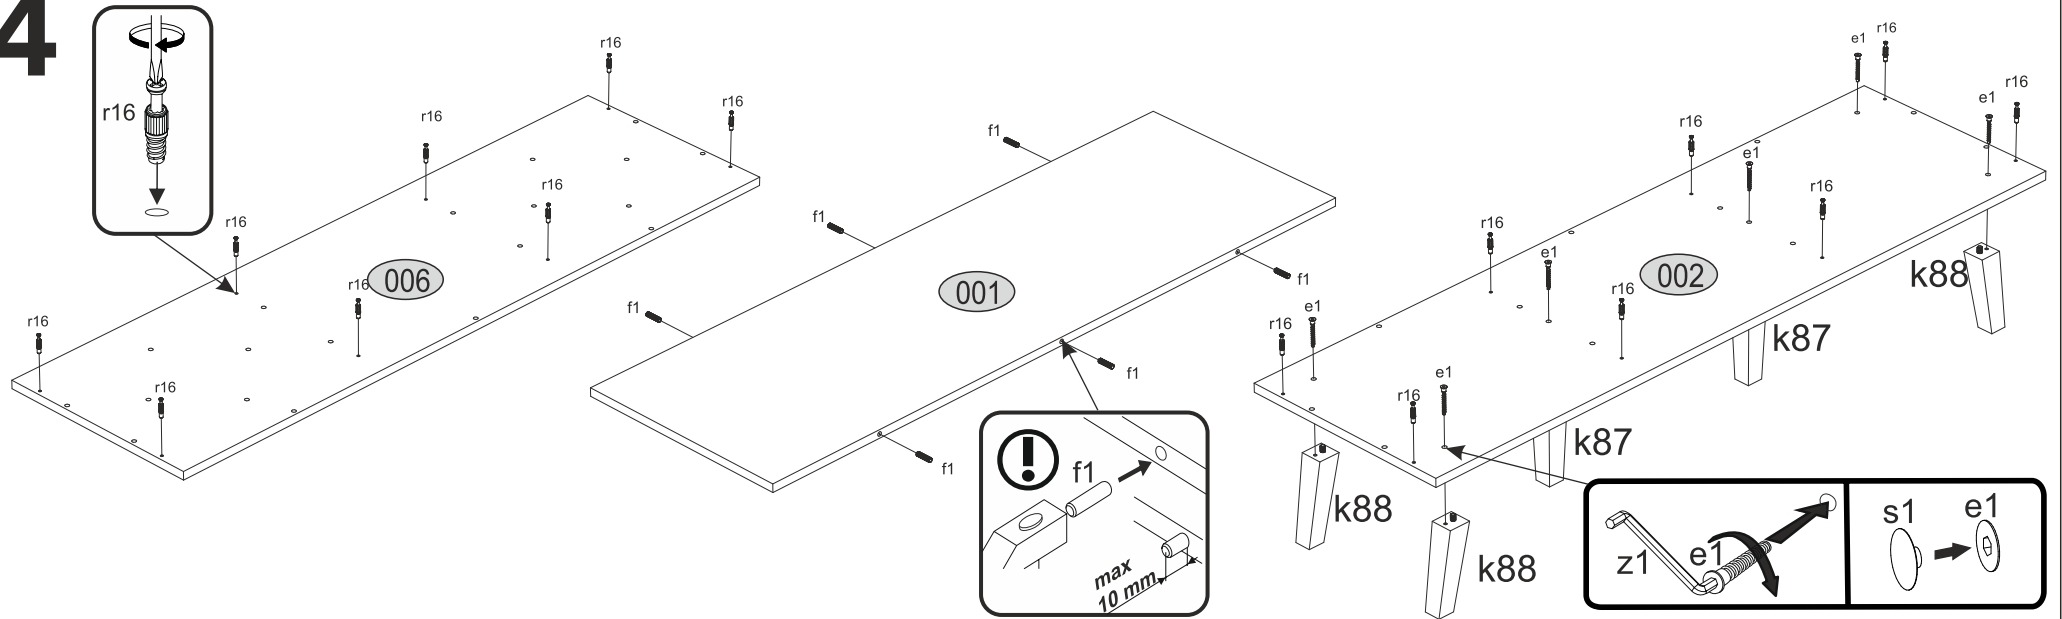


5

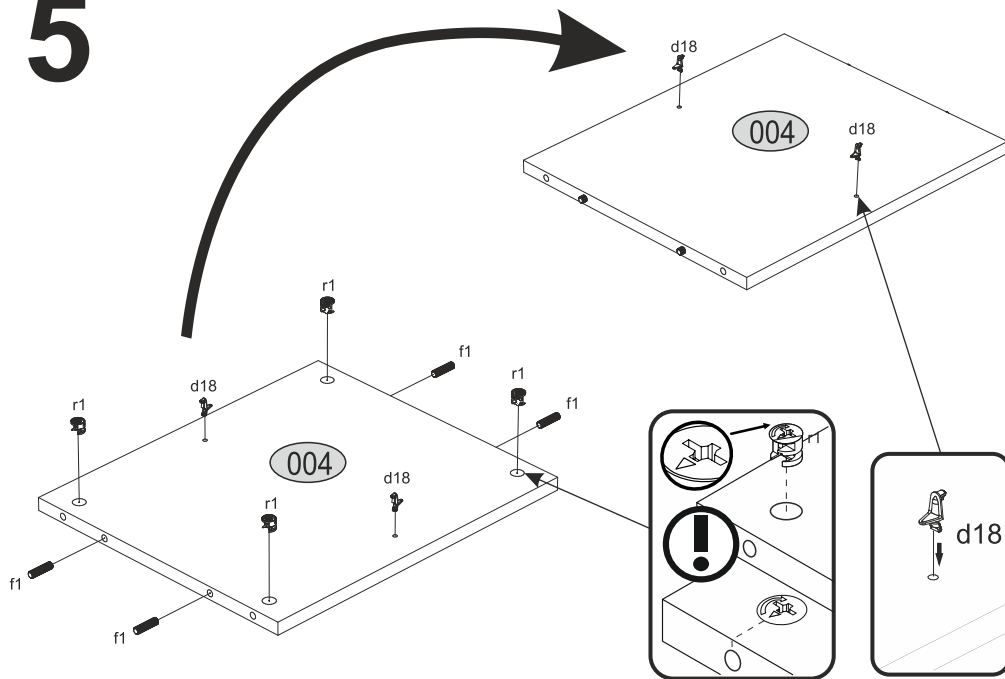


6

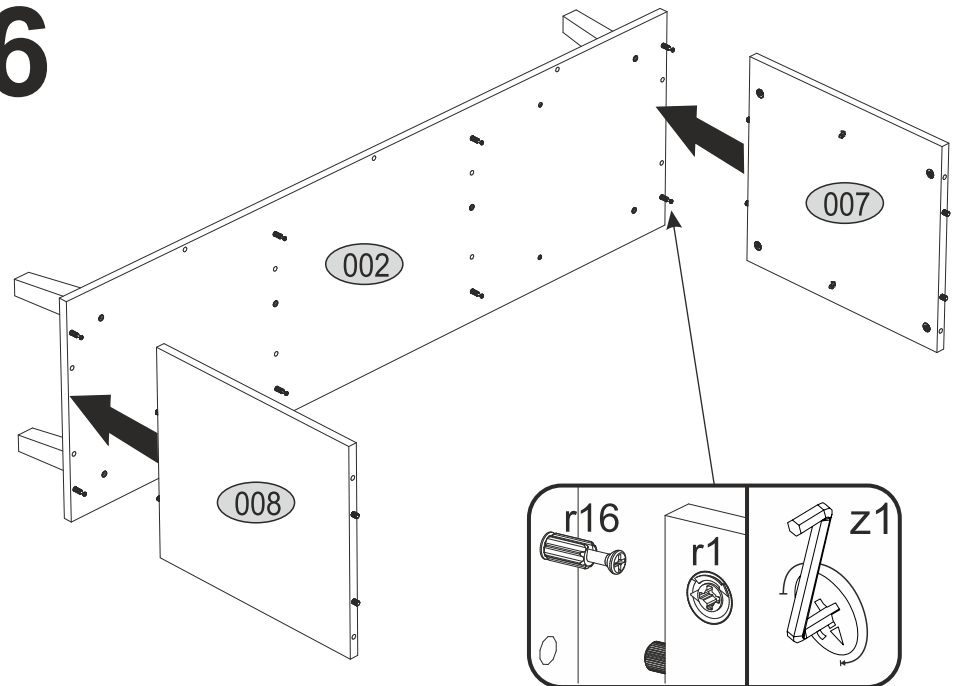


7

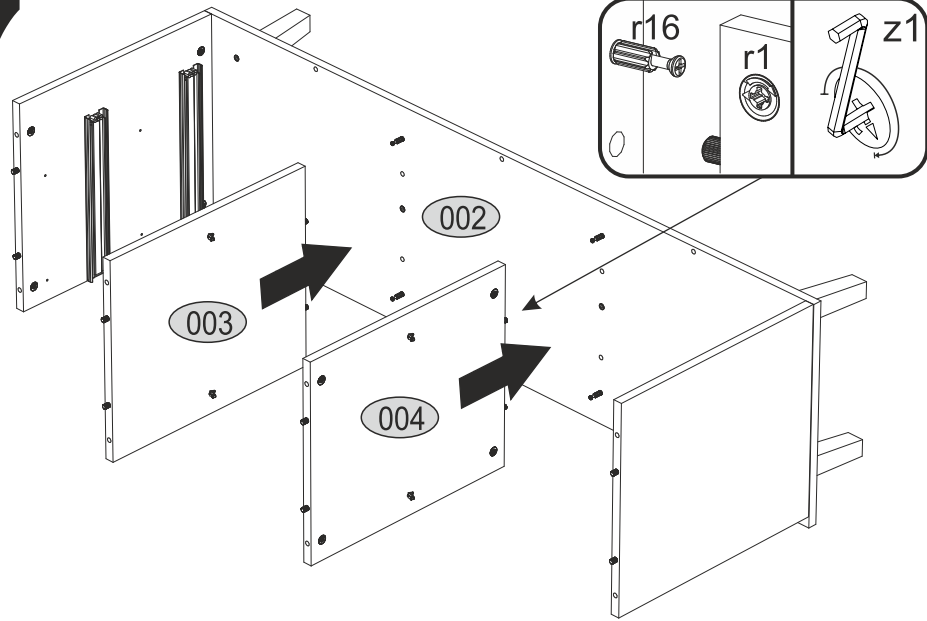


8

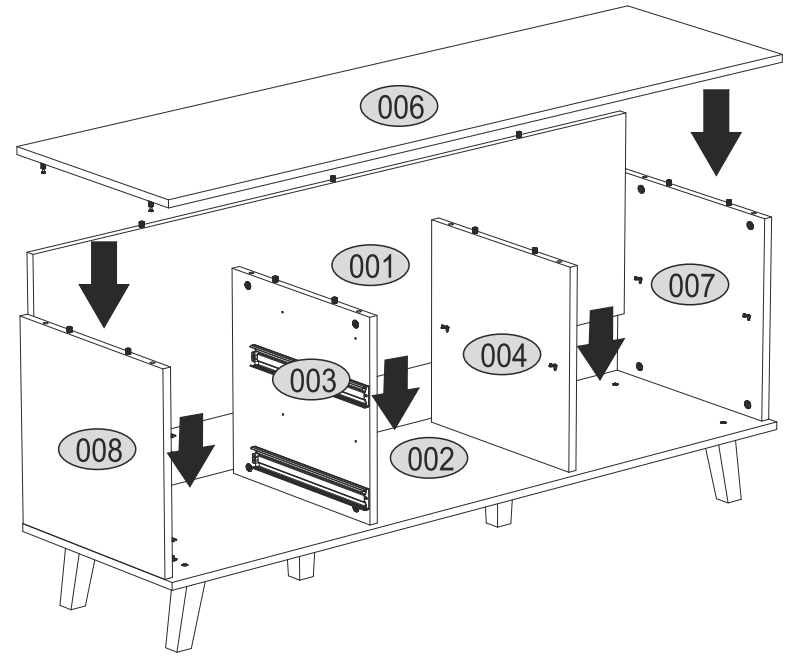


9

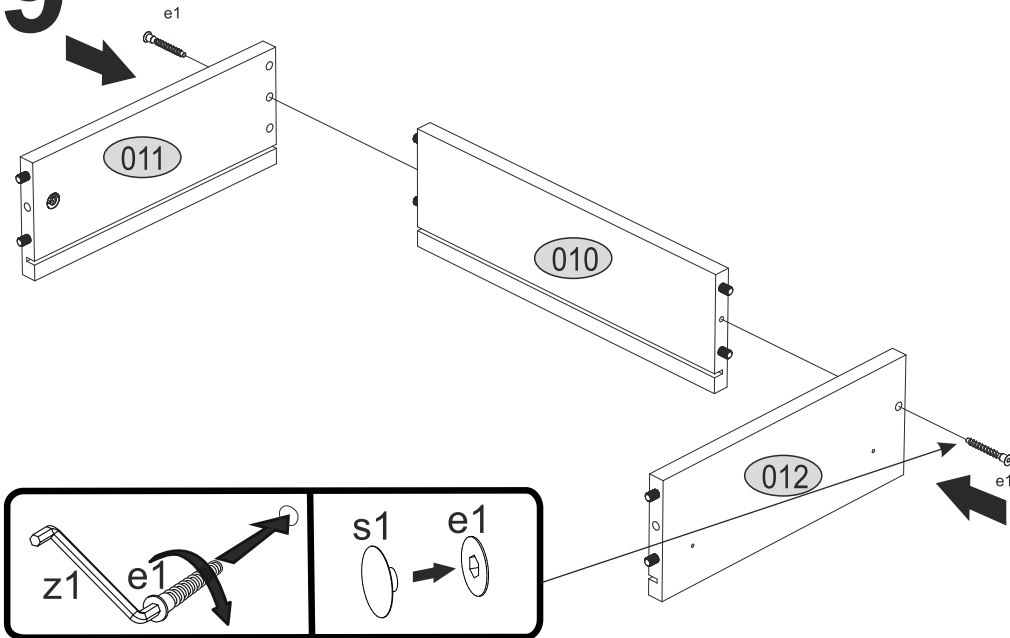


10

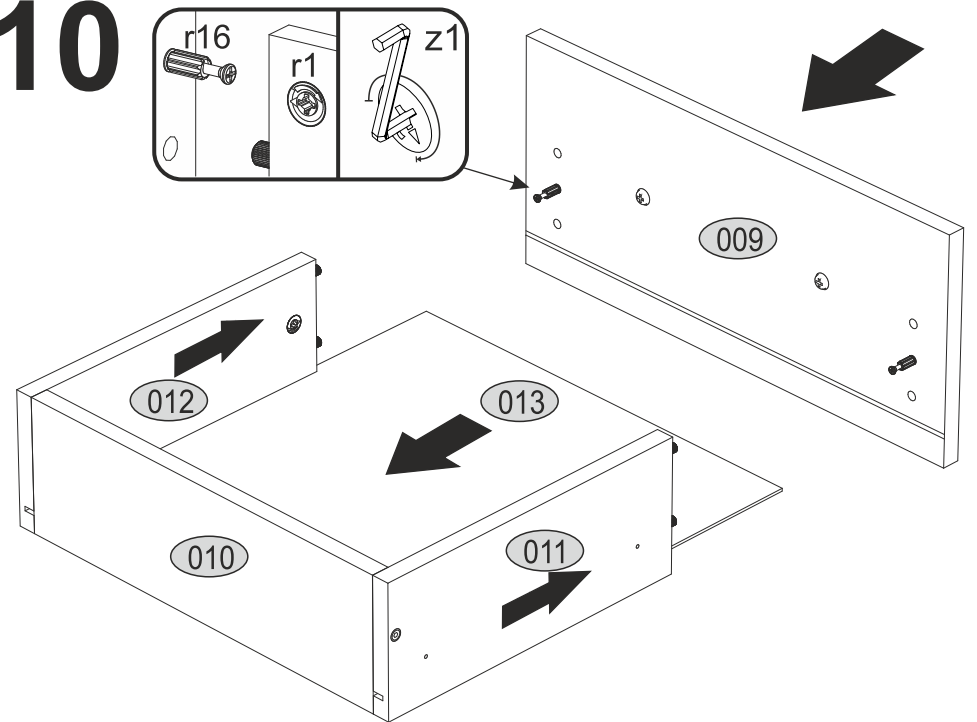


13

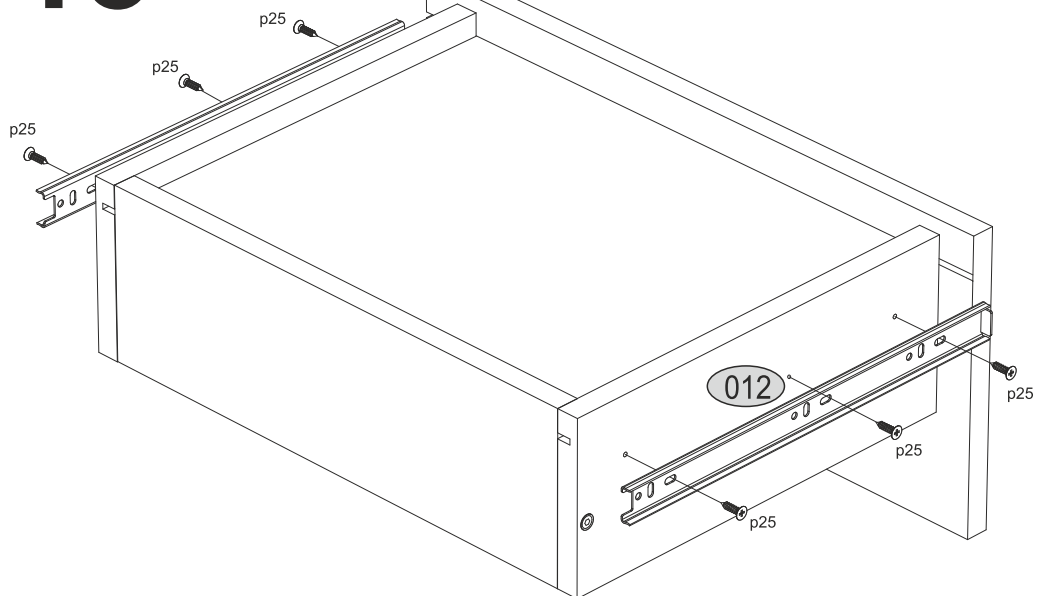


14

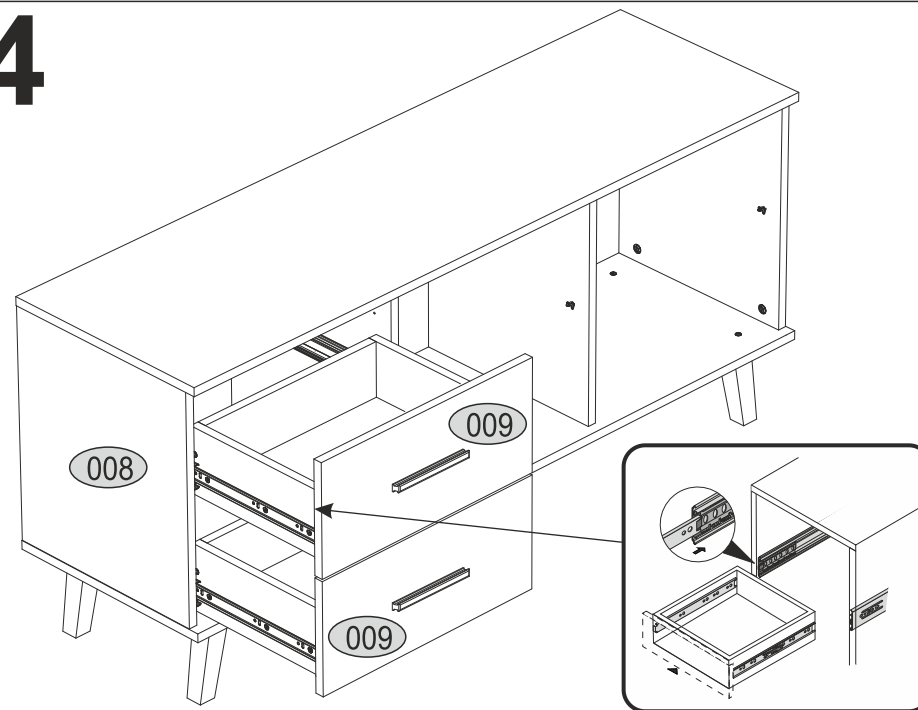


15

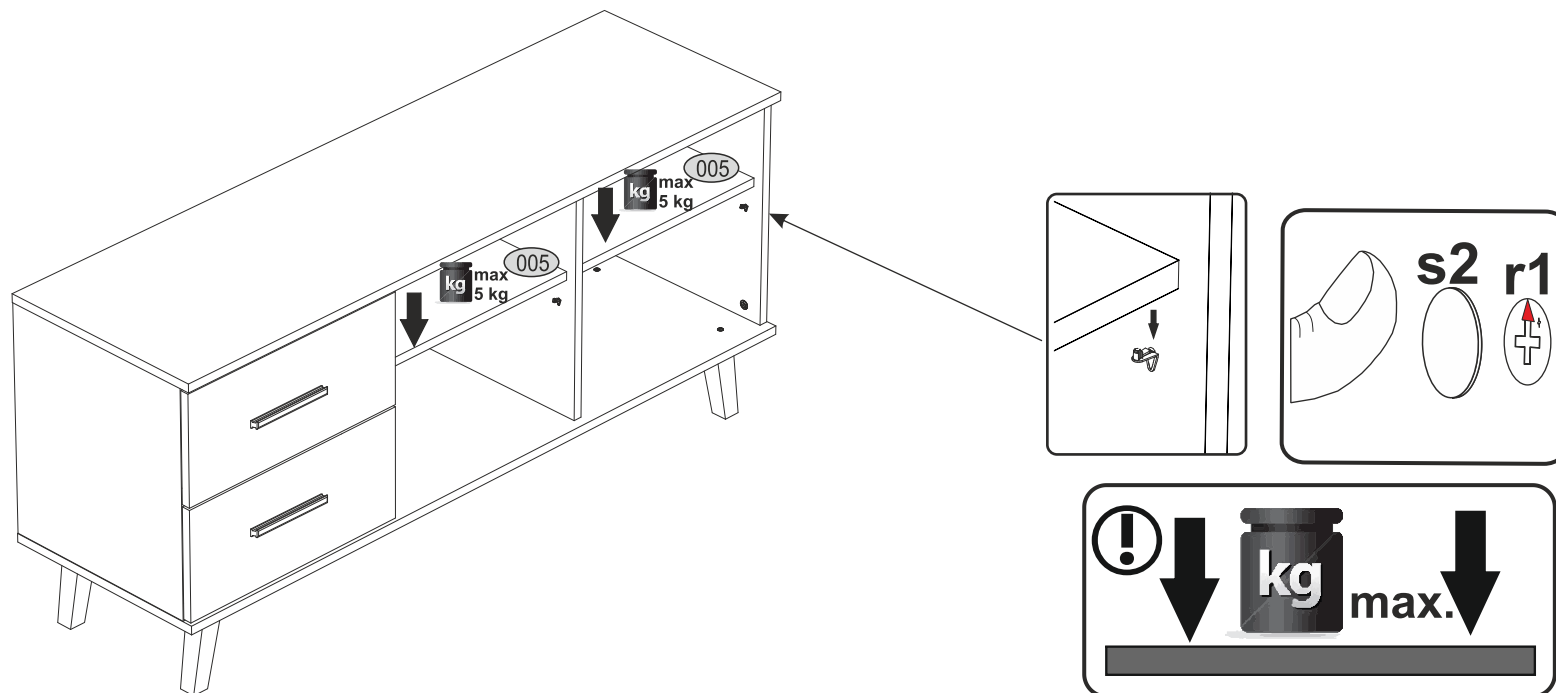


1R

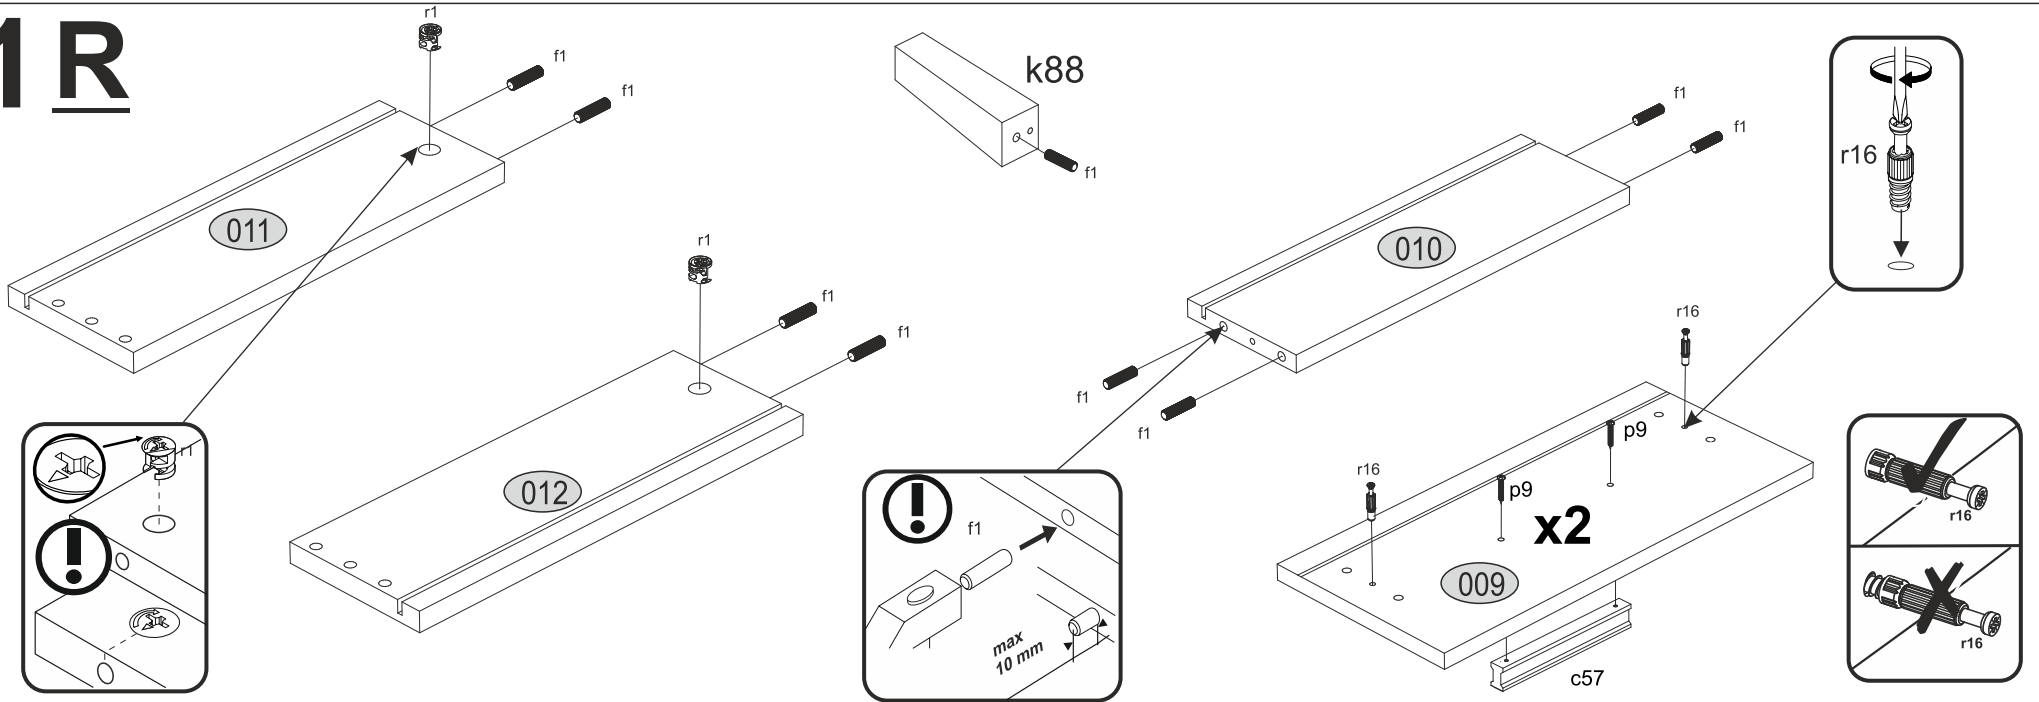


2

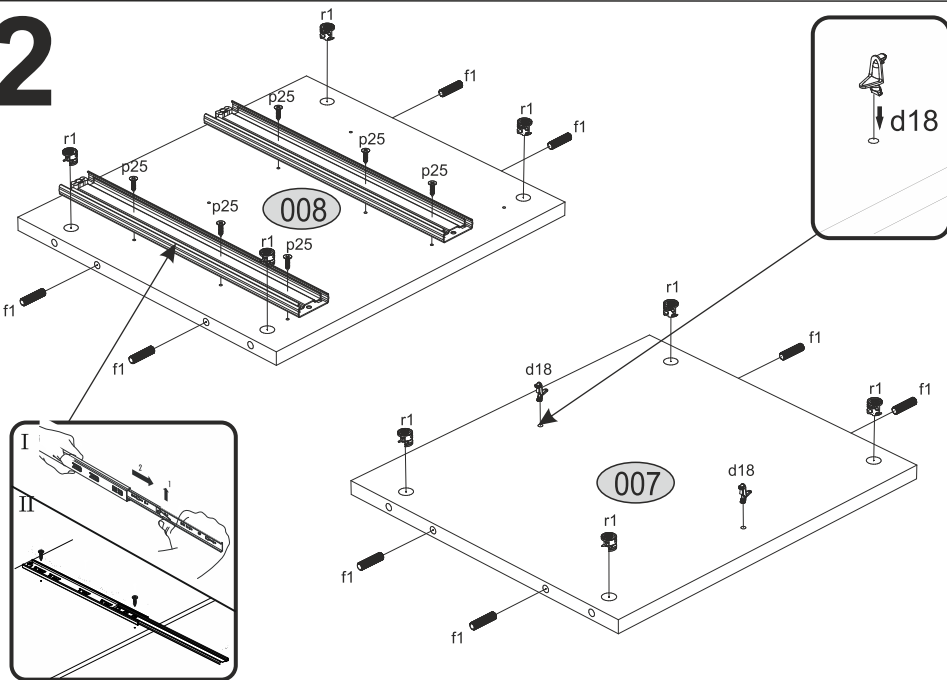


3

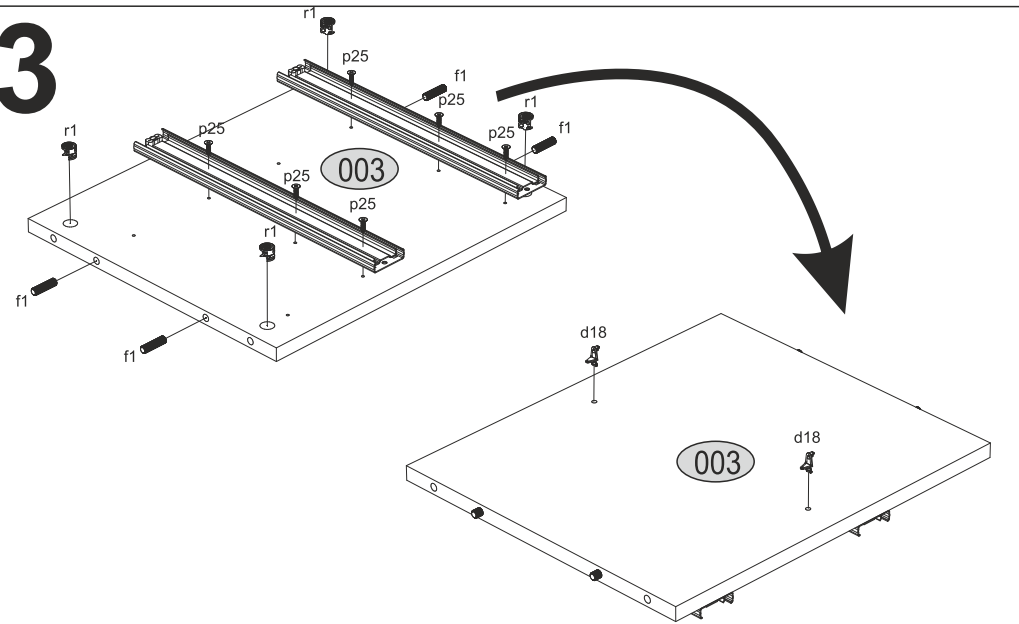


4

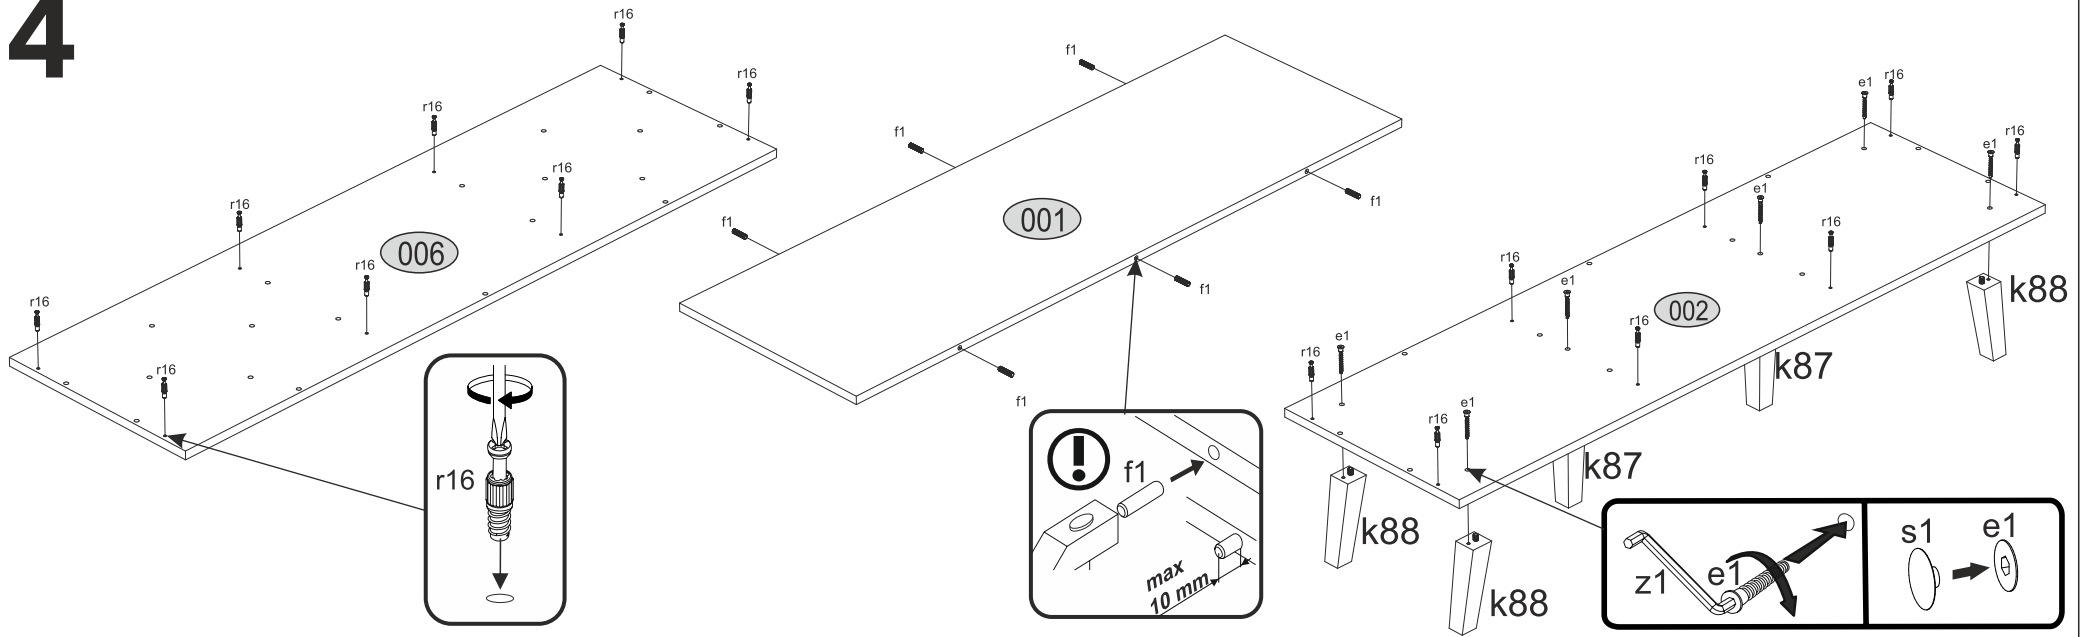


5

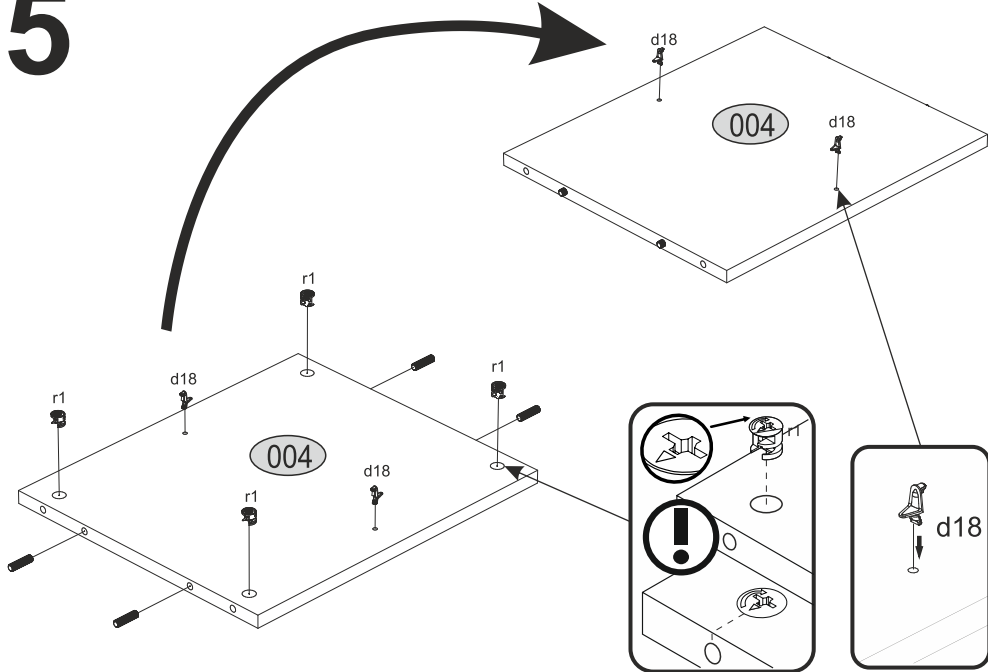


6

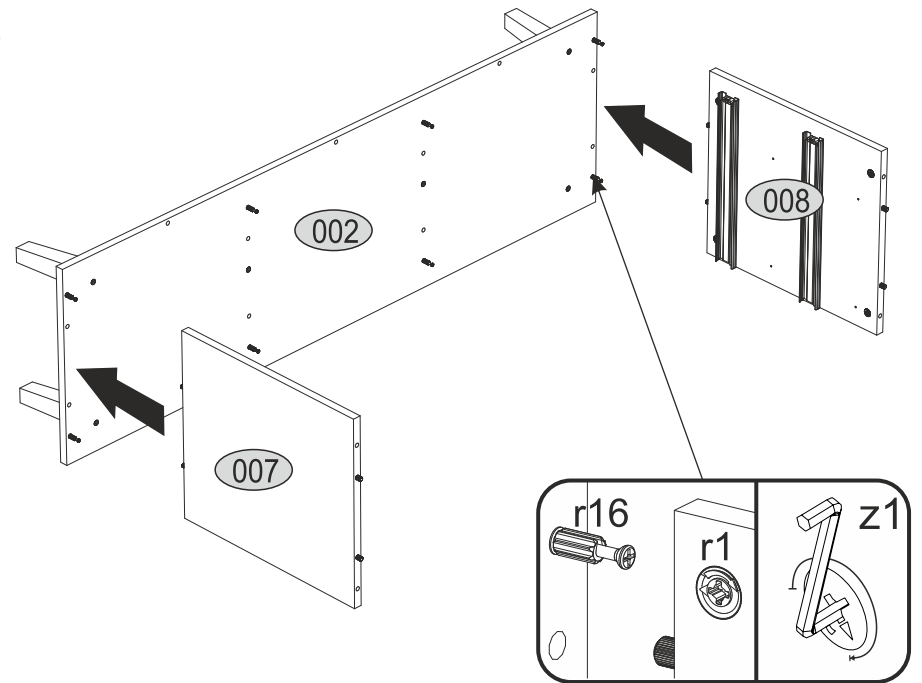


7

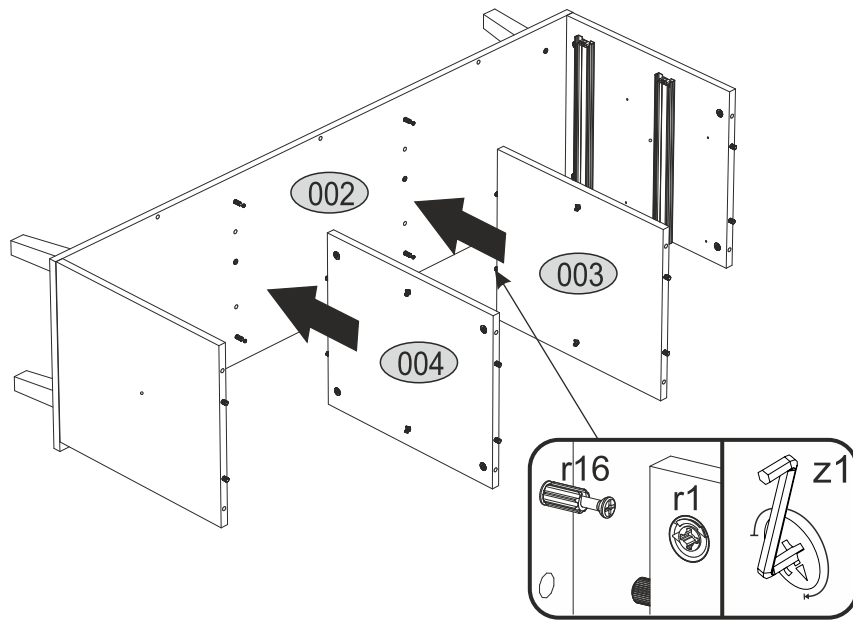


8

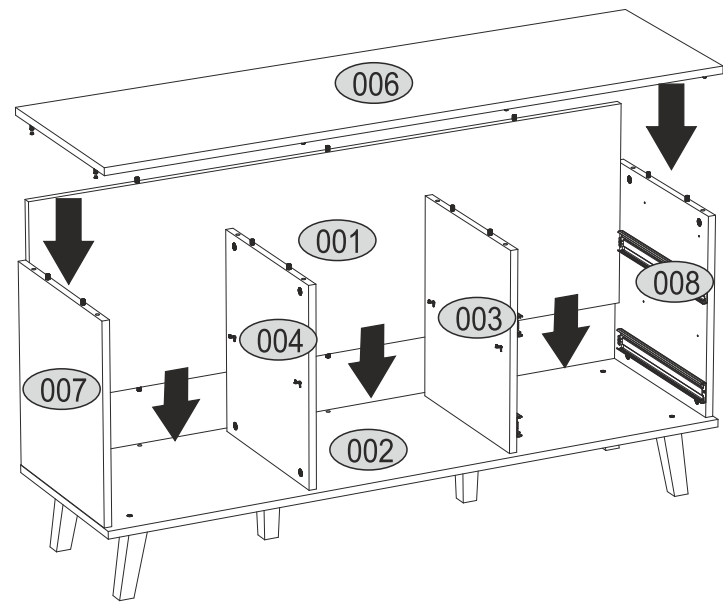


9

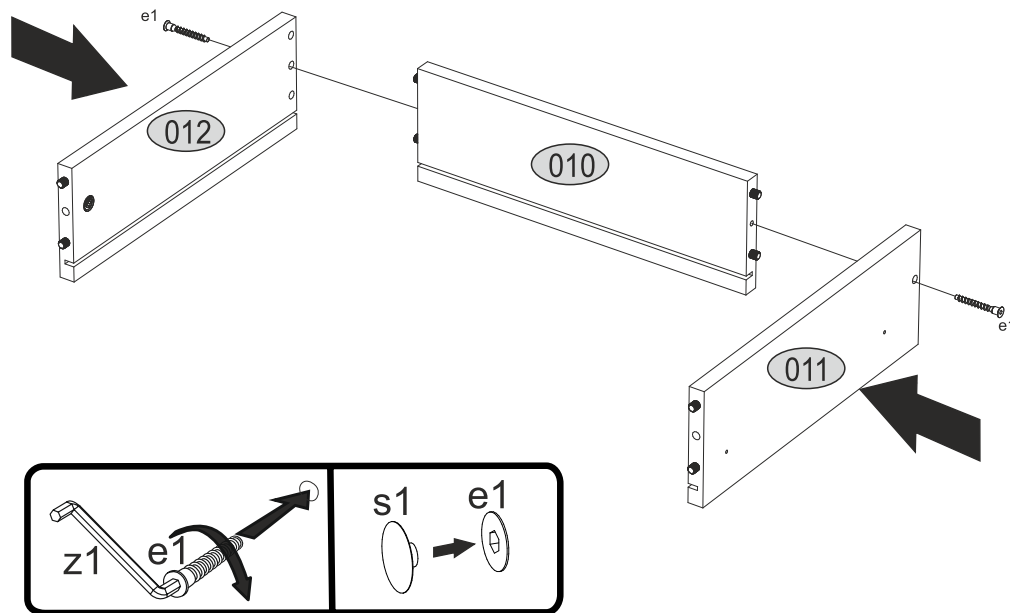




10

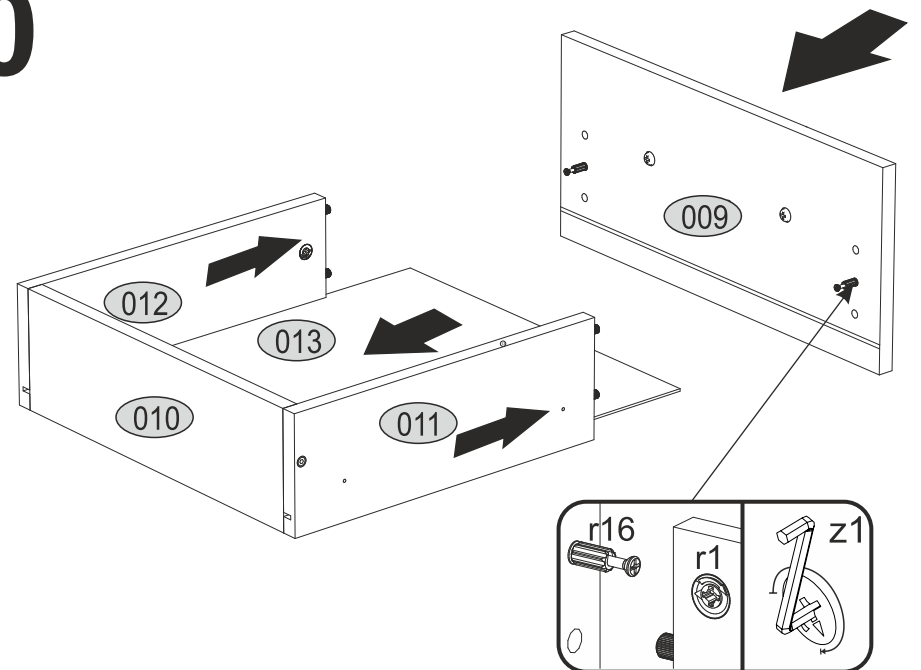


A

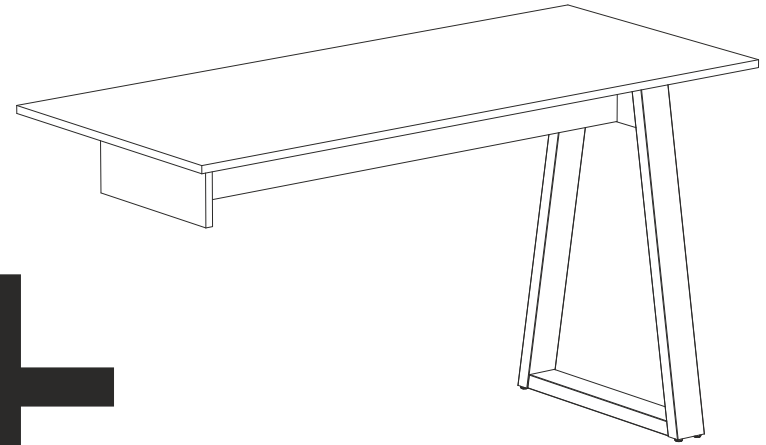


B

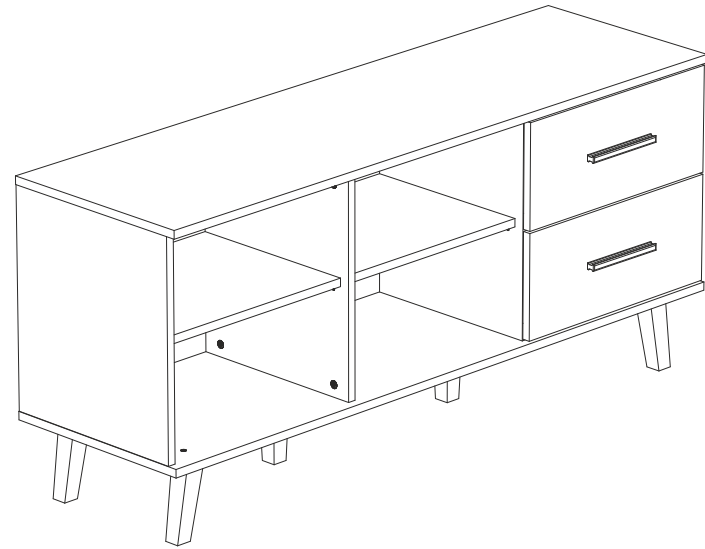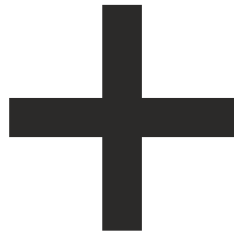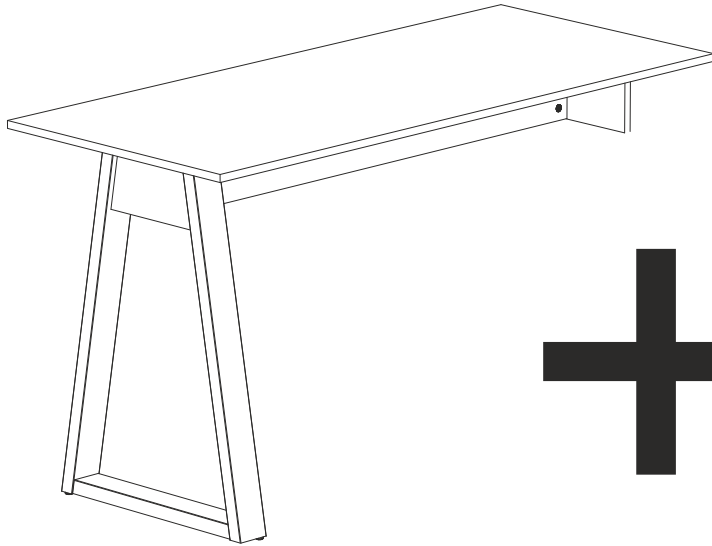



13

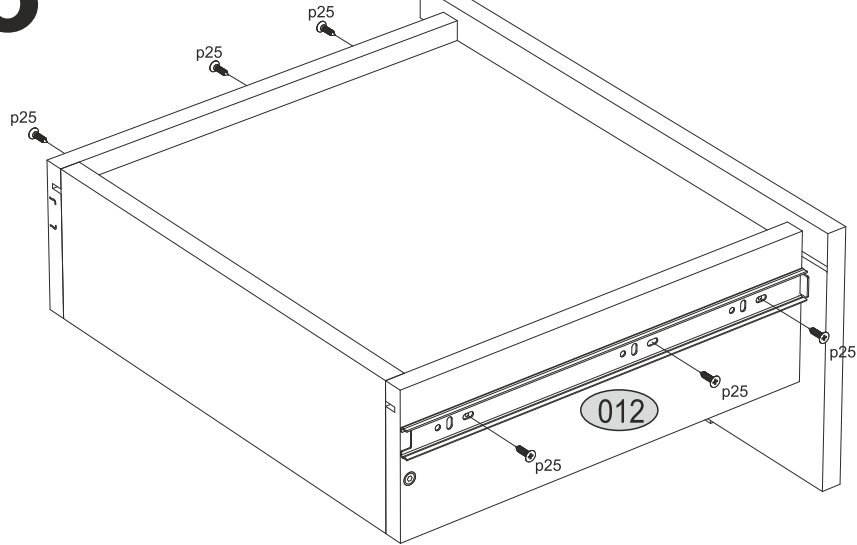





14

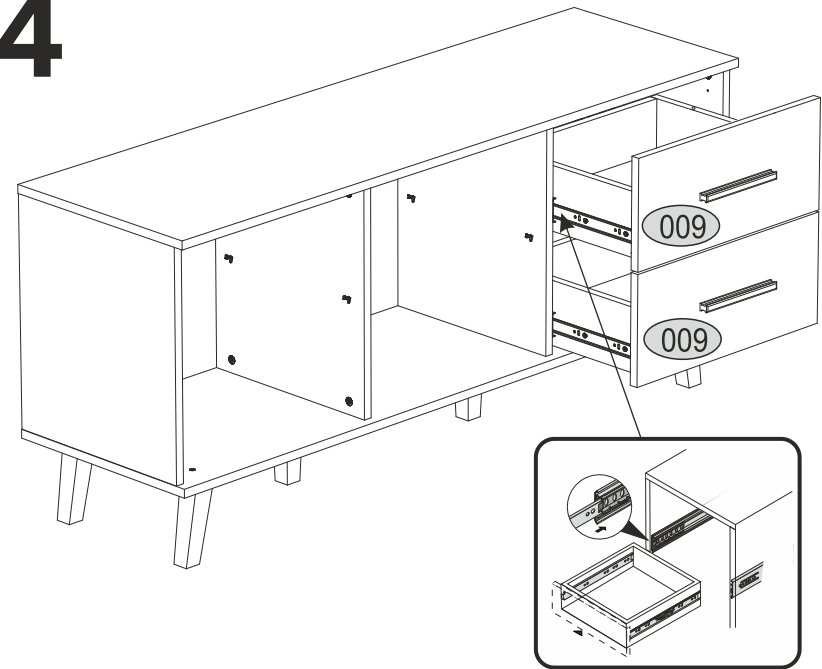



15

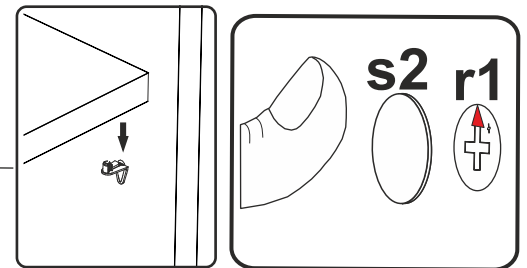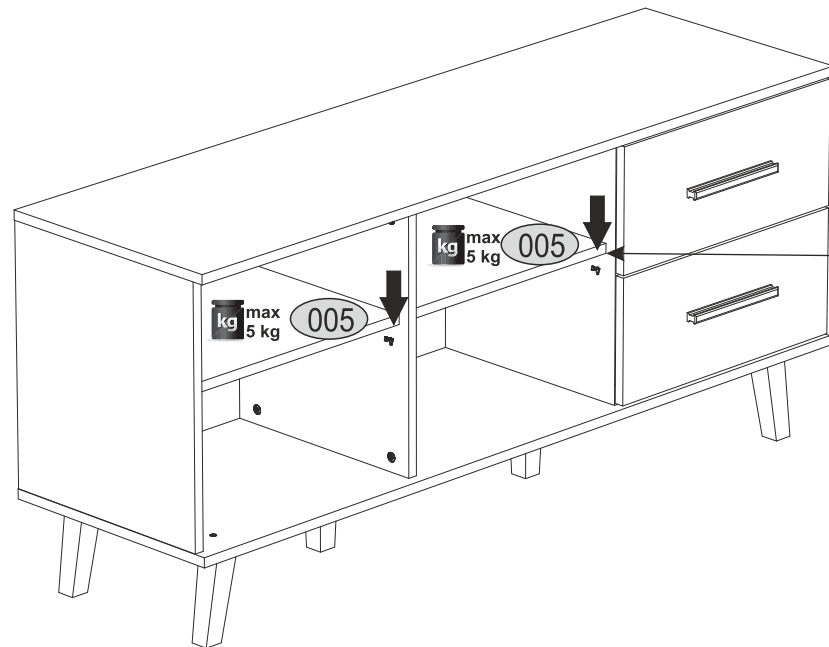



1A

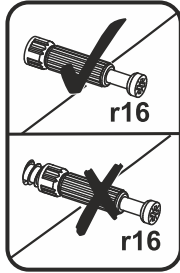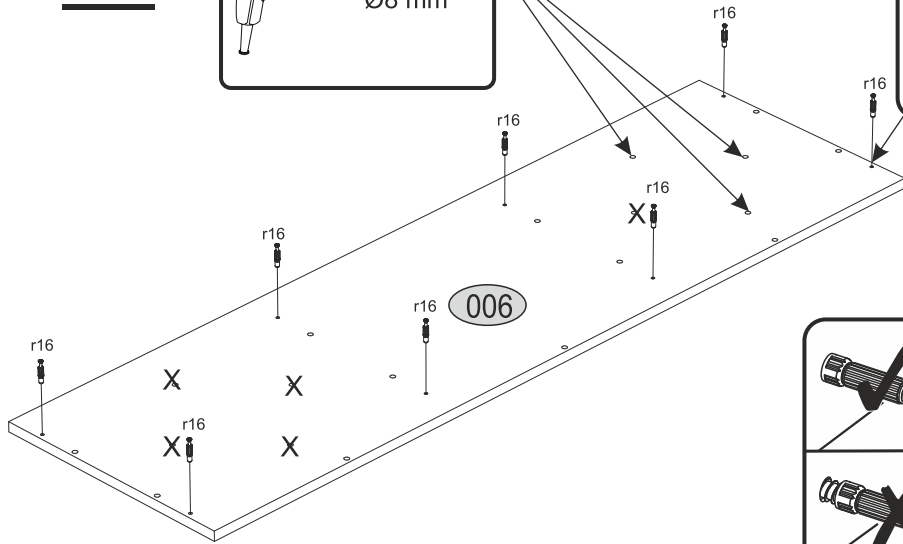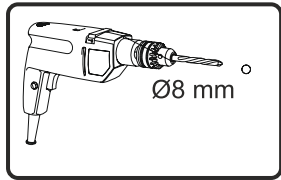


1B

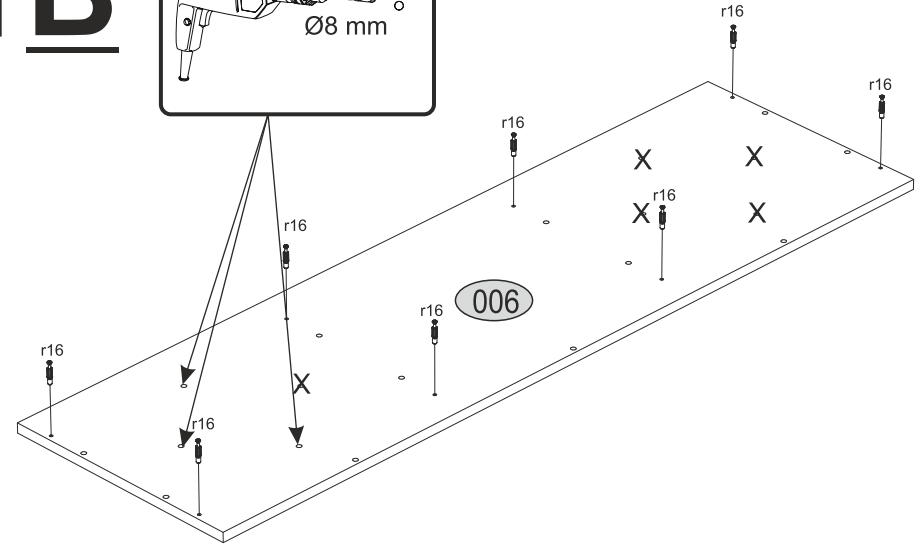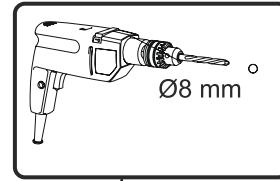


2

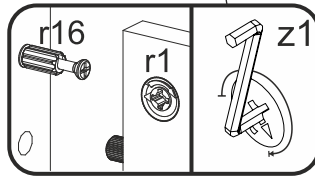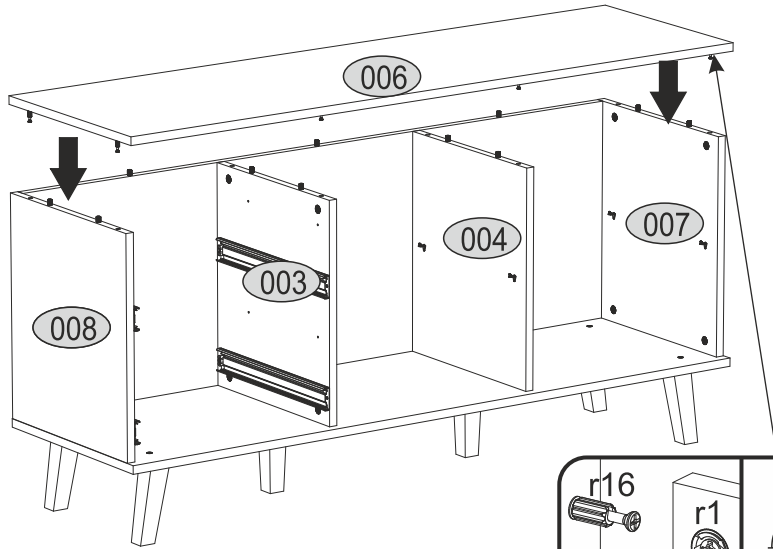


2

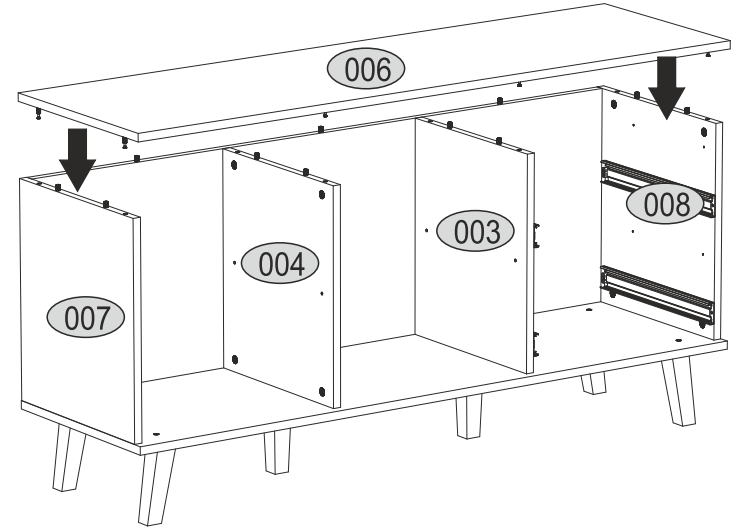


3A

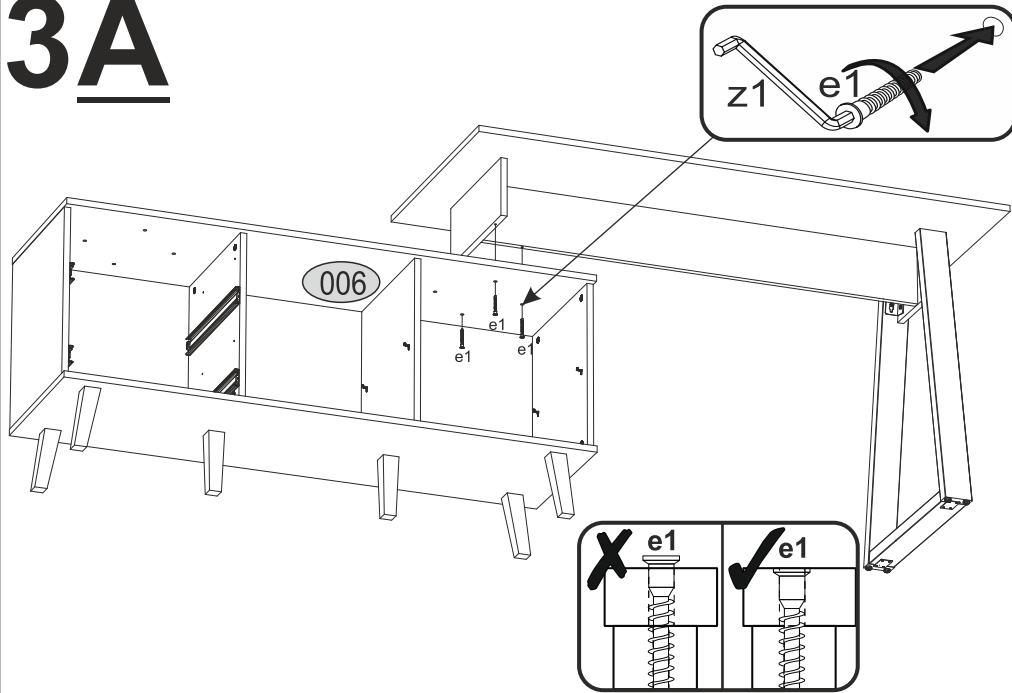

3B

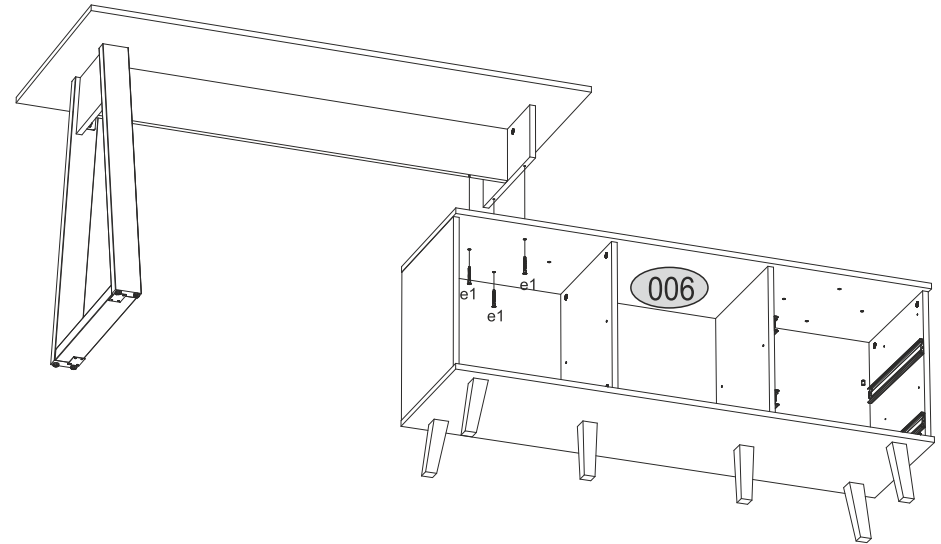

4

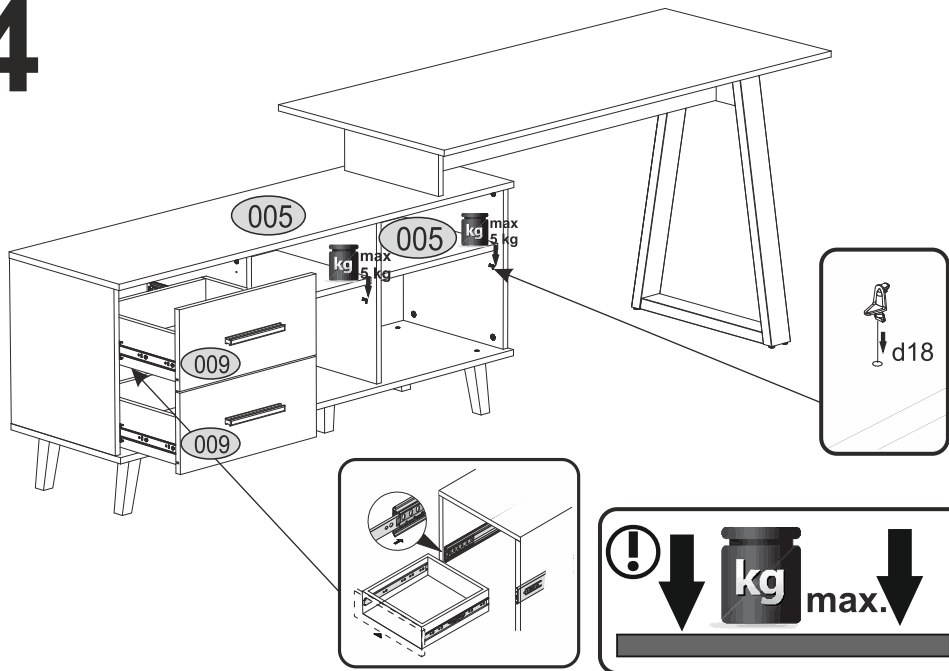

4

