


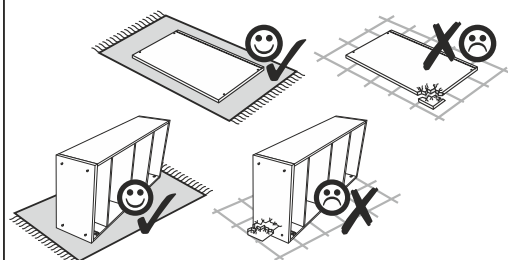
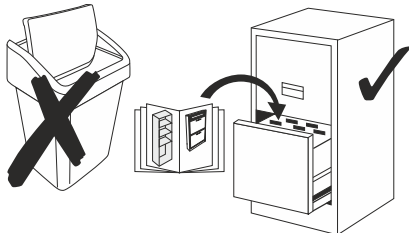
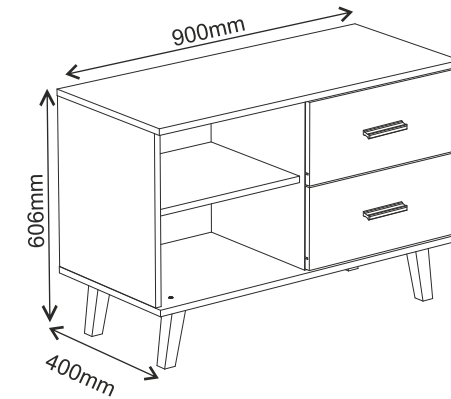
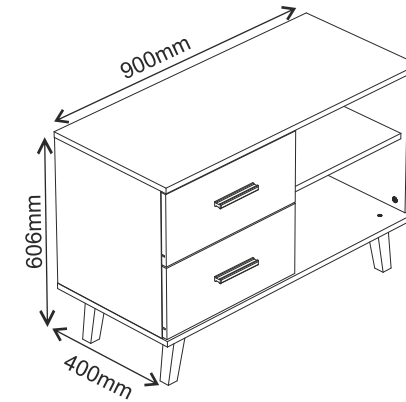


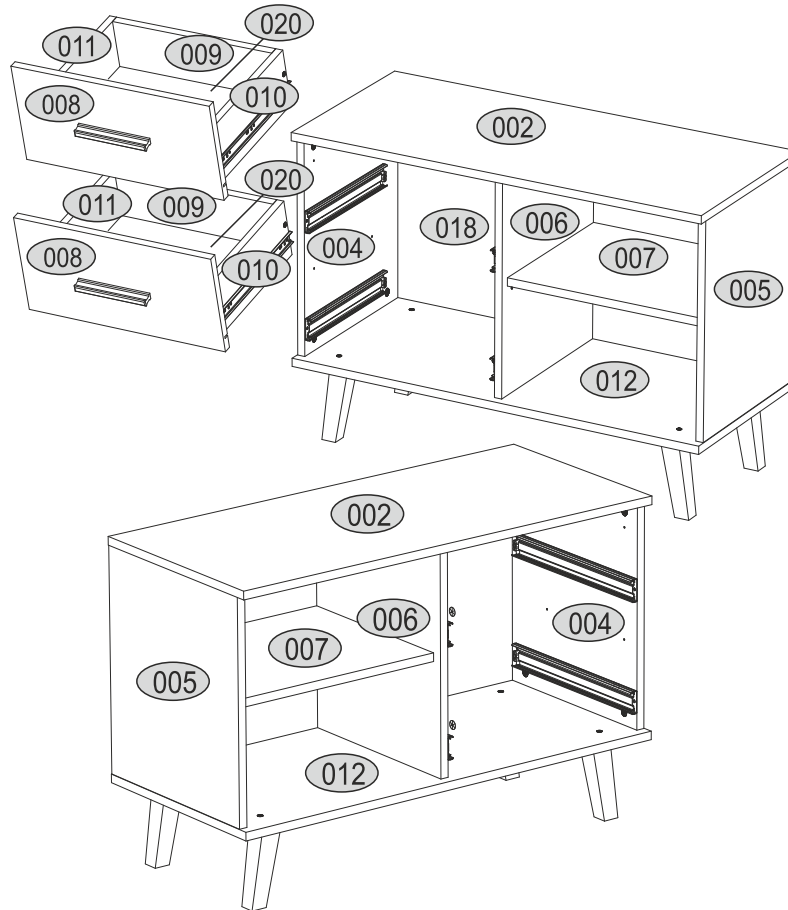

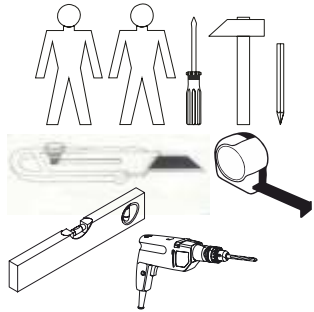

Installation manual


CABINET 2S 90

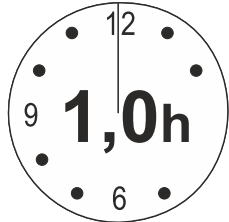


Code	Dimensions			Package
002	900	400	16	1/1
004	424	380	16	1/1
005	424	380	16	1/1
006	424	363	16	1/1
007	425	343	16	1/1
008	454	208	16	2/1/1
009	368	120	16	2/1/1
010	350	120	16	2/1/1
011	350	120	16	2/1/1
012	900	400	16	1/1/1
018	424	866	16	1/1/1
020	352	386	3	2/1/1
accessories				2/1/1

Accessories:

<p>x2 lb-350</p> 	<p>x2 c57</p> 	<p>x16 r1</p> 	<p>x8 e1</p> <p><i>Ø7x50mm</i></p> 
<p>x8 s1</p> 	<p>x36 f1</p> <p><i>Ø8x30mm</i></p> 	<p>x4 p9</p> 	<p>x1 z1</p> 
<p>x16 r16</p> 	<p>x24 p25</p> 	<p>x16 s2</p> 	<p>x4 d18</p> 
<p>x4 k88</p> 			

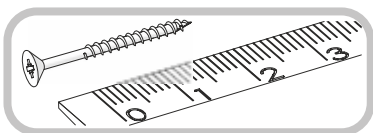


L

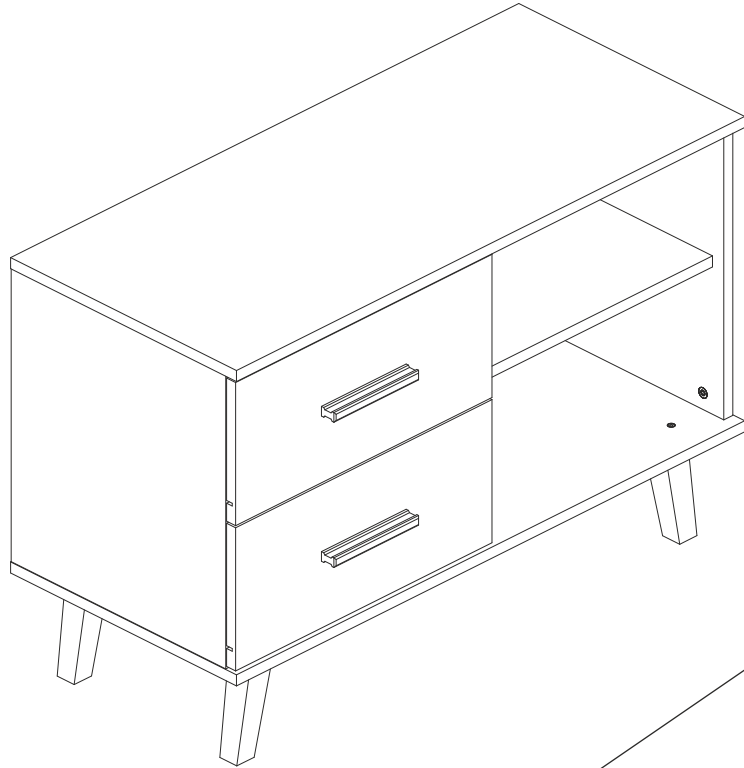


R




1L

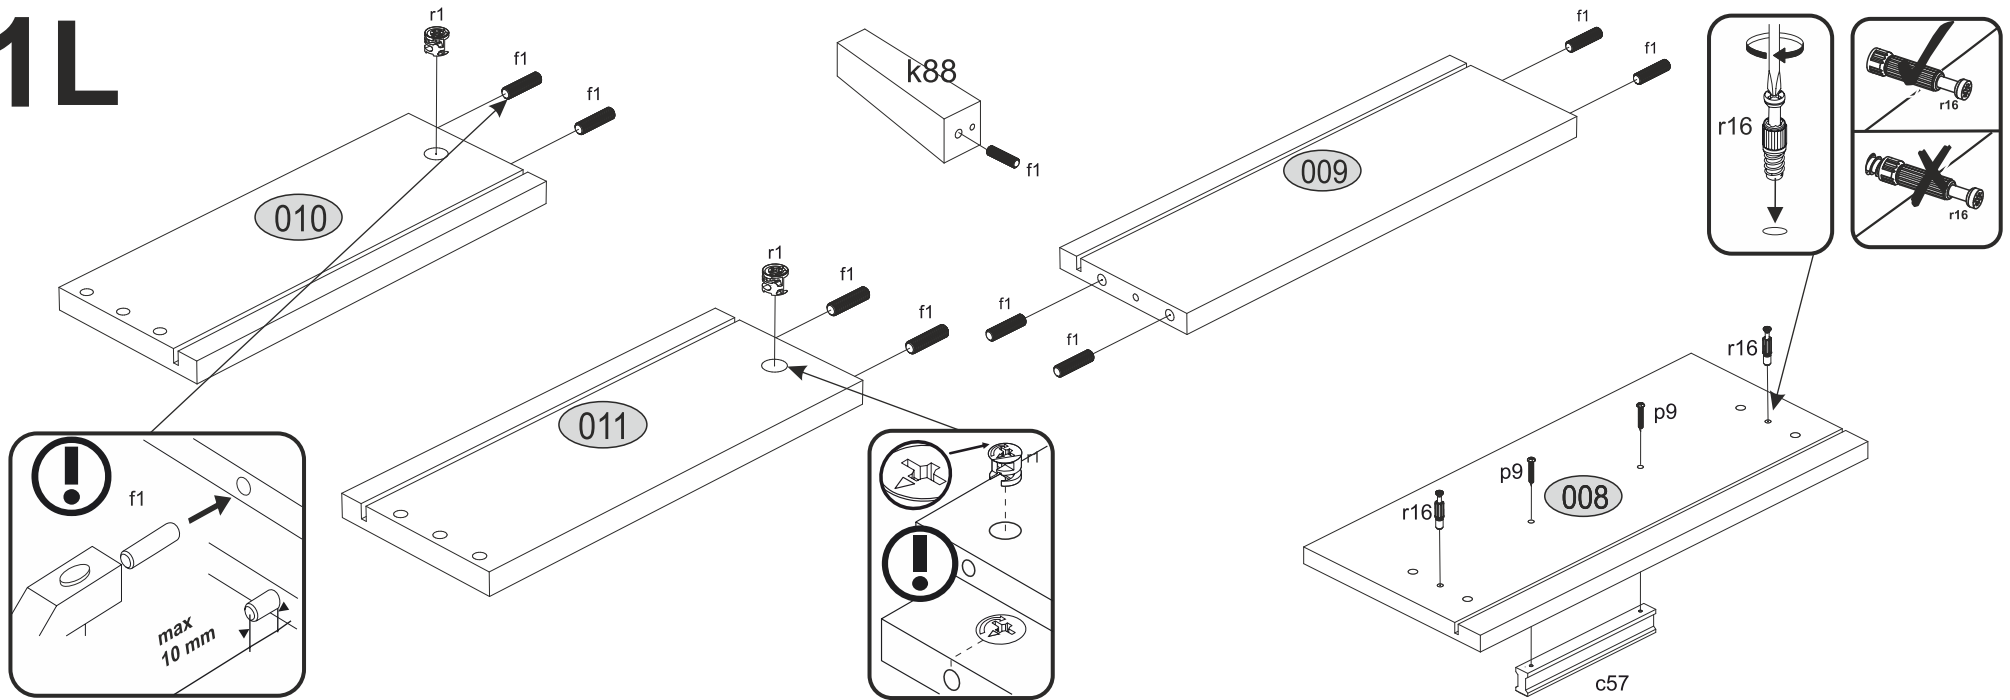


2

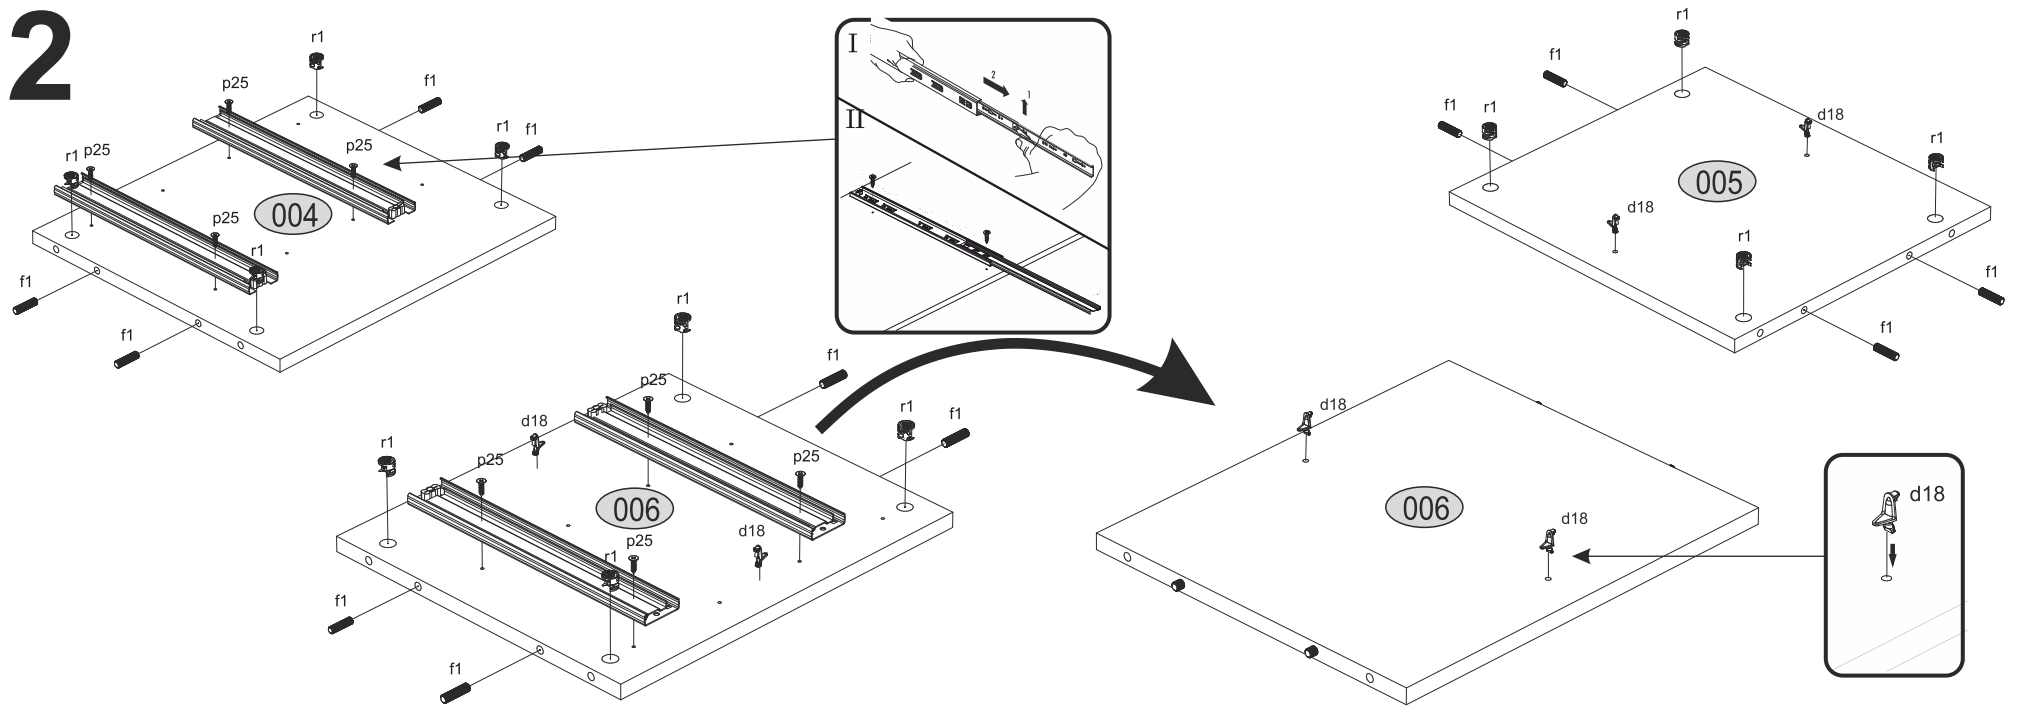


3

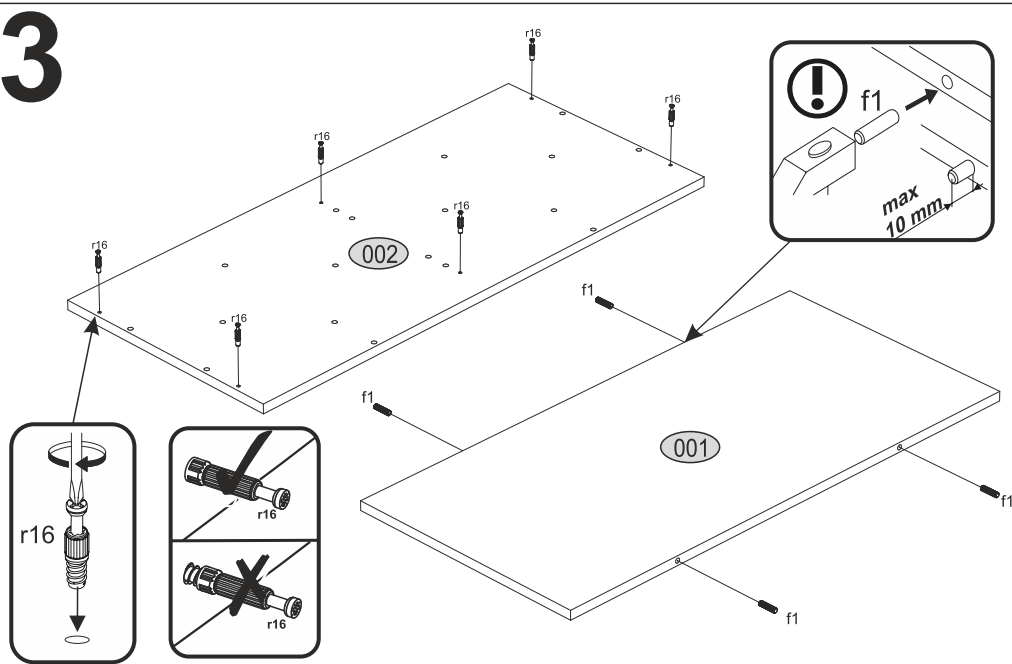


4




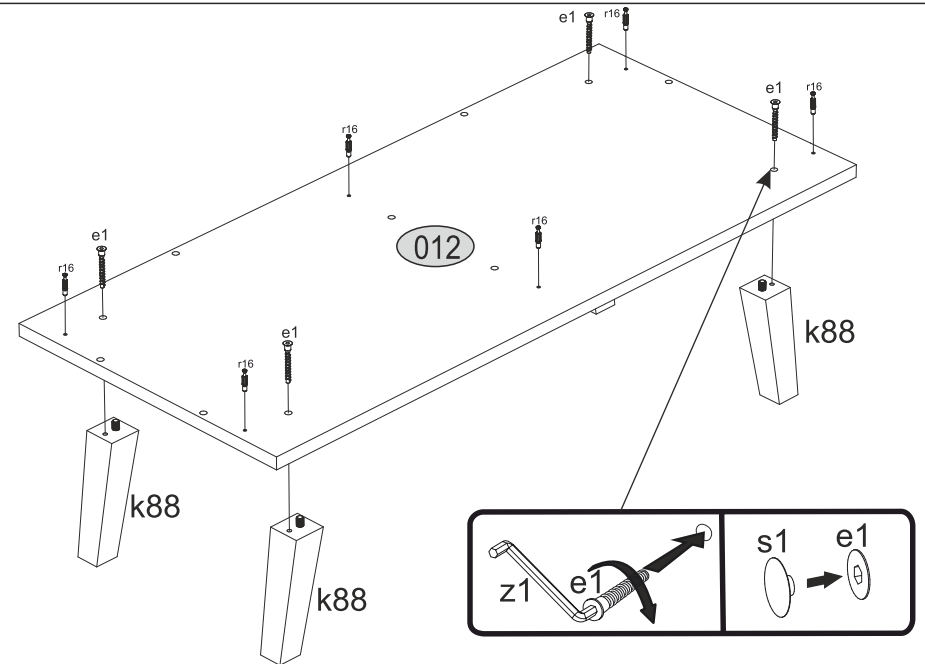


5


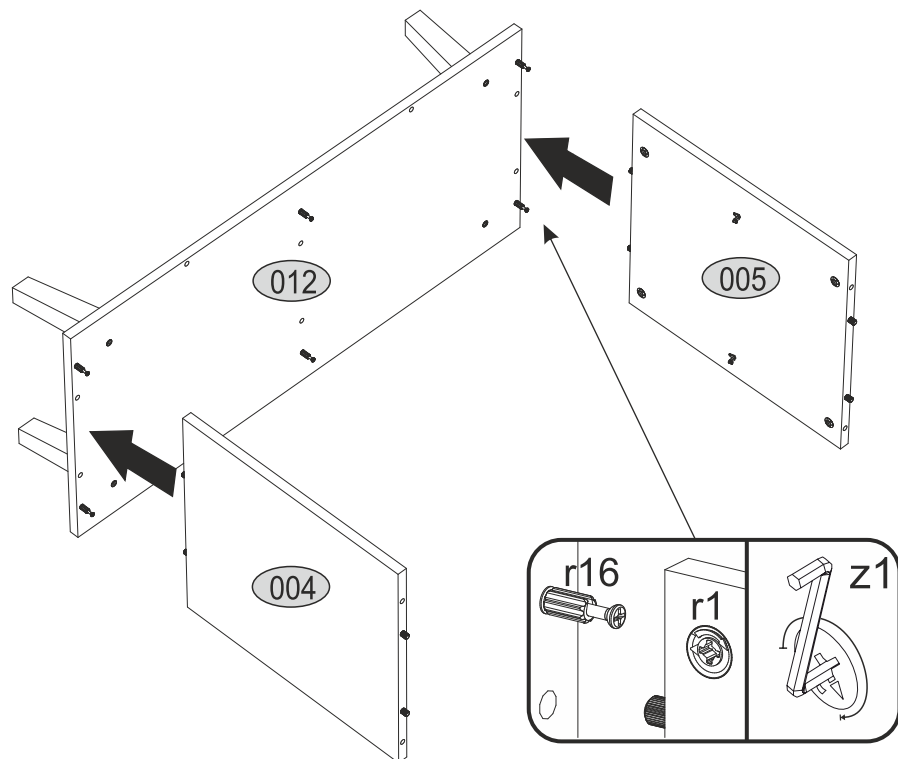


6



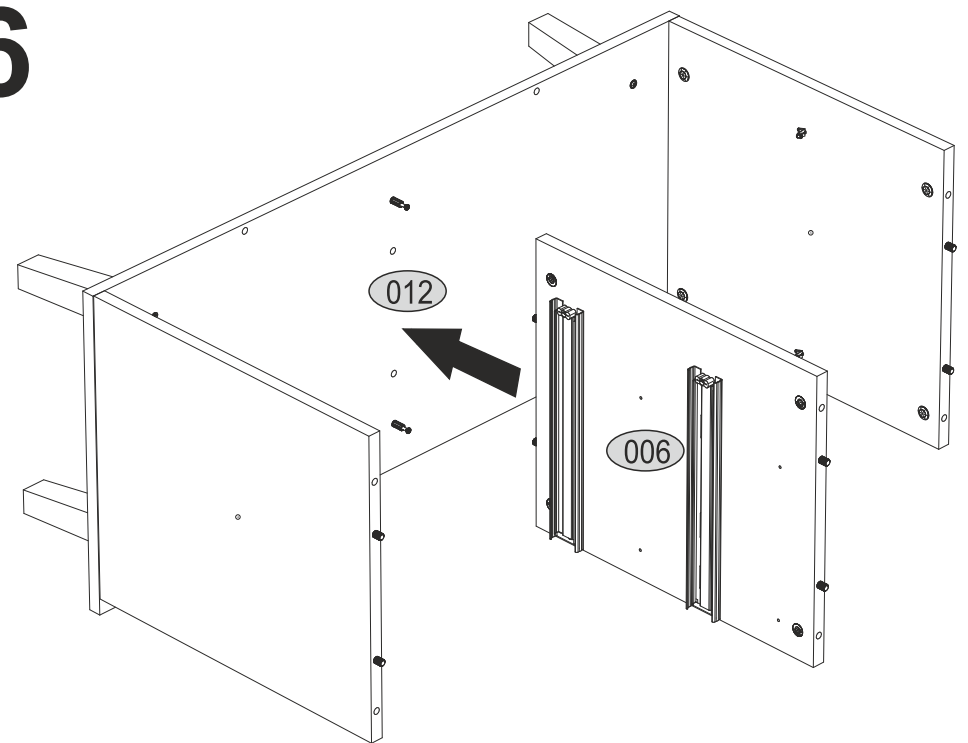


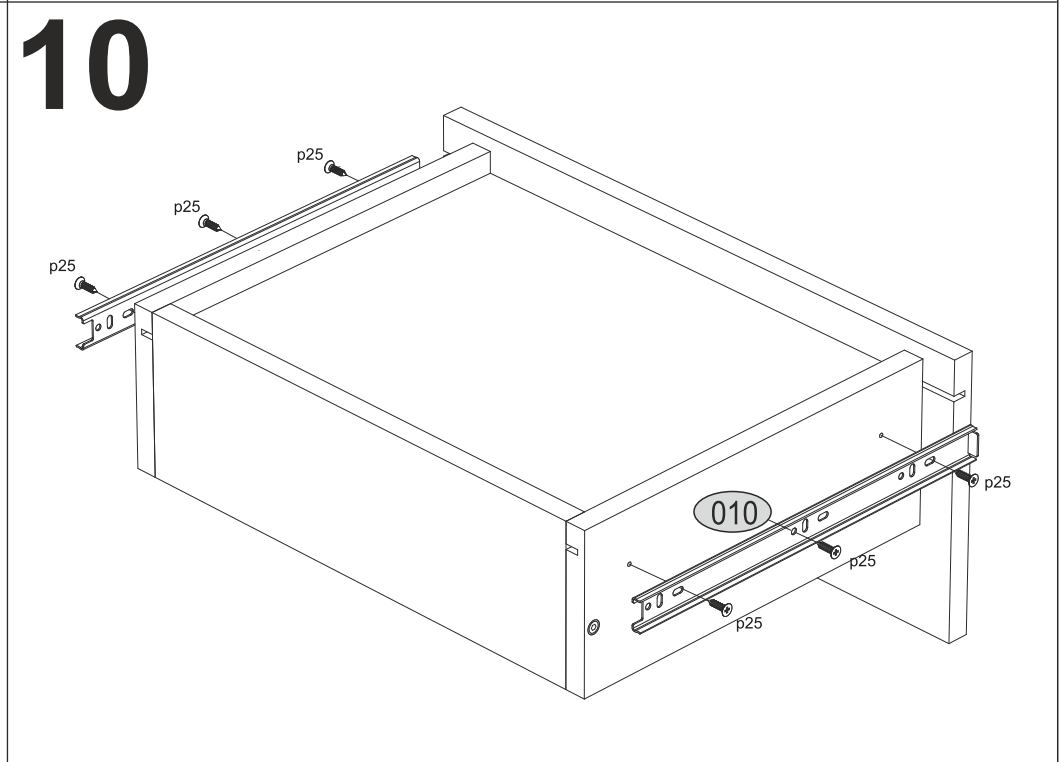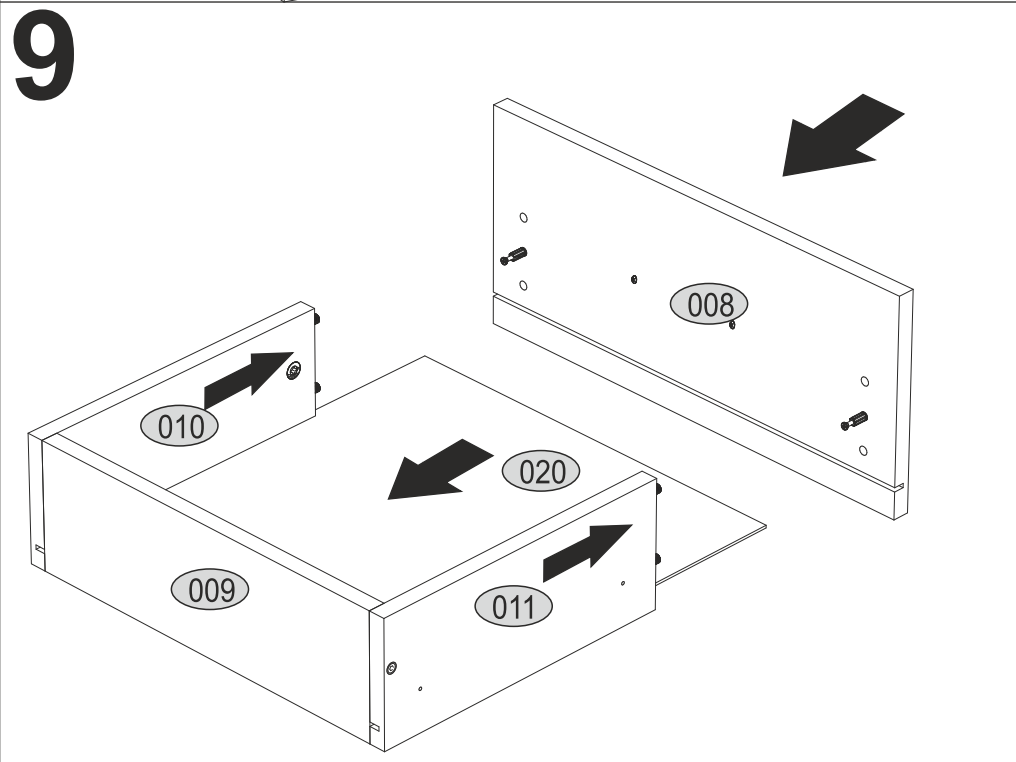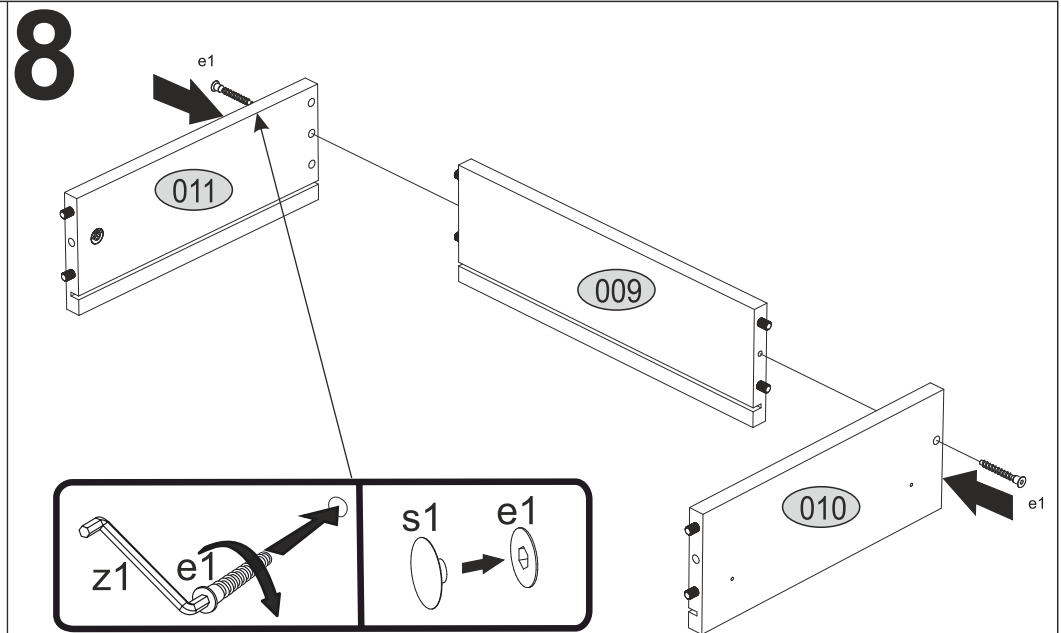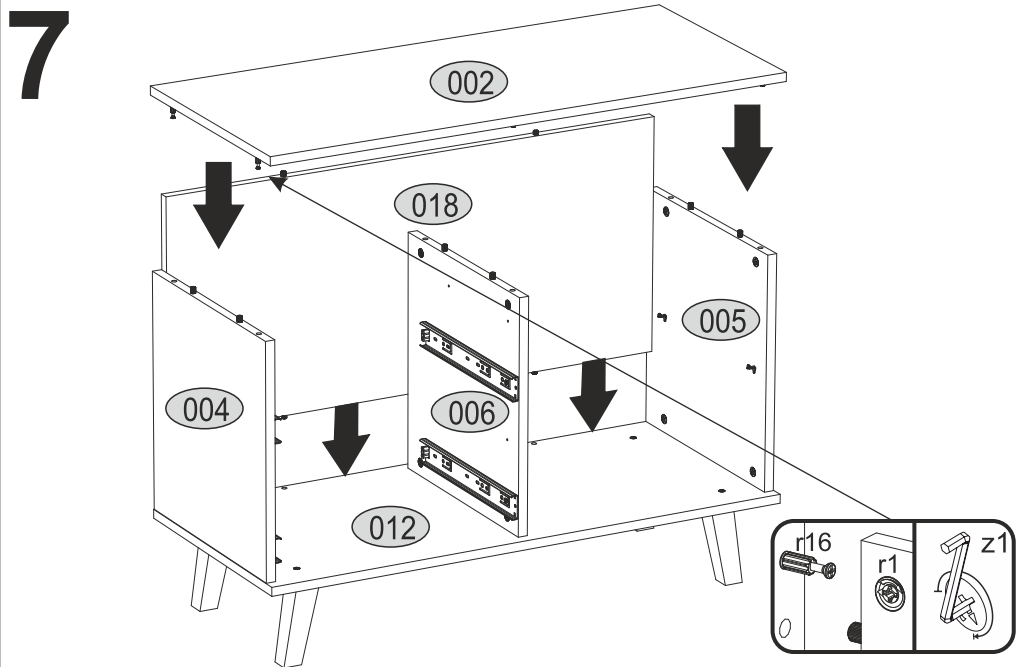


11

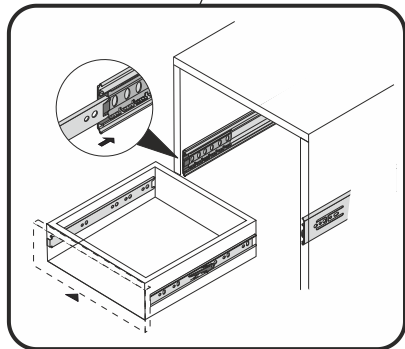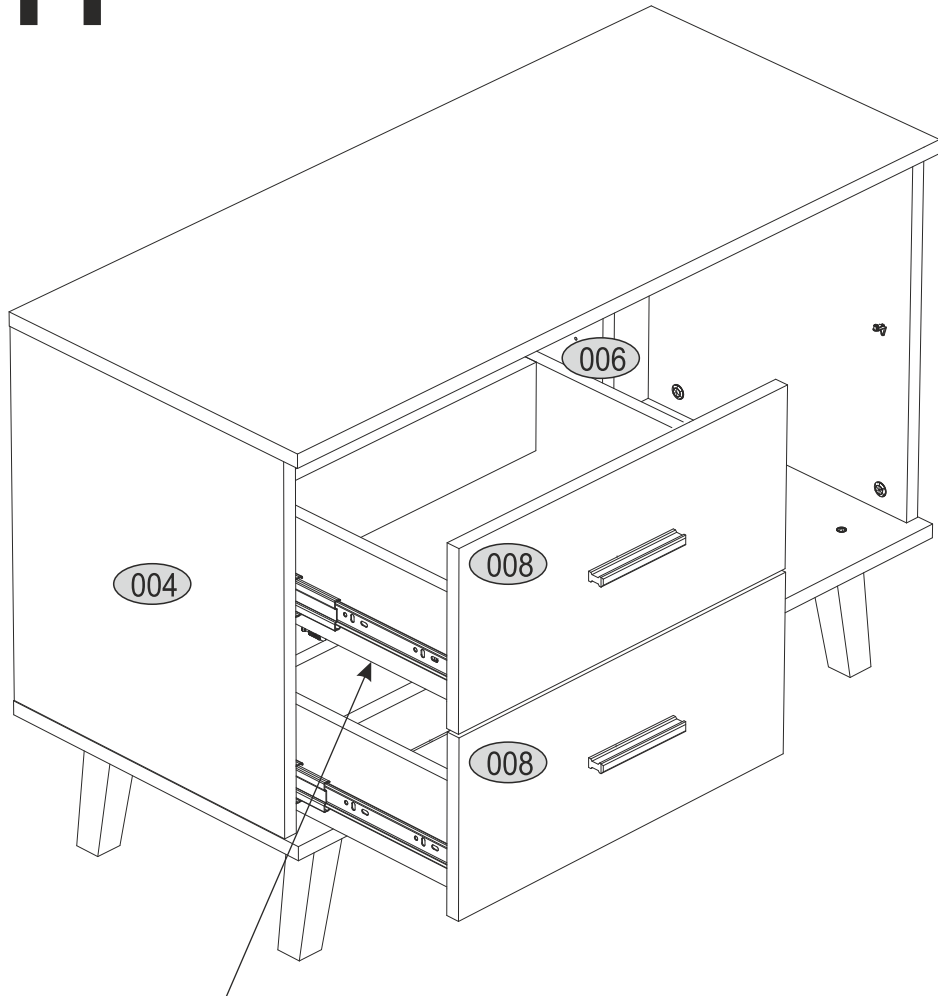


12

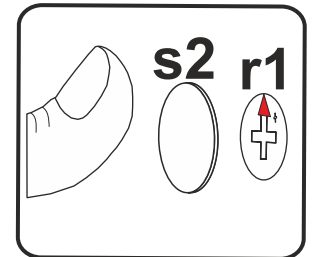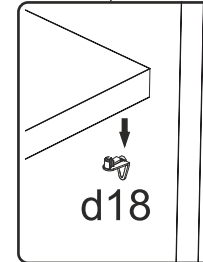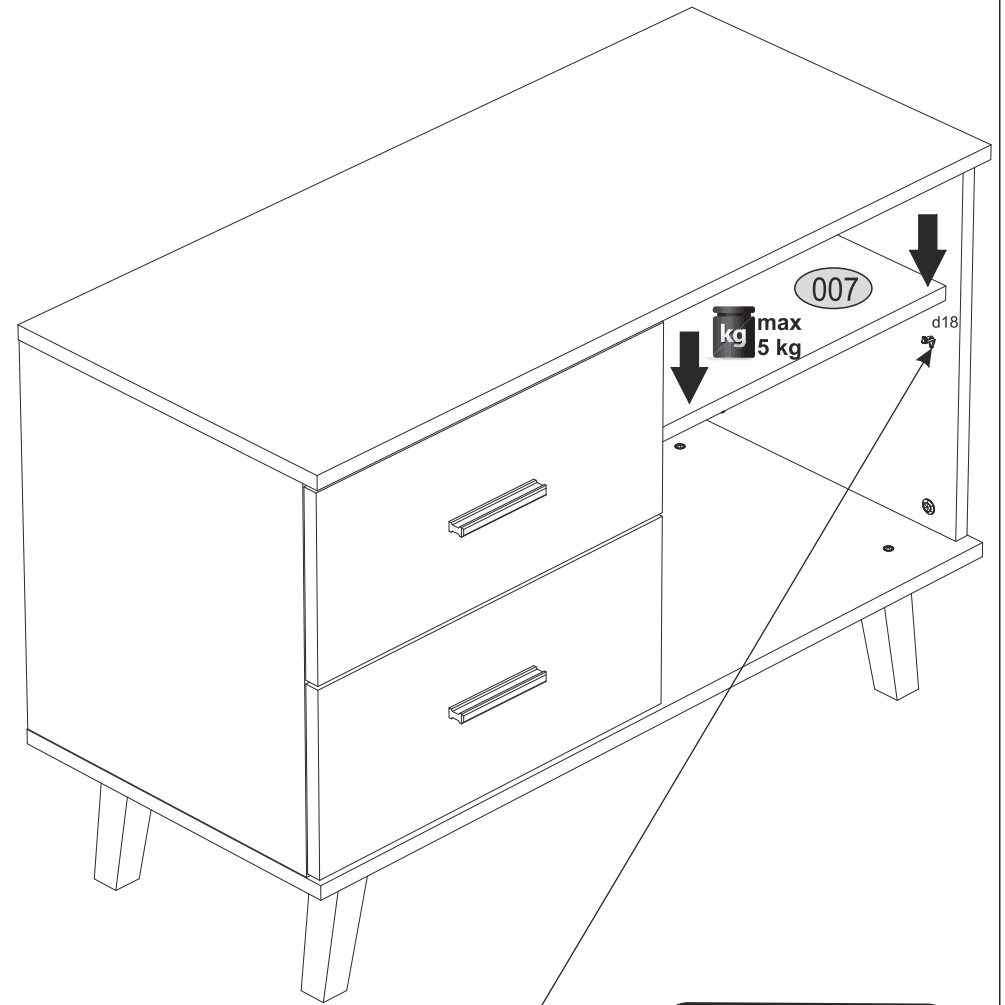


1R

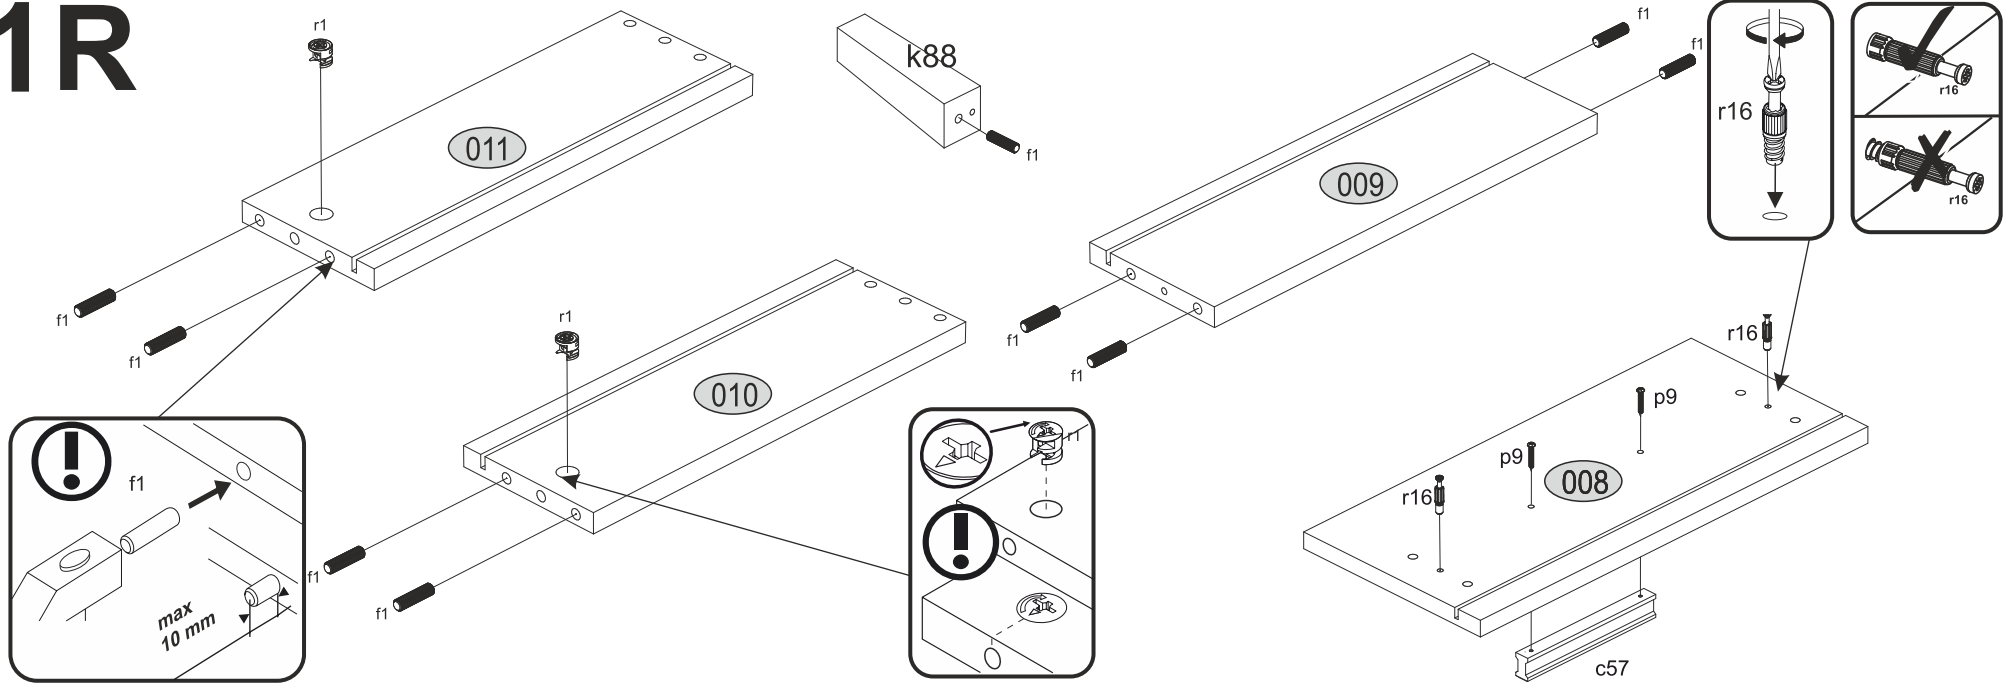


2

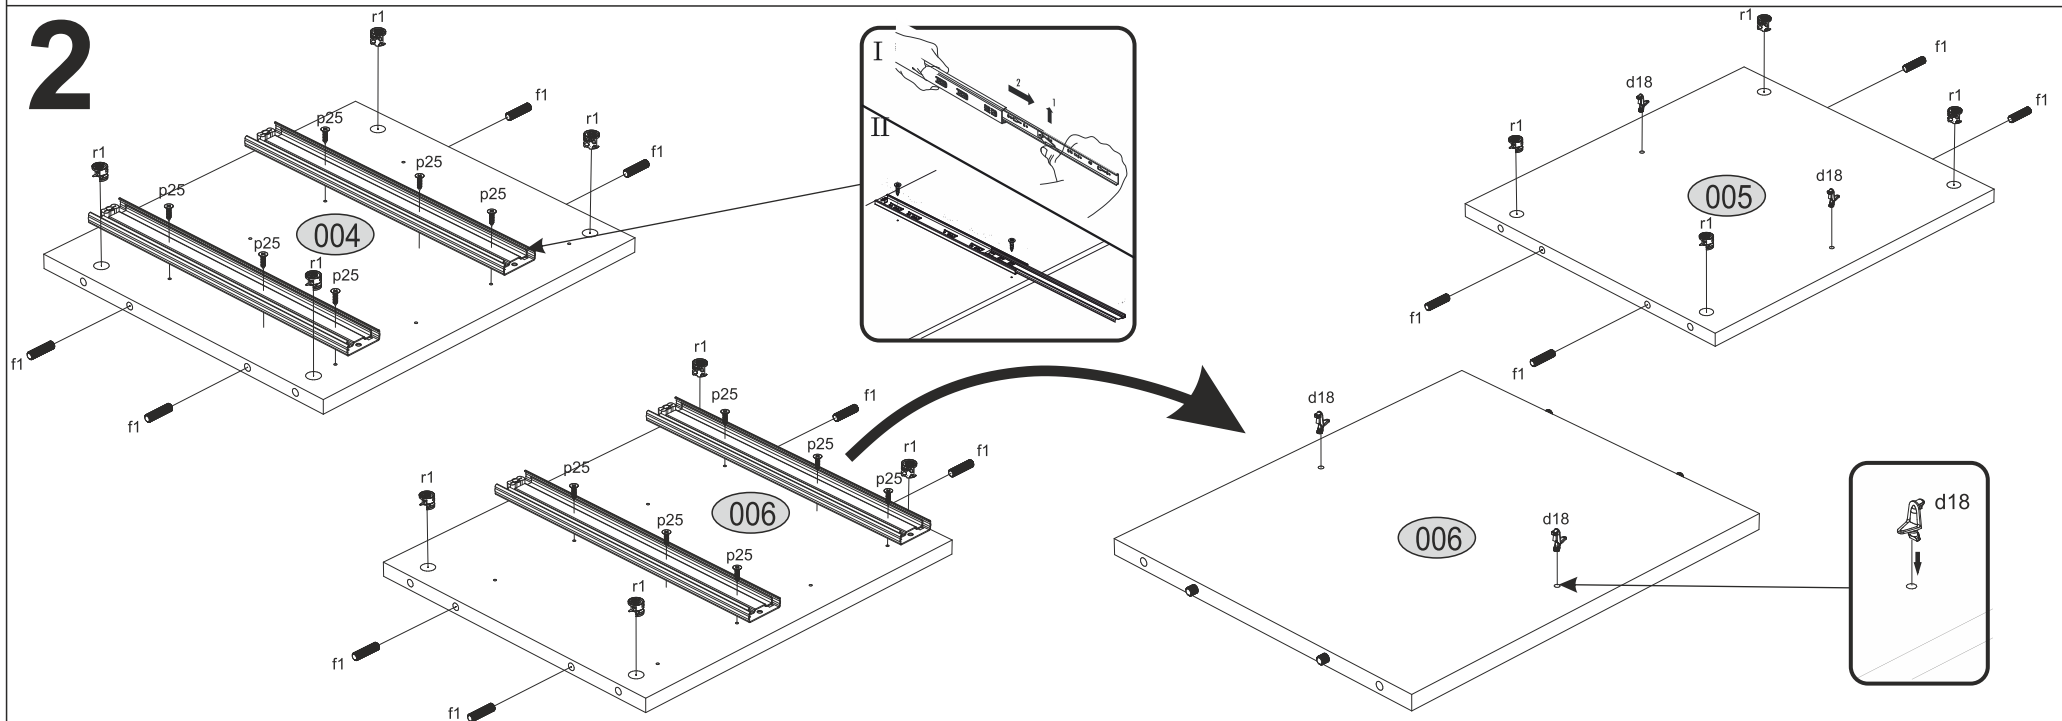


3

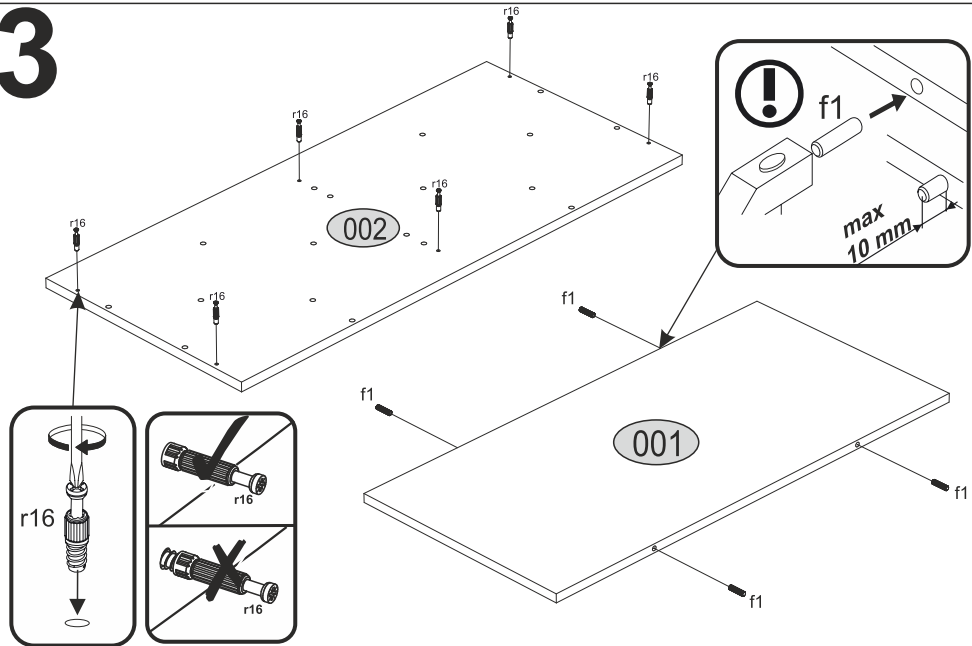


4

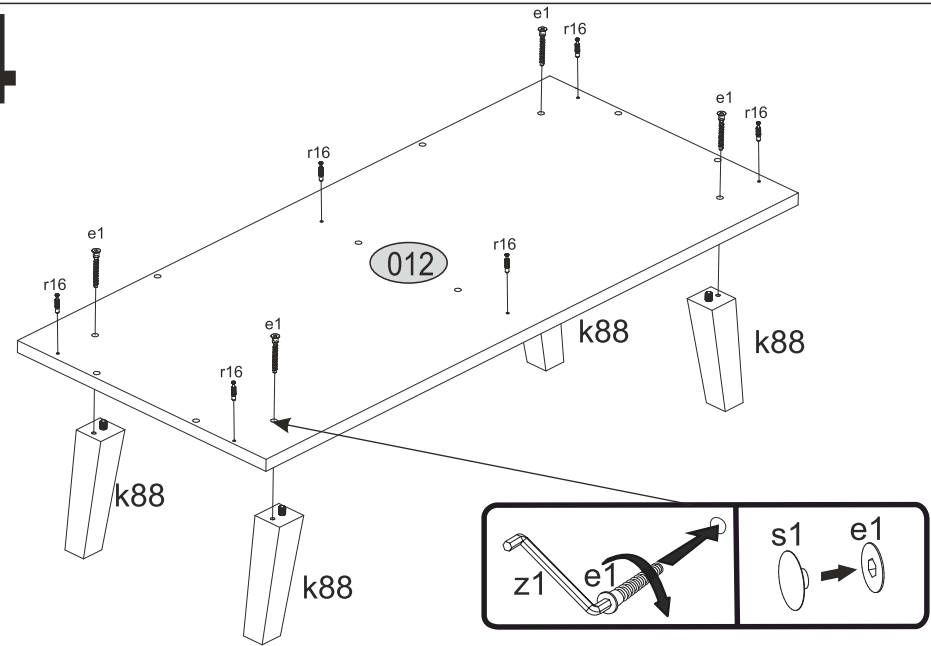


5

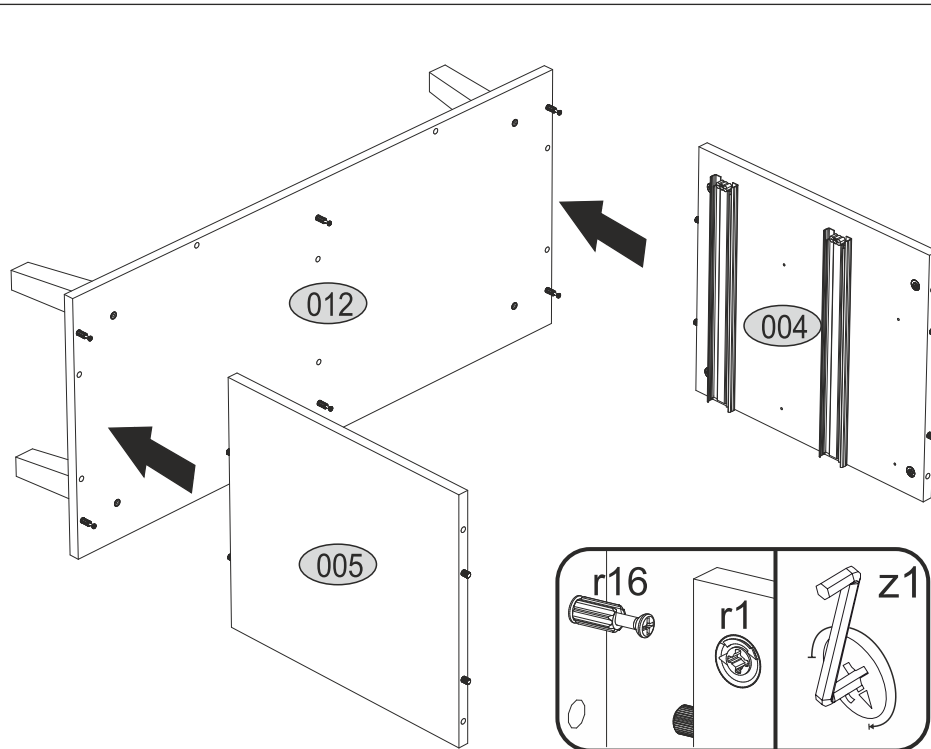


6

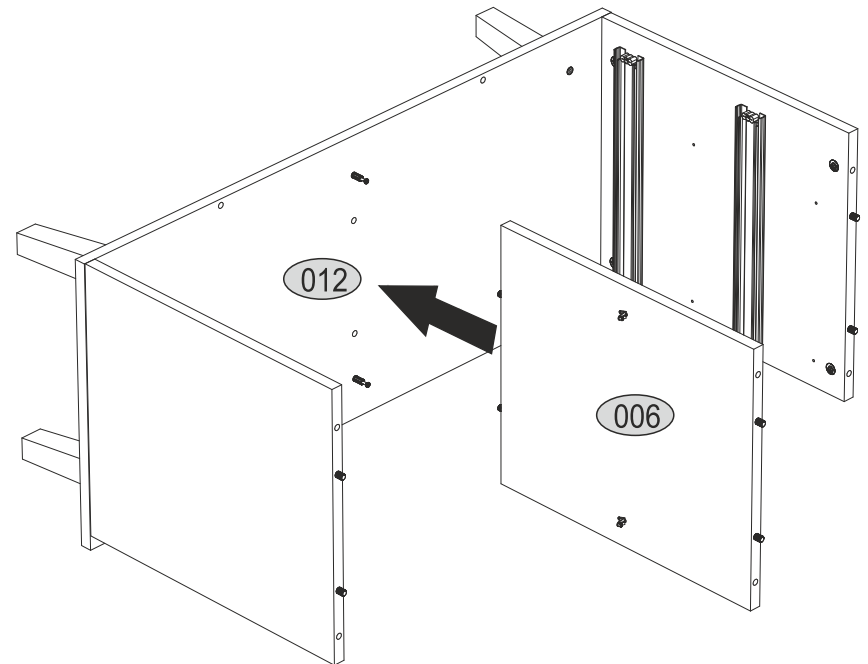


7

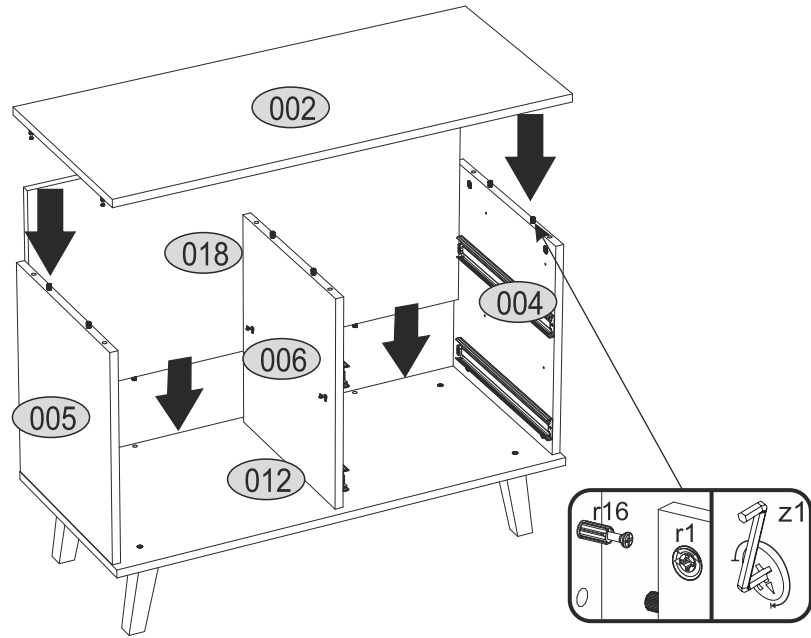


8

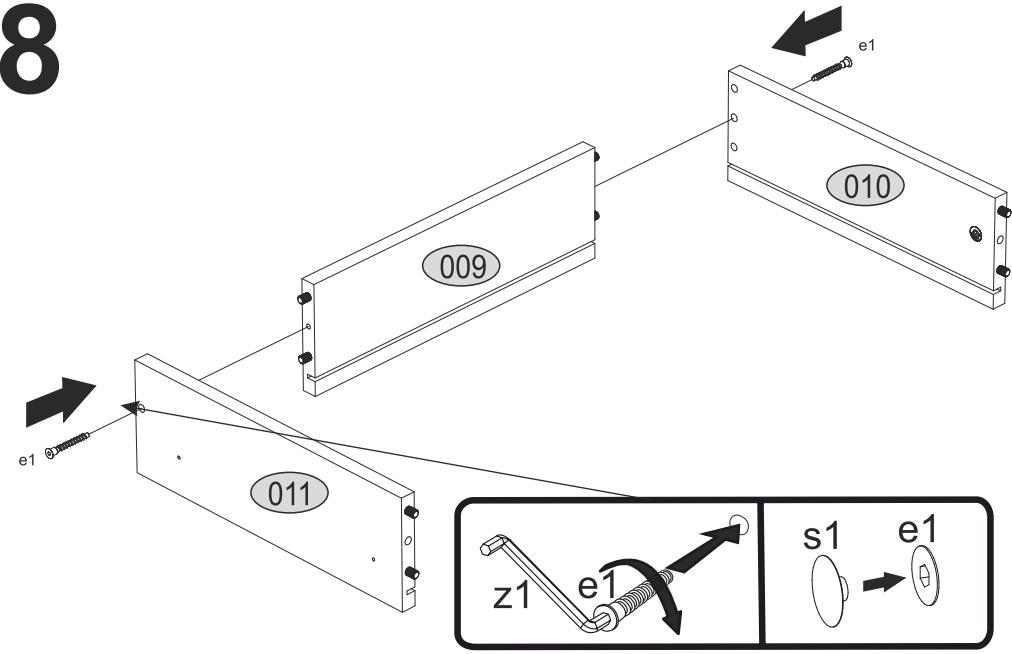


9

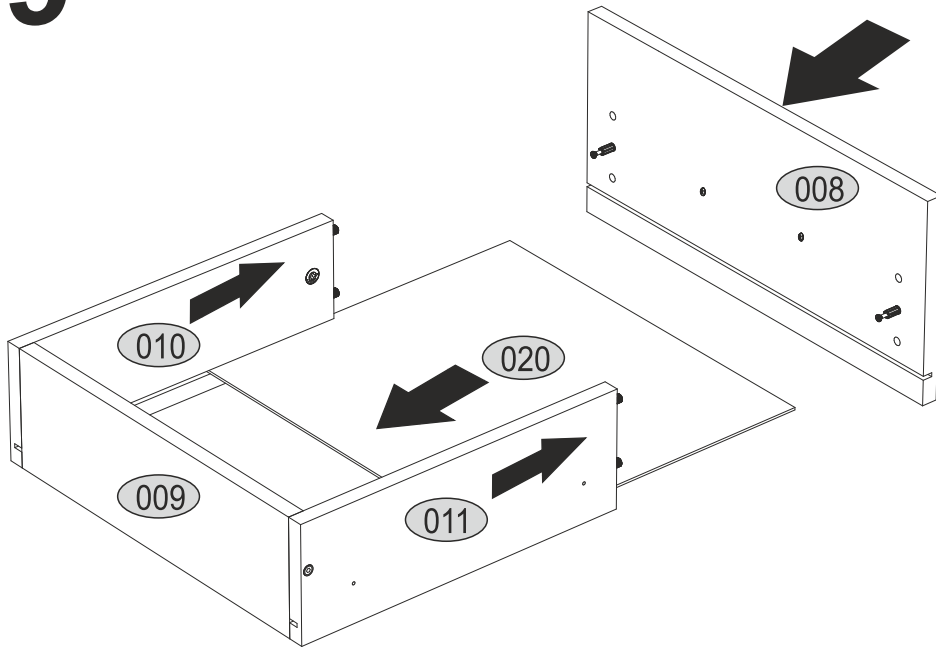



10

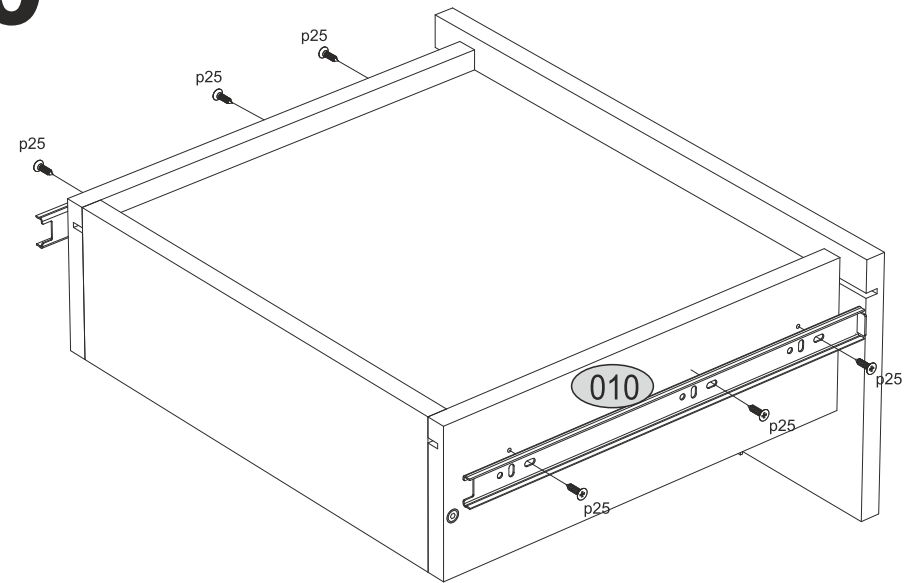



A

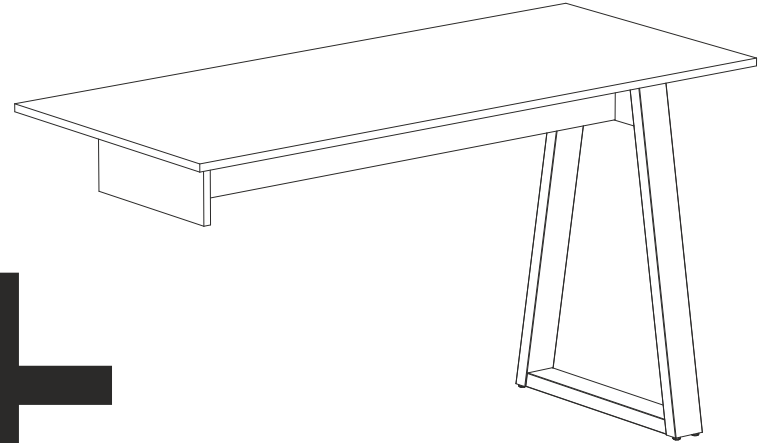




B

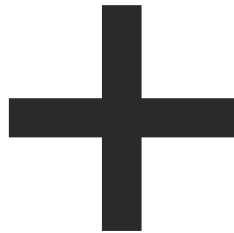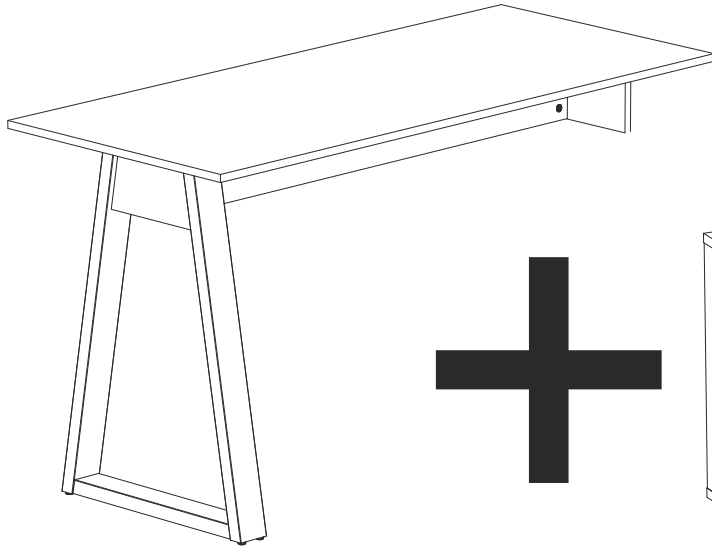




11

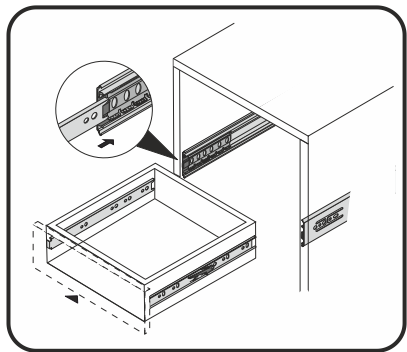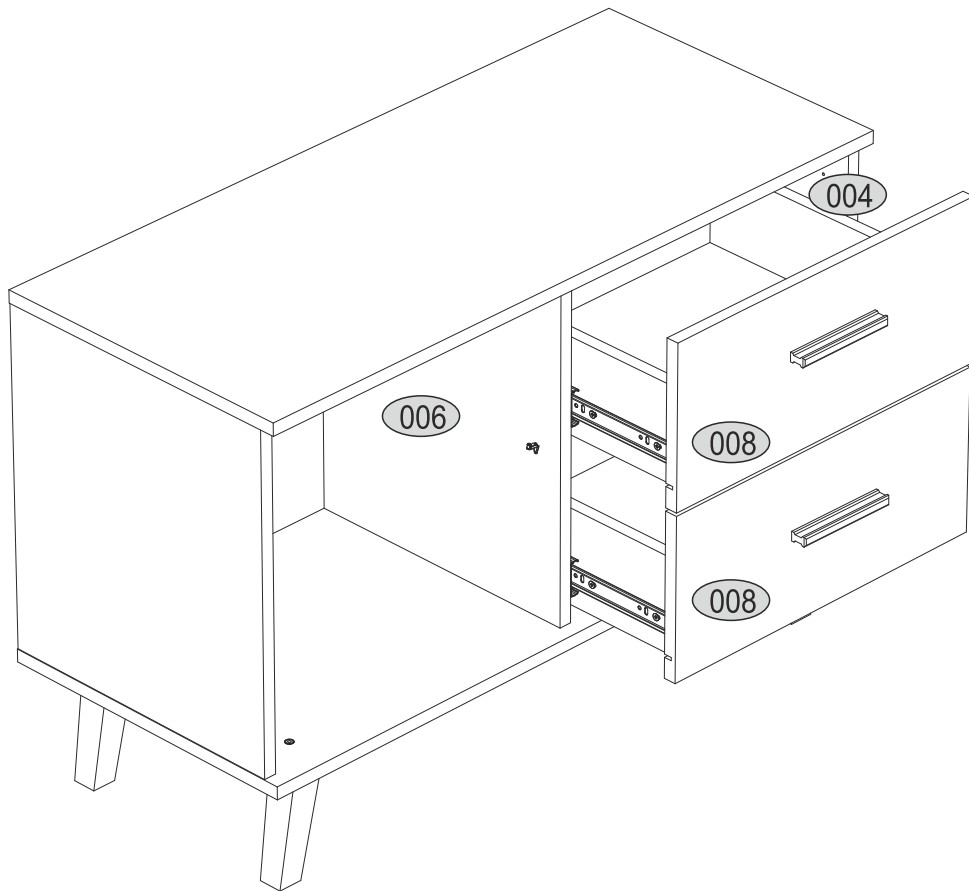



12

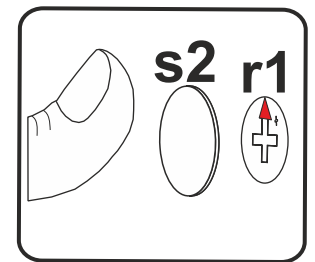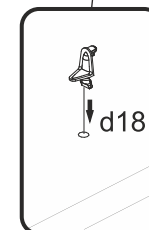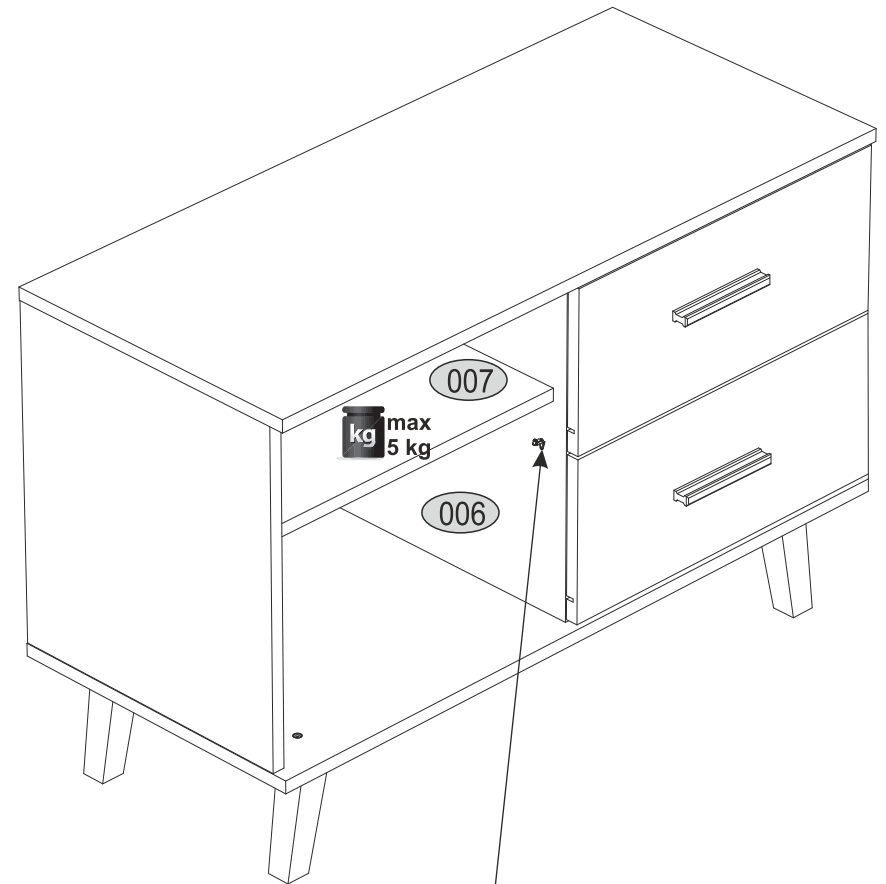


1A

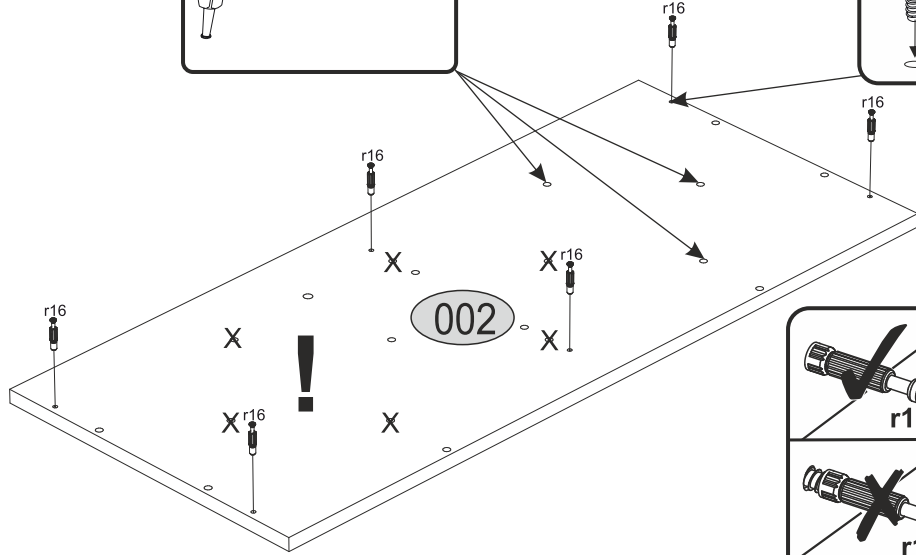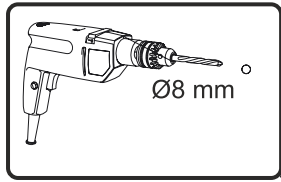


1B

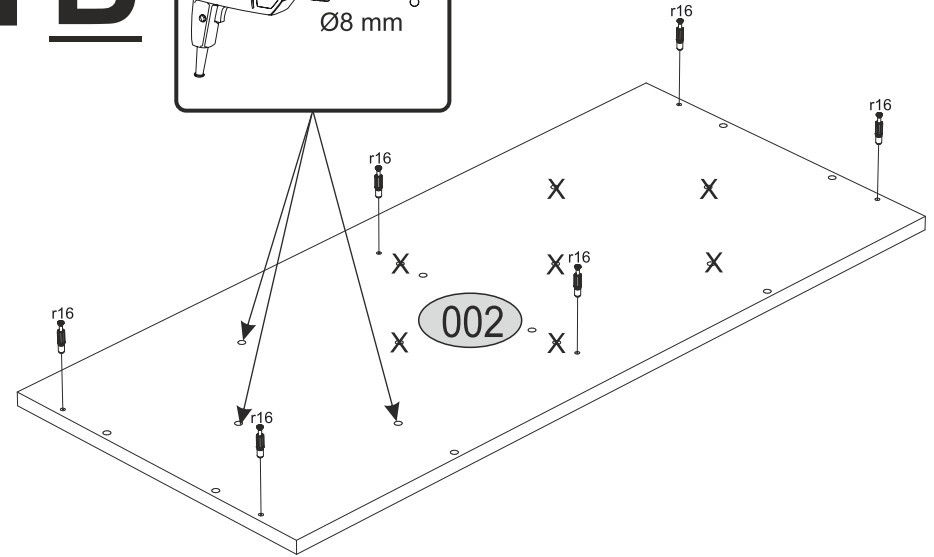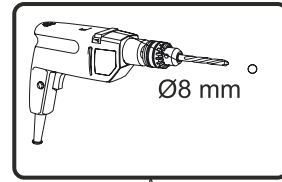


2

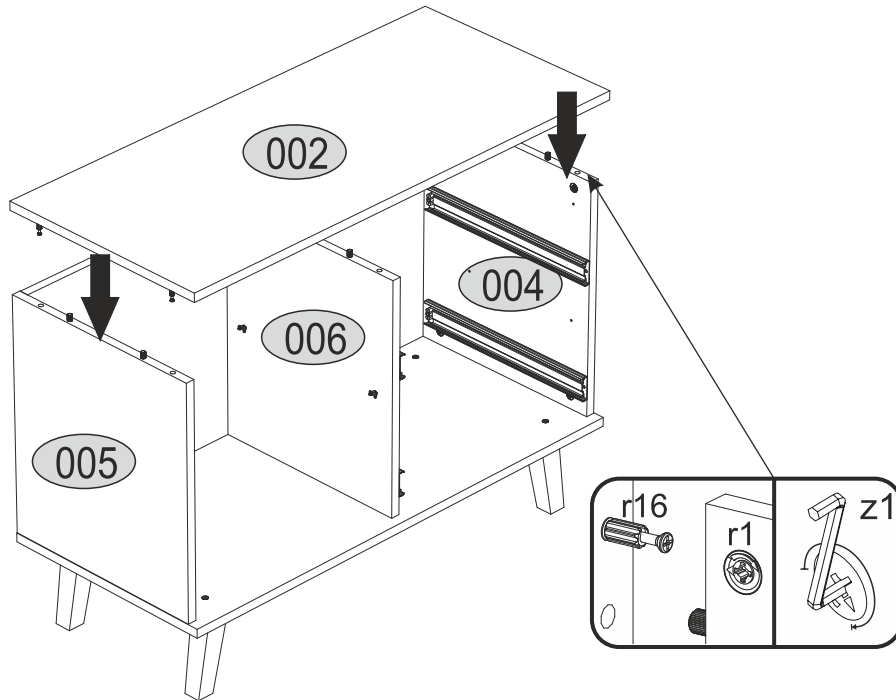


2

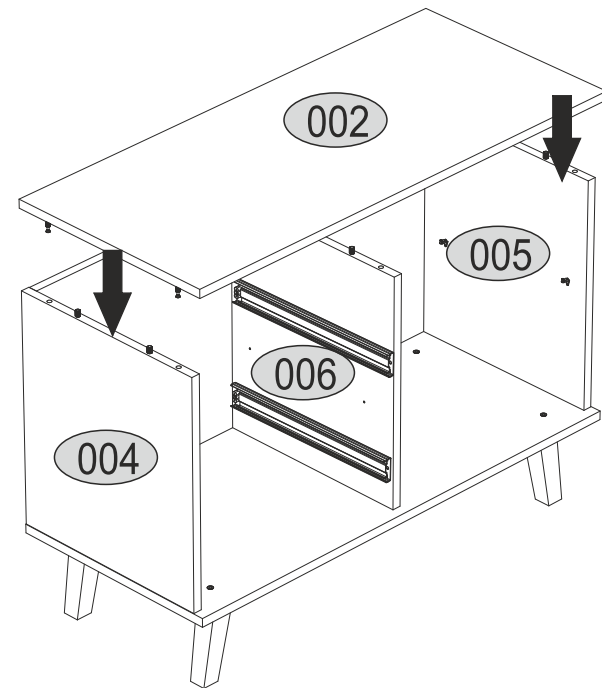


3 A

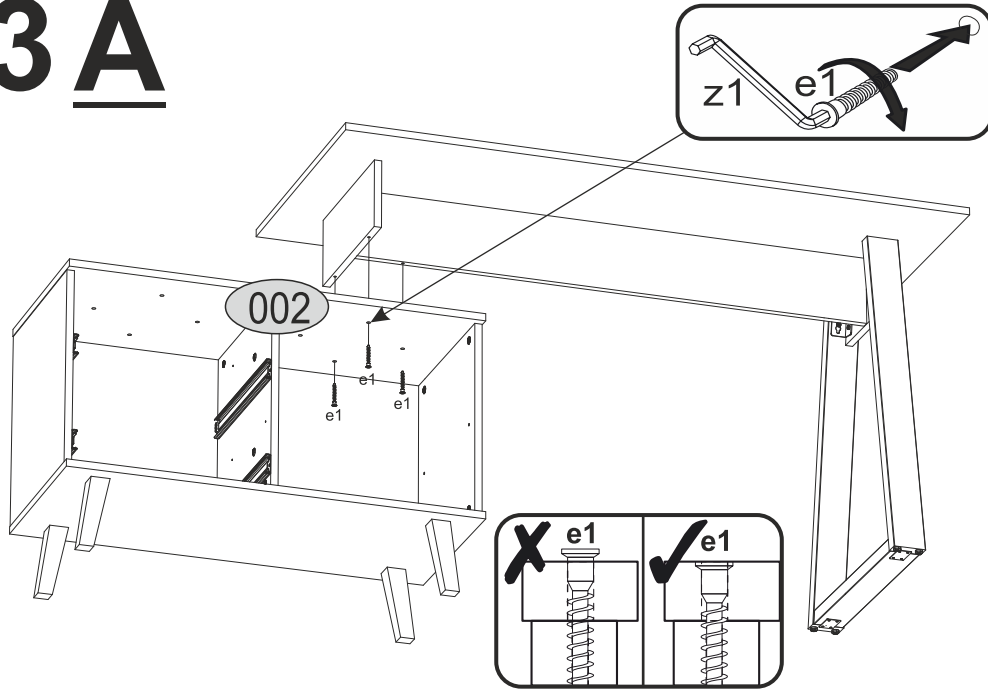

3 B

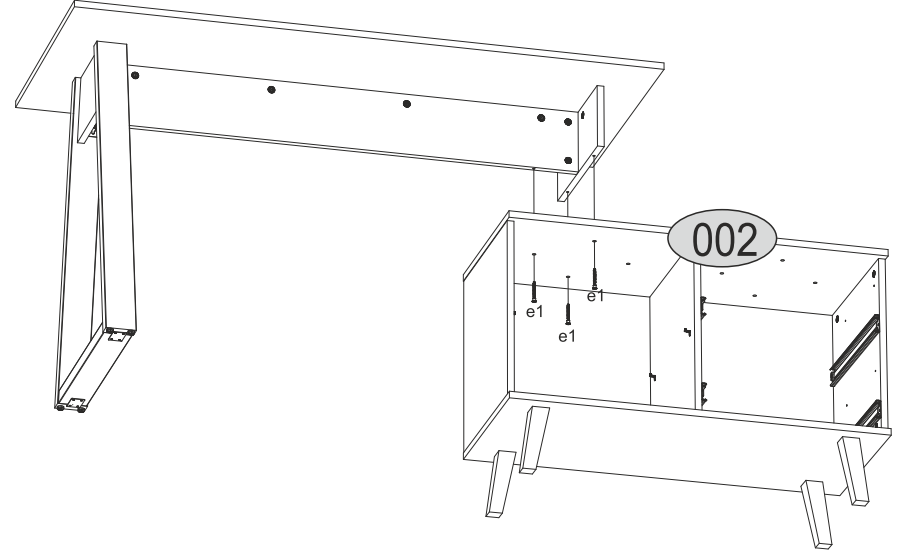

4

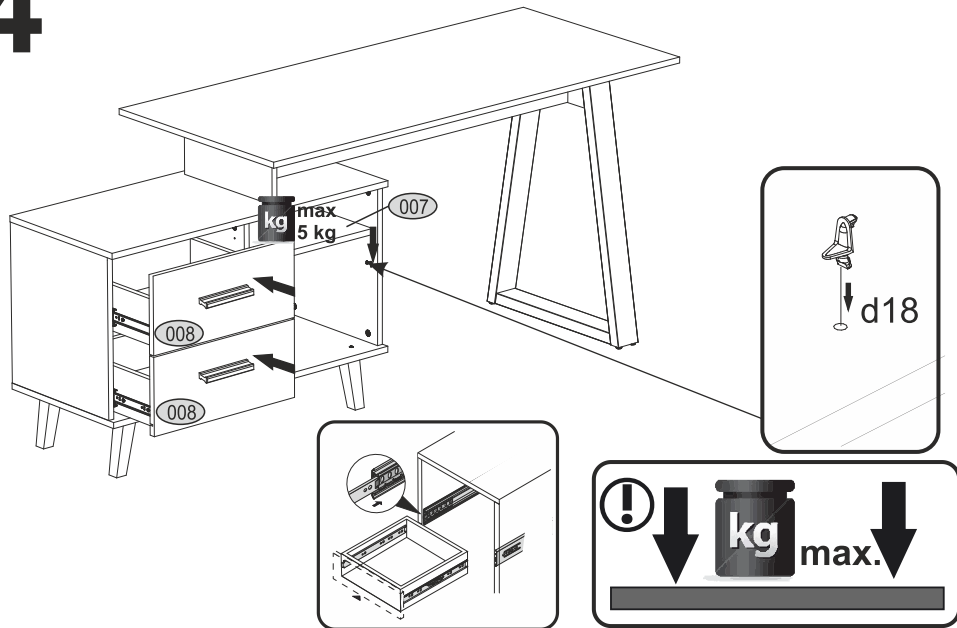

4

